

StorageTek SL8500

User Guide

E20869-07

February 2014

Copyright © 2013, 2014, Oracle and/or its affiliates. All rights reserved.

This software and related documentation are provided under a license agreement containing restrictions on use and disclosure and are protected by intellectual property laws. Except as expressly permitted in your license agreement or allowed by law, you may not use, copy, reproduce, translate, broadcast, modify, license, transmit, distribute, exhibit, perform, publish, or display any part, in any form, or by any means. Reverse engineering, disassembly, or decompilation of this software, unless required by law for interoperability, is prohibited.

The information contained herein is subject to change without notice and is not warranted to be error-free. If you find any errors, please report them to us in writing.

If this is software or related documentation that is delivered to the U.S. Government or anyone licensing it on behalf of the U.S. Government, the following notice is applicable:

U.S. GOVERNMENT END USERS: Oracle programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, delivered to U.S. Government end users are "commercial computer software" pursuant to the applicable Federal Acquisition Regulation and agency-specific supplemental regulations. As such, use, duplication, disclosure, modification, and adaptation of the programs, including any operating system, integrated software, any programs installed on the hardware, and/or documentation, shall be subject to license terms and license restrictions applicable to the programs. No other rights are granted to the U.S. Government.

This software or hardware is developed for general use in a variety of information management applications. It is not developed or intended for use in any inherently dangerous applications, including applications that may create a risk of personal injury. If you use this software or hardware in dangerous applications, then you shall be responsible to take all appropriate fail-safe, backup, redundancy, and other measures to ensure its safe use. Oracle Corporation and its affiliates disclaim any liability for any damages caused by use of this software or hardware in dangerous applications.

Oracle and Java are registered trademarks of Oracle and/or its affiliates. Other names may be trademarks of their respective owners.

Intel and Intel Xeon are trademarks or registered trademarks of Intel Corporation. All SPARC trademarks are used under license and are trademarks or registered trademarks of SPARC International, Inc. AMD, Opteron, the AMD logo, and the AMD Opteron logo are trademarks or registered trademarks of Advanced Micro Devices. UNIX is a registered trademark of The Open Group.

This software or hardware and documentation may provide access to or information on content, products, and services from third parties. Oracle Corporation and its affiliates are not responsible for and expressly disclaim all warranties of any kind with respect to third-party content, products, and services. Oracle Corporation and its affiliates will not be responsible for any loss, costs, or damages incurred due to your access to or use of third-party content, products, or services.

Contents

Preface	xiii
Documentation Accessibility	xiii
Conventions	xiii
Summary of Changes	xv
1 Introduction	
2 StorageTek Library Console	
SLConsole Modes	2-1
Download the SLConsole Media Pack	2-1
SLConsole Screen Display	2-2
Modifying the Screen Layout	2-3
Synchronizing the Display with the Controller Database	2-3
Library Configuration Updates	2-3
SLConsole Help	2-3
SLConsole Reports	2-3
Report Types	2-4
User Management	2-4
User IDs	2-4
Passwords	2-4
Change a User Password	2-4
SLConsole Login	2-5
Automatic Logout	2-5
SLConsole Logoff	2-5
Web-launched SLConsole	2-5
Security Considerations	2-5
Client Requirements	2-5
Log in to the Web-launched SLConsole	2-6
Log in to the Web-launched SLConsole Using an Icon	2-7
Standalone SLConsole	2-7
Security Considerations	2-7
Installation Requirements	2-7
Install the Standalone SLConsole	2-7
Log in to the Standalone SLConsole	2-8

Local Operator Panel	2-8
Virtual Keypad	2-8
Log in to the Local Operator Panel.....	2-8
Touch Screen Calibration	2-9
Re-calibrate the Local Operator Panel	2-9
Reset the Local Operator Panel Calibration	2-9
3 Hardware Activation Files	
Oracle Hardware Activation Files	3-1
Legacy Hardware Activation Files	3-1
Hardware Activation File Installation Overview.....	3-1
Download a New Hardware Activation File.....	3-2
Install a New Hardware Activation File on the Target Library	3-2
Delete a Hardware Activation File.....	3-3
Display Current Hardware Activation Files	3-3
Display the Feature Audit Log.....	3-3
4 Capacity Activation	
Configuring Active Capacity	4-1
Default Configuration	4-1
Customized Configuration	4-1
Guidelines for Customized Activation	4-1
Activating Capacity in Non-partitioned Libraries.....	4-2
Activating Capacity in HLI Hosted Libraries	4-2
SLConsole Capacity Icons	4-2
Capacity Activation using SLConsole.....	4-2
Active Cell Configuration - Single Library.....	4-3
Design the Active Cells Configuration	4-3
Display Active Cells Report	4-3
Active Cell Configuration - Library Complex	4-3
Design the Active Cells Configuration	4-4
5 Library Partitioning	
Activated Capacity and Partitions.....	5-1
Hosts and Partitions.....	5-2
Shared Resources - CAPs	5-2
Planning and Preparations	5-2
Verifying the Physical Configuration of a Partition.....	5-2
Resolving Orphaned Cartridges	5-3
Maximizing Library Performance	5-3
Library Partitioning	5-3
Instructions Tab - Prepare for Partitioning	5-3
Summary Tab - Add or Delete Partition Definitions	5-4
Add a Partition Definition	5-4
Delete a Partition Definition.....	5-4
Design Tab - Allocate and Verify Resources in Partitions	5-5

Commit Tab - Commit Partitioning Changes	5-6
Reports Tab - Single Library Only - Generate Partitioning Reports.....	5-6
CAP Operation - Override a CAP Reservation.....	5-6

6 Redundant Electronics

Requirements	6-1
Redundant Electronics Overview	6-1
Automatic Failover	6-2
Manual Failover	6-2
Connections.....	6-2
Firmware Upgrades	6-2
Controller Card Status.....	6-3
LEDs	6-3
SLConsole Status	6-3
Display Redundant Electronics Information.....	6-3
Manual Redundant Electronics Switch.....	6-4

7 Library Management

Library and Device Status Overview	7-1
Health Status of a Device	7-1
Communication Status	7-1
Health Status of the Library.....	7-2
Upgrade Library Firmware.....	7-2
Download Code to the Library Controller	7-2
Activate Code on the Library Controller	7-3
Display Library Information.....	7-3
Display Library Status.....	7-3
Display Library Properties.....	7-4
Library Reports.....	7-4
Search a Library Report.....	7-4
Save Library Report Data to a File.....	7-4
Display Library Events Statistics	7-4
Display Library Power Supply Information	7-5
Generate Library Diagnostic Files	7-5
Transfer the Library MIB File	7-5
Generate and Transfer the Library Log Snapshot File.....	7-5
Clear Library Status Alerts	7-6
Perform a Library Self-Test	7-6
Reboot the Library	7-7
Place the Library Online or Offline.....	7-7
Place the Library Offline	7-7
Bring the Library Online	7-8
Bring the Drives Online.....	7-8
Audits	7-8
Physical Audit	7-9
Audit the Entire Library.....	7-9

Audit a Range of Cells.....	7-9
Verified Audit.....	7-10

8 CAP Management

CAP Modes	8-1
Recommendations for CAP Use	8-2
Maximizing Library Performance	8-2
Display CAP Information.....	8-2
Change CAP Online/Offline Status	8-2
Lock/Unlock a CAP	8-3
Perform CAP Self-test	8-3

9 Drive Management

Maximizing Library Performance.....	9-1
Drive Cleaning	9-1
Host-Managed Drive Cleaning	9-2
Display Drive Information.....	9-2
Display the Drive and Drive Media Reports.....	9-3
Configure the Drive Tray Serial Numbers.....	9-3
Change a Drive Online/Offline Status	9-4
Perform a Drive Self Test	9-4

10 Cartridge Management

Cartridge Types	10-1
Cartridge Labels	10-1
Maximizing Library Performance.....	10-2
Display Cartridge Information.....	10-2
Locating Cartridges	10-2
Locate a Cartridge by vol-id	10-2
Locate a Cartridge by Address.....	10-3
Moving Cartridges (Recovery Moves).....	10-3
Move a Cartridge by Vol-id or Specified Location.....	10-3
Entering Cartridges	10-4
Ejecting Cartridges.....	10-5
Import/Export Diagnostic Cartridges	10-6
Import Diagnostic Cartridges.....	10-6
Export Diagnostic Cartridges.....	10-6
Cartridge Handling.....	10-7
Inspecting a Cartridge	10-7
Cleaning the Cartridge Exterior.....	10-7
Storing Cartridges	10-8

11 Media Validation

Drive Pool	11-1
Validation Types	11-1
Stopping Validation	11-2

Media Validation Tasks	11-2
Slot Selection Tab - Add or Remove Drives from Media Validation Drive Pool.....	11-2
Add Drives to the Pool.....	11-2
Remove Drives from the Pool	11-3
Media Validation Tab - Perform Cartridge Validation	11-4
Validate a Cartridge.....	11-4
Stop a Validation in Progress	11-4
 12 Robot and Safety Door Management	
Safety Door Overview	12-1
Display Safety Door Information	12-1
HandBots Overview	12-1
Fast Load Feature	12-2
Robot Initialization	12-2
Display Robot Information	12-2
Change Robot Online/Offline Status	12-2
Perform a Robot Self-Test	12-3
Robot Diagnostic Moves	12-3
Define a Diagnostic Move.....	12-4
Manage Diagnostic Move Definitions.....	12-5
Save a Diagnostic Move	12-5
Start a Diagnostic Move	12-5
Monitor and Control Open Diagnostic Moves	12-6
 13 Elevators and Pass-Thru Ports	
Maximizing Library Performance	13-1
PTP Installation	13-1
Display Elevator Information	13-2
Display Pass-Thru Port Information	13-2
 14 SLConsole Diagnostics and Utilities	
Library and Device Self-tests	14-1
Diagnostic Support Information	14-1
Troubleshooting	14-2
Library Events	14-3
Event Monitors	14-3
Event Codes Reference	14-3
Activity Code.....	14-3
Result Code	14-4
Severity	14-4
Request Identifier.....	14-5
Create an Event Monitor	14-5
Display an Event Monitor.....	14-5
Spool Event Monitor Data to a File	14-5
Display Multiple Monitors	14-5
Display Device Status or Result Code	14-6

15 Manual Operation

Modes of Operation	15-1
Safety Precautions when Entering the Library.....	15-1
Emergency Robotics Stop Switch.....	15-2
Moving a Robot	15-2
Entering or Exiting the Library	15-3
Enter the Library	15-3
Exit the Library	15-4
Powering the Library On or Off	15-4
Power Off the Library.....	15-4
Power On the Library	15-5
Manual Mount and Dismount Operations	15-5
Manually Mount a Cartridge in a Drive	15-5
Dismount a Cartridge from a Drive	15-6
Service Safety Door Operation	15-6
Left Maintenance Area	15-6
Right Maintenance Area.....	15-6

A Command Line Interface Reference

audit	A-1
capCommand.....	A-3
cleaning	A-3
config	A-6
date	A-7
drive	A-7
hwActivation	A-8
mediaValidation	A-8
network.....	A-9
partition	A-11
reControl	A-11
snmp.....	A-12
ssh.....	A-12
time.....	A-12
traceRoute	A-12
version	A-13
whereAmi.....	A-13

B Library Addressing

Structural Elements	B-1
Library Walls, Arrays, and Slots	B-1
Library Storage Module (LSM)	B-1
Library Complex HLI Numbering	B-1
Panels and Columns	B-2
Internal Firmware Addressing Scheme	B-3
HLI-PRC	B-4
Comparison of the Addressing Schemes.....	B-6

Tape Drive Addresses	B-6
Hardware Address.....	B-6
Internal Firmware Address	B-6
HLI-PRC Address	B-7
Drive Numbering Comparison	B-8
Internal Firmware Addresses of a Component	B-9
Cartridge Access Ports	B-9
Pass-thru Mechanisms.....	B-9
Elevators	B-9
HandBots	B-10

C Controlling Contaminants

Environmental Contaminants.....	C-1
Required Air Quality Levels	C-1
Contaminant Properties and Sources	C-2
Operator Activity	C-3
Hardware Movement	C-3
Outside Air.....	C-3
Stored Items	C-3
Outside Influences	C-3
Cleaning Activity	C-3
Contaminant Effects	C-4
Physical Interference.....	C-4
Corrosive Failure.....	C-4
Shorts	C-4
Thermal Failure	C-4
Room Conditions.....	C-4
Exposure Points	C-6
Filtration.....	C-6
Positive Pressurization and Ventilation	C-7
Cleaning Procedures and Equipment.....	C-8
Daily Tasks	C-8
Weekly Tasks	C-8
Quarterly Tasks	C-9
Biennial Tasks	C-9
Activity and Processes	C-10

Glossary

Index

List of Figures

2-1	SLConsole Screen Layout	2-2
15-1	Emergency Robotic Stop Switch	15-2
15-2	Moving the HandBot	15-3
15-3	AC PDU	15-5
B-1	Pass-thru Port Planning Example.....	B-2
B-2	Internal Firmware Addressing Scheme	B-4
B-3	HLI-PRC Addressing Scheme	B-5
B-4	Physical Hardware Numbering of Tape Drive (viewed from rear of library).....	B-6
B-5	Tape Drive Internal Firmware Addressing (viewed from front of library)	B-7
B-6	Tape Drive HLI-PRC Addressing (viewed from front of library)	B-8
B-7	Comparison (viewed from front of library)	B-8

List of Tables

2-1	Virtual Keypad Buttons	2-8
4-1	Single Library Capacity Icons	4-2
4-2	Library Complex Capacity Icons	4-2
6-1	LED Status Indicators.....	6-3
6-2	SLConsole Controller Card Statuses	6-3
7-1	Status Indicators.....	7-1
11-1	Media Validation Types.....	11-2
11-2	Status Indicators for Drive Slots	11-3
12-1	Diagnostic Moves Options	12-5
12-2	Status Indicators for Moves.....	12-6
14-1	Controls for Displaying Multiple Monitors	14-5
B-1	Panel Numbering.....	B-5
B-2	Comparison of Addressing Schemes	B-6
C-1	Filtration Percentages.....	C-7
C-2	Cleaning Schedule for Data Center	C-8

Preface

This document is intended for technical personnel using the SL8500 library, including administrators and operators. This document assumes the reader is already familiar with the SL8500 library modules and components. For introductory and planning information, see the *SL8500 Systems Assurance Guide* on OTN at:

<http://www.oracle.com/technetwork/documentation/tape-storage-curr-187744.html>

Documentation Accessibility

For information about Oracle's commitment to accessibility, visit the Oracle Accessibility Program website at

<http://www.oracle.com/pls/topic/lookup?ctx=acc&id=docacc>.

Access to Oracle Support

Oracle customers have access to electronic support through My Oracle Support. For information, visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=info> or visit <http://www.oracle.com/pls/topic/lookup?ctx=acc&id=trs> if you are hearing impaired.

Conventions

The following text conventions are used in this document:

Convention	Meaning
boldface	Boldface type indicates graphical user interface elements associated with an action, or terms defined in text or the glossary.
<i>italic</i>	Italic type indicates book titles, emphasis, or placeholder variables for which you supply particular values.
monospace	Monospace type indicates commands within a paragraph, URLs, code in examples, text that appears on the screen, or text that you enter.

Summary of Changes

February 2014

Updated list of supported operating systems for SLConsole.

October 2013

Updates for version FRS_8.31 and SLConsole 6.25 include:

- Support for T10000D drives.
- Media validation (see [Chapter 11, "Media Validation"](#))
- Partitioning in a library complex (see [Chapter 5, "Library Partitioning"](#))
- Added CLI commands (see [Appendix A, "Command Line Interface Reference"](#)).

Introduction

Oracle's StorageTek SL8500 Modular Library System is an enterprise storage solution that provides fully automated tape-cartridge storage and retrieval. This document provides library and device management guidelines, and detailed instructions on using StorageTek Library Console (SLConsole).

Not all features described in this document are available on libraries running earlier firmware versions. For a description of features available with a particular firmware release, refer to the firmware release notes or contact an Oracle representative.

For more information related to the SL8500 library, see the following documents on the Oracle Technical Network (OTN) at:

<http://www.oracle.com/technetwork/documentation/tape-storage-curr-187744.html>

- *SL8500 Systems Assurance Guide* - overview of the library and installation planning guide
- *SL8500 Host Connectivity Guide* - networking information on Dual TCP/IP, Multi TCP/IP, redundant electronics, and partitioning
- *SL8500 SNMP Reference Guide* - SNMP information
- Library management software documentation:
 - *ACSLs Administrator's Guide*
 - *ELS System Programmer's Guide*

StorageTek Library Console

Oracle's StorageTek Library Console (SLConsole) is a Java-based software application that provides a graphical user interface (GUI) for monitoring and managing the SL8500 library. You can perform the following activities with the SLConsole:

- View and modify status and properties of the library and associated devices (drives, CAP, robot, and elevators)
- Perform an audit, self-test, or diagnostic move
- Locate or move a cartridge
- Display library logs, status messages, error explanations, context-sensitive help
- Download new library firmware while the library is in operation

SLConsole Modes

Throughout this document you can perform the procedures using any SLConsole mode, unless otherwise noted.

- "Local Operator Panel" on page 2-8
- "Web-launched SLConsole" on page 2-5
- "Standalone SLConsole" on page 2-7

Download the SLConsole Media Pack


The Media Pack includes the web-launched SLConsole server, web-launched SLConsole client, and the standalone SLConsole.

1. Go to the Oracle Software Delivery Cloud at:
<http://edelivery.oracle.com/>
2. Click **Sign In/Register**. Sign in or register.
3. On the Terms & Restrictions screen, read the License Agreement and Export Restrictions, and select the check boxes to indicate your acceptance. Click **Continue**.
4. On the Media Pack Search screen:
 - a. In the Select a Product Pack list, select **Oracle StorageTek Products**.
 - b. In the Platform list, select **Generic Platform**.
 - c. Click **Go**.

5. Select the SLConsole version to download, click **Continue**.
6. To review the download instructions, click **Readme**. Optionally, use the **View Digest** button to verify the MD5 and SHA-1 digests of the download files.
7. Verify the SLConsole version is correct, click **Download**.
8. Save the file.
9. Extract the media pack to the desired location.

SLConsole Screen Display

Figure 2-1 SLConsole Screen Layout

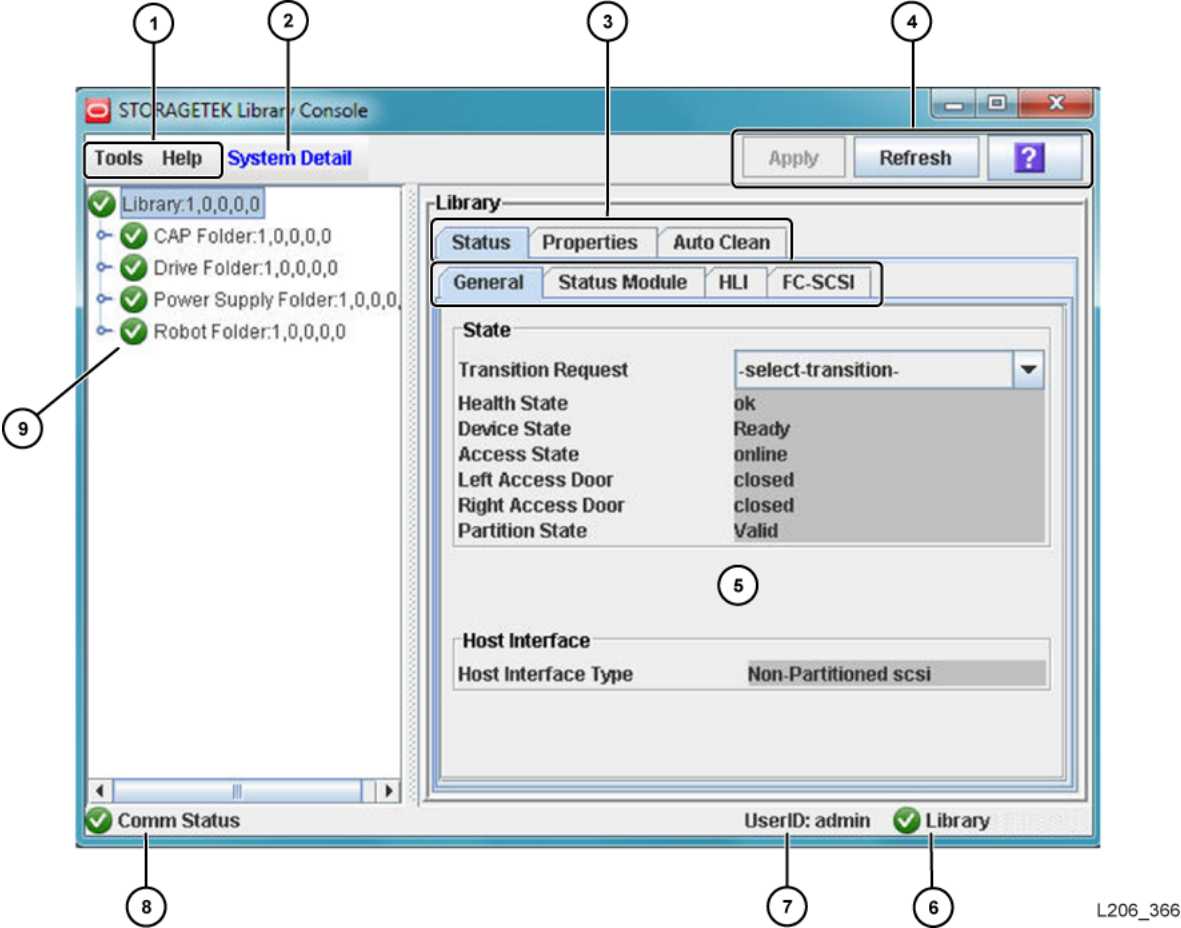

Callout	Component Name	Description
1	Menu bar — includes the Tools Menu and the Help Menu	Tools — access to the SLConsole utilities Help — access to the help system and identifies the SLConsole version
2	Title bar	Displays the title of the current screen or utility.
3	Function tabs	Identifies the available functions for a screen.
4	Options bar	Contains buttons related to the active utility. Always includes the Help button (?).
5	Work area	Location of the screen data.

Callout	Component Name	Description
6	Library health indicator	Identifies the library connected to SLConsole, and displays library health.
7	UserID indicator	Displays the user ID currently logged in to SLConsole.
8	Server communication health indicator	Displays a graphical heartbeat monitor indicating the state of server communication health.
9	Navigation tree	Lists the devices included in the library.

Modifying the Screen Layout

- To sort a column: Click the heading of the column. The initial sort is in ascending order. Click the heading again to switch between ascending and descending order.
- To arrange the columns: Click and drag a column heading horizontally to any position in the heading row.
- To resize the columns: Click the border of the column heading and drag it left or right to change the column width.

Synchronizing the Display with the Controller Database

SLConsole receives library configuration data from the library controller. Configuration data may be unavailable if you log in to SLConsole before the library is fully initialized. Exit and log in again after initialization. Additionally, configuration data displayed during an audit may not be accurate until the audit completes.

Library Configuration Updates

SLConsole displays the most recently saved data from the library controller database. When the configuration changes (such as a drive is taken offline, or cartridges are added/removed), synchronize SLConsole by clicking the **Refresh** button.

Multiple users can access the library simultaneously. Coordinate with other library users when making major modifications to the configuration (such as adding modules, defining partitions, and so on) to prevent conflicts.

In SLConsole, no changes are made to the library controller database until you click the **Apply** button.

SLConsole Help

The SLConsole help displays information about SLConsole utility.

- To display context-sensitive help for the current SLConsole screen, click the **?** button in the Options bar.
- To display general help information, click **Help > Contents** in the Menu bar.

SLConsole help uses JavaHelp. For information about the JavaHelp interface, see: <http://docs.oracle.com/cd/E19253-01/819-0913/>

SLConsole Reports

SLConsole reports provide information on the library and its associated devices, events, and tape cartridges. You can use the reports to monitor library activity and identify potential problems. See "[Library Reports](#)" on page 7-4 for report procedures.

Note: Running multiple instances of SLConsole on the same workstation can cause inconsistent data on reports. Only one user per workstation should produce SLConsole reports, unless all instances of the SLConsole are the same version.

Report Types

- **Log:** Detailed system event logs
- **Statistics:** Statistical information on library operations
- **Status Detail:** Details on the status of the library and associated devices, such as CAPs, drives, and robots
- **Status Summary:** Summary information on the status of the library and devices
- **Version:** Details about library hardware and software versions

User Management

To access SLConsole you must have a valid user ID and password. Only one user at a time can log in to the local operator panel, but any number of users can log in to the standalone or web-launched SLConsole.

User IDs

The user ID controls user authorization. Each user ID is assigned a set of permissions, which determines access to utilities within SLConsole. There are a fixed set of user IDs at each site:

- **admin:** customer administrator
- **service:** Oracle support representative
- **oem:** third-party field service technician

Passwords

The library administrator must activate the **admin** user ID with the first 8 characters of a one-time use activation password provided by an Oracle support representative. After logging in with the activation password, the administrator should change the **admin** user ID password to ensure system security.

For details about this process, Oracle representatives can refer to the *SL8500 Installation Guide*.

Change a User Password

1. Log in to the SLConsole using the account you want to modify.
2. Select **Tools > User Mgmt**
3. On the navigation tree, expand the **Permanent** folder. Select the current user account
4. Complete the following fields: **Current Password**, **New Password**, and **Retype Password**.
5. Click **Modify**.

SLConsole Login

When you log into SLConsole you must provide.

- **User ID:** *SLC_login*. SLConsole user ID.
- **Password:** *password*. Password assigned to this user ID. (Beginning with SLConsole 4.50 password must be between 5-8 characters.)
- **Library:** *library_ID*. Either the IP address or DNS alias of the library to which to connect.

Automatic Logout

After six hours (default), the SLConsole session will expire. The system allows four attempts to log back in, then logs the user ID out. To log in, return to the main login screen.

SLConsole Logoff

Before you log off, make sure all operations for the current SLConsole session have completed (for example, code loads, audits, diagnostic moves).

1. Select **Tools > Log Off**.
2. Click **OK**.
3. Click **Exit** to close the SLConsole.

Web-launched SLConsole

The web-launched version enables SLConsole to be installed on a centralized Web server. Then, individual clients can use a web-browser to download the web-launched SLConsole.

To install the web-launch version on a server, download the web-launch SLConsole server (**.war**) file from the Oracle Software Delivery Cloud (see "[Download the SLConsole Media Pack](#)" on page 2-1). Deploy the file on the web-server of your choice. The web-launched SLConsole is delivered to clients as a Java Web Start process, which executes outside the browser.

You only have to install updates to the web-launched SLConsole on the centralized web-server. You can update the web-launched SLConsole server while it is running. After the updates are installed on the server, they are downloaded automatically to all clients whenever the application is started.

Security Considerations

The web-launched SLConsole software is digitally signed, which guarantees that it has been issued by Oracle Corporation and has not been altered or corrupted since it was created. As a Java Web Start process, the web-launched SLConsole includes the security features provided by the Java 2 platform.

The customer is responsible for implementing all appropriate additional security systems, including firewalls, user access, and so on.

Client Requirements

Qualified Platforms

- Internet Explorer 8 (on Windows 7: 64 bit)

- Firefox 17.0.2 ESR (on Windows 7: 64bit)

Other

- Java 1.5 Plug-in (browser should install this automatically)
- Ethernet connection to the library
- Ethernet connection to the Web-launched SLConsole server

Log in to the Web-launched SLConsole

To log in using a web-browser, download a recent version of the Firefox web-browser from <http://www.mozilla.com>. On Solaris platforms, you can also log in to the web-launched SLConsole using the command line.

1. Obtain the DNS alias or IP address of the SLConsole server. See your library administrator for assistance.
2. Choose a login method:
 - **Command line:** Available on Solaris only. In the terminal window, enter:
`javaws http://server_ID:port_ID/opel/slc.jnlp`
 - **Web browser:** Available on either Windows or Solaris. In a web-browser on the client workstation go to the SLConsole Web Start application:

`http://server_ID:port_ID/opel`

where:

- *server_ID*: Either the IP address or DNS alias of the SLConsole server
 - *port_ID*: Port ID of the SLConsole application, typically **8080**
 - **opel**: The name (context root) of the Web-launched SLConsole application on the server.
3. Click **Launch Now**.
 4. Complete the Opening slc.jnlp dialog box:
 - a. Specify the action to take with the **slc.jnlp** file:
Select **Open with Java(TM) Web Start Launcher** to start the SLConsole directly.
Select **Save to Disk** to save the slc.jnlp file to your client and log in to the SLConsole later (see "[Log in to the Web-launched SLConsole Using an Icon](#)" on page 2-7).
 - b. Optionally, select **Do this automatically for files like this from now on**.
 - c. Click **OK**.
 5. If this is your first time running the web-launched SLConsole, complete the digital signature warning dialog box:
 - a. Verify the Publisher.
 - b. Optionally, select **Always trust content from the publisher**.
 - c. Click **Run**.
 6. Enter your SLConsole login information, and click **Log on**.

Log in to the Web-launched SLConsole Using an Icon

You must first save the web-launched SLConsole **slc.jnlp** file to your client (see ["Log in to the Web-launched SLConsole"](#) on page 2-6).

1. Double-click the slc.jnlp desktop icon on your client.
2. Click **Launch Now**.
3. If this is your first time running the web-launched SLConsole, complete the security warning dialog box:
 - a. Verify the publisher is Oracle Corporation.
 - b. Optionally, select **Always trust content from the publisher**.
 - c. Click **Run**.
4. Enter your login information, and click **Log on**.

Standalone SLConsole

The standalone version runs SLConsole remotely from any workstation with a network connection to the library.

You must deinstall the previous version before installing a new version of the standalone SLConsole. Running multiple versions of SLConsole on the same workstation can cause inconsistent data.

Security Considerations

The SLConsole application interfaces with the primary library interface (PLI) over a secure sockets layer (SSL). SSL provides a secure communication path between the library and the customer's SLConsole session. This security prevents an unauthorized network user from monitoring library activity.

Installation Requirements

Qualified Platforms

- Solaris 10 SPARC, Solaris 10 x86
- Windows Server 2008 SP2: 64bit, Windows 2012 Enterprise Server
- Windows 7 SP1: 64bit, Windows 8 64bit, Windows 8.1 64 bit
- Oracle Unbrakable Linux 5 (2.6.18) 32 bit
- SUSE Enterprise Linux 10.2 (2.6.16) 32 bit

Other

- Ethernet connection to the library

Install the Standalone SLConsole

De-install any older versions of SLConsole before installing an update.

1. Download and extract the standalone SLConsole media pack (see ["Download the SLConsole Media Pack"](#) on page 2-1).
2. Select the SLConsole installer file for your operating system (refer to the media pack readme).
3. Review the information. Click **Next**.

4. Specify where to install the SLConsole program. Click **Next**.
5. Specify where to create the SLConsole shortcut icons. Click **Next**.

Note: On Solaris, you must choose something other than the default root directory. It is recommended you choose `/u-sr/bin` or a similar location.

6. Verify the information is correct. Click **Install**.
7. Click **Done**.

Log in to the Standalone SLConsole

1. To start the SLConsole application on your client workstation either:
 - Double-click the **SLConsole** icon on the desktop.
 - Select **Start > RunSLConsole** or **Launch > RunSLConsole**.
2. Enter your login information, and click **Log on**.

Local Operator Panel

The local operator panel is a touch screen interface built in to the Customer Interface Module. It enables you to run most of the SLConsole application directly at the library. LEDs located directly below the local operator panel provide status information:

- Library Active: Library processor is working.
- Wait: Library firmware is loading.
- Service Required: Library is rebooting.

Virtual Keypad

For screen fields that require a text entry, click the keyboard icon to display the virtual keypad. Invalid characters are grayed out.

Table 2–1 Virtual Keypad Buttons

Button	Function
Insert	If highlighted, inserts text at the cursor position. If not highlighted, replaces text to the right of the cursor.
Home	Places cursor at the beginning of the field.
Del	Deletes character to the right of the cursor.
End	Places cursor at the end of the field.
Back	Deletes character to the left of the cursor
Clear	Clears the entire field
Left	Moves cursor one character to the left
Right	Moves cursor one character to the right

Log in to the Local Operator Panel

Only one user at a time can log in to the local operator panel.

1. If the screen is blank, touch the screen anywhere to activate the Login screen.
2. Use the virtual keypad to enter your login information.
3. Click **Log on**.

Touch Screen Calibration

Alignment of the local operator panel touch screen is calibrated at the factory. If the touch screen becomes mis-alignment, re-calibrate or reset the touch screen.

- If you have a Linux-based local operator panel, you can re-calibrate it yourself or reset it to factory setting with the procedures below.
- If you have a Windows-based local operator panel, contact your Oracle support representative.

Re-calibrate the Local Operator Panel

For an accurate calibration, make sure there is no debris on the touch screen.

1. Log in to the local operator panel.
2. Select **Tools > Calibrate**.
3. Tap **Calibrate**.
4. Gently tap in the center of each target with your finger or a pointing stylus.
5. To save the new settings:
 - a. Tap the **Click Me** buttons within the indicated time period.
If the buttons do not depress, the touch screen is not properly aligned. Discard the new settings, see Step 6.
 - b. Click **OK** to save the new settings.
6. To discard the new settings:
 - a. Let the timer run out without tapping the **Click Me** button.
 - b. Return to Step 4 and re-calibrate.

The local operator panel reboots automatically after an unsuccessful second calibration and restores the previously saved alignment.

Reset the Local Operator Panel Calibration

To restore the alignment to the factory settings:

1. Log in to the local operator panel.
2. Select **Tools > Calibrate**.
3. Click **Reset Calibration**. The local operator panel reboots.

Hardware Activation Files

The hardware activation utility enables you to activate and monitor optional features on the SL8500 library. Some library features are activated by the customer, while others must be installed and enabled by an Oracle support representative. Features you can activate include capacity upgrades, dual TCP/IP, redundant electronics, and partitioning.

- ["Oracle Hardware Activation Files"](#) on page 3-1
- ["Hardware Activation File Installation Overview"](#) on page 3-1
- ["Download a New Hardware Activation File"](#) on page 3-2
- ["Install a New Hardware Activation File on the Target Library"](#) on page 3-2
- ["Delete a Hardware Activation File"](#) on page 3-3
- ["Display Current Hardware Activation Files"](#) on page 3-3
- ["Display the Feature Audit Log"](#) on page 3-3

Oracle Hardware Activation Files

An Oracle hardware activation file is a digitally signed Java archive (.jar) file containing a feature activation key. You must install one hardware activation file for each feature purchased. Once installed, the feature is added to the features already activated on the library.

As of SL8500 firmware FRS_8.31 and SLConsole 6.25, a single partitioning hardware activation file activates partitioning across an entire library complex.

Legacy Hardware Activation Files

For SL8500 libraries with firmware prior to version FRS_7.00, Oracle support representatives must install hardware activation files. In addition, all purchased features are included in a single hardware activation file. When a new hardware activation file is installed on the library, it replaces older activation files.

After you upgrade a SL8500 library to firmware version FRS_7.00 and above, use the processes described in this chapter to activate any new features.

Hardware Activation File Installation Overview

1. Purchase a feature for an Oracle StorageTek library from Oracle.
2. ["Download a New Hardware Activation File"](#) from the Oracle Software Delivery Cloud and save it to a system accessible to your SLConsole session.

3. "Install a New Hardware Activation File on the Target Library" using SLConsole.
4. Configure the new feature. See:
 - a. [Chapter 4, "Capacity Activation"](#)
 - b. [Chapter 5, "Library Partitioning"](#)
 - c. [Chapter 6, "Redundant Electronics"](#).

Download a New Hardware Activation File

1. Go to the Oracle Software Delivery Cloud at:
<http://edelivery.oracle.com/>
2. Click **Sign In /Register**.
3. On the Terms & Restrictions screen:
 - a. Read the License Agreement and Export Restrictions, and select the check boxes to indicate your acceptance.
 - b. Click **Continue**.
4. On the Media Pack Search screen:
 - a. In the Select a Product Pack list, select **Oracle StorageTek Products**.
 - b. In the Platform list, select **Generic Platform**.
 - c. Click **Go**.
5. Select the SL8500 hardware activation file media pack. Click **Continue**.
6. Verify that you have selected the correct media pack. Click **Download** beside each desired feature.
7. Save the file.
8. Extract the files to a location that you can reach from SLConsole.

Install a New Hardware Activation File on the Target Library

1. Complete the steps in "[Download a New Hardware Activation File](#)" on page 3-2.
2. Use SLConsole to log in to the target library.
3. Select **Tools > Hardware Activation**.
4. Click the **Install Hardware Activation Keys** tab.
5. Enter the full path of the hardware activation file to install, and press **Enter**. Optionally, click **Browse** and navigate to the file location.
6. Review the hardware activation file details. Click **Install**.
7. Click **Yes**, then **OK**.
8. Verify that the activation file has been installed and activated successfully (see "[Display Current Hardware Activation Files](#)" on page 3-3).

Depending on the features activated, you may need to perform additional tasks to use the new features (refer to the feature-specific chapter).

Delete a Hardware Activation File

Deleting a hardware activation file is rarely necessary and can impact library operations. Having extra hardware activation files installed on a library does not present any problems (for example, capacity activation files that exceed the physical capacity of the library). The extra activation files are simply not used.

1. Use the SLConsole to log in to the target library.
2. Click **Tools > Hardware Activation**.
3. Click the **Delete Hardware Activation Files** tab.
4. Click the activation file to delete.
5. Verify the correct activation file is selected, and click **Delete....**
6. Click **Yes**.

Depending on the feature of the hardware activation file, you may need to perform additional tasks after deleting the file (see "[Delete a Partition Definition](#)" on page 5-4).

Display Current Hardware Activation Files

Use SLConsole to display the features currently activated on a target library.

As of SL8500 firmware FRS_8.31 and SLConsole 6.25, all hardware activation files for a library complex are shown on a single screen. There is no need to log in to individual libraries to view hardware activation files for a specific library.

1. Click **Tools > Hardware Activation**
2. Click the **Current Hardware Activation Keys** tab.

Display the Feature Audit Log

The Feature Audit Log displays a list of all feature activation activity for the life of the library. Use this log to verify the features installed on the library.

By default, the report is sorted in chronological order. Optionally, you can change the sort order and rearrange and re-size the columns (see "[Modifying the Screen Layout](#)" on page 2-3 for more information).

1. Select **Tools > Reports**.
2. Expand the **Audit Logs** folder, and then click **Feature Audit Log**.

Capacity Activation

There are two types of capacity:

- **Physical capacity** — the number of physical storage cells in the library.
- **Active capacity** — the number of storage cells activated with a hardware activation file. The active capacity does not have to equal the full number of physical storage cells.

Configuring Active Capacity

The purchased capacity can be activated in a default configuration or a customized configuration. Coordinate with other library users before configuring the library to prevent conflicts.

Default Configuration

For a non-partitioned single library with a single host, the SL8500 library controller can automatically activate the amount of cells you purchased after you reboot the library. As of FRS_8.31, the default configuration activates capacity from the center and works to the end until the capacity license is exhausted.

Customized Configuration

For non-partitioned libraries, see ["Active Cell Configuration - Single Library"](#) on page 4-3 and ["Active Cell Configuration - Library Complex"](#) on page 4-3.

For partitioned libraries, capacity is automatically applied to the entire partition. The total number of storage cells allocated to all library partitions cannot exceed the activated capacity of the library (see ["Library Partitioning"](#) on page 5-1).

Guidelines for Customized Activation

- Select storage resources in the largest blocks possible (rails, library sides, or library walls). Avoid selecting individual drives and storage cell arrays.
- For best access to drives, activate library inner and outer library walls together and activate storage cells that are near the tape drives.
- When rapid import and export of cartridges is a priority, activate storage cells that are near the Cartridge Access Ports (CAPs).

Activating Capacity in Non-partitioned Libraries

In non-partitioned libraries, be careful in changing the active status of cells because this may cause orphaned cartridges. A cartridge becomes orphaned when it is inaccessible to the host. This may occur if you:

- Change the active capacity status of a non-partitioned library
- Manually move a cartridge to an inactive or otherwise inaccessible cell

You must resolve orphaned cartridges. SLConsole warns about orphaned cartridges and provides detailed identifying information. You can then resolve the orphaned cartridges by performing recovery moves on the listed cartridges (see "[Moving Cartridges \(Recovery Moves\)](#)" on page 10-3).

Activating Capacity in HLI Hosted Libraries

When a non-partitioned single library or a library in a complex is attached to an HLI host, the library will temporarily go offline upon reboot and then come back online. While offline, the library stops accepting new incoming host jobs, but will complete the jobs already accepted. There is no need to disconnect and re-connect the HLI host.

The library controller sends an asynchronous message to any host, notifying them that the library configuration has changed. ACSLS hosts must perform an audit of a non-partitioned library to account for the new capacity. Hosts can continue processing jobs while the audit takes place.

SLConsole Capacity Icons

Table 4–1 Single Library Capacity Icons









Icon	Description
 (white rectangle)	Inactive — cell not yet licensed for use
 (white rectangle with triangle)	Active — cell licensed for use
 (purple rectangle)	Selected — cell designated for activation or deactivation
 (dark red rectangle)	No Activation Needed — resource is active by default

Table 4–2 Library Complex Capacity Icons

Icon	Description
 (white rectangle)	Inactive — cell not yet licensed for use
 (red rectangle)	Active — cell licensed for use.
  (black border)	Selected — cell designated for activation or deactivation

Capacity Activation using SLConsole

Capacity changes cannot be performed at the local operator panel.

No changes are committed to the library controller database unless you click **Apply** at the top of the screen and confirm your choice. If you log off the SLConsole session, if

the session times out, or if the connection to the library is lost before you save changes, any changes will be lost. At any time, you can discard changes and restore the last saved configuration by clicking **Refresh**.

Note: Capacity is automatically applied in a partitioned library. You may only apply capacity to a non-partitioned library.

Active Cell Configuration - Single Library

For a single library you can design the active cells configuration or display an active cells report.

Design the Active Cells Configuration

You can either accept the default configuration or choose your own.

1. Select **Tools > Select Active Cells**.
2. Click the **Design By Library** tab.
3. To activate the default configuration and remove drives from the media validation pool, click **Reset Capacity**. Go to Step 6.
To configure a custom capacity design, go to Step 4.
4. To customize the capacity design, choose areas of the library from the menus and click **Add** or **Remove**.
5. When you have completed the configuration, click **Apply User Design**.
6. Click **Yes**. If there are no warnings, click **OK**. Continue to Step 8.
7. If there are warnings, click **Details >>**
If orphaned cartridges are reported, do not continue with this process until you have performed recovery moves on the listed cartridges (see "[Moving Cartridges \(Recovery Moves\)](#)" on page 10-3).
8. Reconfigure library host applications to recognize the changes (see the tape management software documentation).

Display Active Cells Report

These reports only display data saved to the library controller database.

1. Select **Tools > Select Active Cells**, then select the **View Reports** tab.
2. Select a report:
 - **Cartridge and Cell Media Summary** - displays cell addresses and volume serial numbers (volsers) for the media in each partition
 - **Orphaned Cartridge Report** - displays a detailed list of all orphaned cartridges
3. To save a report to a comma-separated value (csv) file, click **Save to File**.

Active Cell Configuration - Library Complex

You can either accept the default configuration or to choose your own.

Design the Active Cells Configuration

1. Select **Tools > Active Cells**.
2. To apply a default capacity configuration and remove drives from the media validation pool, click **Reset Capacity**. Go to Step 5.
To configure a custom capacity design, go to Step 3.
3. To customize capacity, click the areas of the library to remove or add:
 - **Rail x, Right** or **Rail x, Left** buttons to highlight the right or left rails
 - **Outside Wall** to highlight the outside wall of the rail
 - **Inside Wall** to highlight the inside wall of the rail
 - **Full Library** to highlight the full library
4. When you have completed the configuration, click **Apply User Design**.
5. Click **Yes**. If there are no warnings, click **OK**. Continue to Step 7.
6. If there are warnings, click **Details >>**
If orphaned cartridges are reported, do not continue with this process until you have performed recovery moves on the listed cartridges (see "[Moving Cartridges \(Recovery Moves\)](#)" on page 10-3).
7. Reconfigure library host applications to recognize the changes (see the tape management software documentation).

Library Partitioning

Library partitioning reserves library resources (drives and cells) for the exclusive use of specified hosts, and is an optional feature enabled with a hardware activation file (see "[Hardware Activation Files](#)" on page 3-1).

Partitions support non-contiguous resource assignments. However, CAPs are a shared library resource and are not assigned to specific partitions. You can partition a single library or a library complex using SLConsole.

Single Library Partitioning

- Up to eight partitions.
- Smallest slot increment is one array.
- Smallest drive increment is one drive.
- Requires minimum SL8500 firmware 7.01 and SLConsole 5.50.

Library Complex Partitioning

- Up to 16 partitions total, with a maximum of eight per library.
- Smallest slot increment is a quarter rail.
- Smallest drive increment is one drive.
- Partition boundaries can span across pass-thru ports (PTPs).
- Requires minimum SL8500 firmware 8.31 and SLConsole 6.25.
- Requires the following minimum level for library management software:
 - ACSLS 8.3, HSC 6.2: PTF L1H16SG (VM), ELS 7.0: PTF L1H15SI (MVS), ELS 7.1: PTF L1H16SJ, ELS 7.2: integrated

Activated Capacity and Partitions

As you allocate cells to a partition, the library controller automatically activates these cells. The number of cells allocated to each partition is subtracted from the total purchased capacity authorized in the hardware activation files. The total cells allocated to partitions never exceeds the purchased capacity of the library. Therefore, ensure there is enough purchased active capacity for the partitioning design.

For more information about hardware activation files, see [Chapter 3, "Hardware Activation Files"](#).

Hosts and Partitions

A host that has access to a partition is granted use of all available storage cells, cartridges, and drives in that partition. The host has no access to resources that are assigned to other partitions in the library.

Individual ACSLS hosts can control one or more SL8500 library partitions. Individual HSC hosts and groups of up to 16 HSC hosts that share a Common Control Dataset (CDS) can control a single partition.

Resource allocation guidelines:

- Select storage resources in the largest blocks possible (rails, library sides, or library walls). Select complete library rails to minimize the use of elevators. In a library complex, keep a partition contained within a library to minimize the use of PTPs.
- For best access to drives, activate library inner and outer library walls together.
- Avoid selecting individual drives and storage cell arrays. Individually select and deselect resources only when you need to fine-tune a capacity that has already been broadly defined in larger blocks.
- For quicker import/export of cartridges, partition storage cells close to the CAPs. For quicker access to stored data, partition storage cells close to the tape drives.

Shared Resources - CAPs

In a partitioned library, hosts share CAPs. Each host reserves the CAP for exclusive use as needed, then releases the CAP when it is no longer required. A host can reserve a CAP if the CAP is empty, closed, locked, and not already reserved by another partition. CAP auto enter mode is disabled in partitioned libraries, because it interferes with the reservation system. See ["Auto Enter Mode"](#) on page 8-1.

Once the enter/eject operation is complete, the host releases the reservation and makes the CAP available to other host partitions. Then, either the user terminates the HSC or ACSLS enter command or the host automatically terminates the command. The library releases the CAP after verifying that the CAP is closed and empty.

If for any reason a CAP reservation is not released and the enter or eject command cannot be terminated in ACSLS or HSC on the host, a library administrator must override the host partition reservation (see ["CAP Operation - Override a CAP Reservation"](#) on page 5-6 for details).

Planning and Preparations

You should verify minimum firmware and SLConsole requirements for partitioning. Then, configuring and administering ACSLS and HSC host software applications. Before creating a partition, verify the physical configuration and resolve and orphaned cartridges.

Verifying the Physical Configuration of a Partition

Before creating partitions, verify that all tape drives and cartridges have been moved to the proper location. For example, if a partition will be owned by an ACSLS host, only ACSLS-compatible drives can be installed in that partition, and all cartridges containing data for the ACSLS host must be migrated to the partition.

Resolving Orphaned Cartridges

An orphaned cartridge is a cartridge which is inaccessible to a host. Orphaned cartridges can occur when you change the capacity of a partition, delete a partition, or move a cartridge to a cell or drive that is not allocated to a partition.

In a partitioned library, orphaned cartridges can cause data loss. A host that finds an orphaned cartridge in its partition may treat the cartridge as a scratch volume and overwrite the data.

SLConsole will warn you when it identifies orphaned cartridges. Resolve the orphaned cartridges by performing recovery moves on listed cartridges. Recovery moves transfer the orphaned cartridges to accessible locations within their parent partitions. See ["Moving Cartridges \(Recovery Moves\)"](#) on page 10-3.

Maximizing Library Performance

Identifying workloads can improve library performance. Generally, a workload is defined as a group of tape drives and cartridges used for a particular application. To maximize the performance of the SL8500 library:

- Minimize elevator operations between rails within a library and pass-thru operations between libraries. Limit the distance cartridges must travel.
- Minimize contention for library resources between different application requests.
- Configure the library so each workload uses a separate pool of library resources (tape drives, data tapes, scratch tapes, and free cells). Group workload resources as close together to minimize PTP and elevator activity.
- Place applications that require significant enters and ejects on rails adjacent to CAP magazines. Inactive tapes should be placed on the top rail. These tapes are not entered or ejected frequently, and the top rail is not directly adjacent to a CAP magazine.
- Put different types of tape drives on different rails to reduce pass-thru activity.
- Ensure there are enough tape drives and storage cells to support a workload.

Library Partitioning

- ["Instructions Tab - Prepare for Partitioning"](#) on page 5-3
- ["Summary Tab - Add or Delete Partition Definitions"](#) on page 5-4
- ["Design Tab - Allocate and Verify Resources in Partitions"](#) on page 5-5
- ["Commit Tab - Commit Partitioning Changes"](#) on page 5-6
- ["Reports Tab - Single Library Only - Generate Partitioning Reports"](#) on page 5-6

Note: No actual changes to partitioning occur until the design is applied using the **Commit (Step 4)** tab.

Instructions Tab - Prepare for Partitioning

1. Quiesce any host operations.

Host applications such as library management software (ACSLs, ELS) and data management software (backup and archiving applications) should not try to use the library during partitioning.

2. Select **Tools > Partitions**.
3. Review the **Instructions (Step 1)** tab.

Summary Tab - Add or Delete Partition Definitions

Use this procedure to add or delete partition definitions.

Add a Partition Definition

1. Select the **Summary (Step 2)** tab of the partitions interface.
2. On the left side of the screen, note:
 - Total Library Resources (storage cells, drive bays, CAPs and CAP cells and activated capacity)
 - Resources Allocated (assigned to a partition)
 - Resources Unallocated (not assigned to a partition)

If the library has not previously been partitioned, no resources will be allocated and the full capacity will be unallocated.

3. In the Partition Allocation Summary area, click **Add Partition**.
4. Select a partition ID from the menu. Partitions do not have to be selected consecutively. Optionally, enter a partition name.
5. Click **OK**.
6. Repeat steps 3-5 until you have added all required partitions.

Delete a Partition Definition

When you delete a partition:

- All resources allocated to the partition are marked available.
- All host connections for the partition are deleted.
- The partition ID is deleted.

Use this procedure to delete a partition from the library.

1. To prevent orphaned cartridges, move valid data cartridges out of the partition that will be deleted.
2. Select the **Summary (Step 2)** tab of the Partitions interface.
3. In the Partition Allocation Summary area, select the table row of the partition to delete.
4. Click **Delete Partition**.
5. Make sure the partition number is correct. Click **OK**.
6. For a library complex, proceed to step 7. For a single library, click the **Design by Library (Step 3)** tab. Then, click **Verify**.
7. If there are warnings, click **Details >>**

If orphaned cartridges were found, perform recovery moves on all listed volumes. See "[Moving Cartridges \(Recovery Moves\)](#)" on page 10-3. After you have resolved all orphaned cartridges, re-verify the partitioning configuration.
8. If there are no warnings, commit the partition design. See "[Commit Tab - Commit Partitioning Changes](#)" on page 5-6.

Design Tab - Allocate and Verify Resources in Partitions

Single Library

Use this procedure to allocate and verify library resources to partitions in a single library. For a library complex, see ["Library Complex"](#) on page 5-5.

1. Select the **Design by Library (Step 3)** tab of the Partitions interface.
2. Use the list control to select a partition ID.
3. Select the sections of the library to add to the partition using the menus:
 - **All Rails, Rail 1, Rail 2, Rail 3, or Rail 4** — defines the rail of the selection
 - **Left/Right Sides, Left Side, or Right Side** — defines the side of the selection
 - **Inside/Outside Walls, Inside Wall, or Outside Wall** — defines the wall of the selection
4. Click **Add** to allocate the specified resources to the partition. Click **Remove** to un-allocate the resources from the partition.
5. To refine the partition, select **Remove Array** or **Add Array** from the rails menu. Then, click on drive(s) and array(s) to add/remove them from the partition.
6. Repeat steps 2 - 5 for each partition ID.
7. When you complete the partition design, click **Verify**.
8. If there are warnings, click **Details>>**

If orphaned cartridges were found, perform recovery moves on all listed volumes. See ["Moving Cartridges \(Recovery Moves\)"](#) on page 10-3. After you have resolved all orphaned cartridges, re-verify the partitioning configuration.
9. If there are no warnings, see ["Commit Tab - Commit Partitioning Changes"](#) on page 5-6.

Library Complex

Use this procedure to allocate resources to partitions in a library complex. For a single library, see ["Single Library"](#) on page 5-5.

1. Select the **Design (Step 3)** tab of the Partitions interface.
2. Select the radio button of the partition.
3. Select the resources of the library to include in the partition.
 - **Rail 1 Left, Rail 1 Right, Rail 2 Left, and so on** — selects half a rail.
 - **Full Library** — selects the entire library
 - **Outside Wall or Inside Wall** — selects a quarter rail

To un-highlight areas, select any of the above again.
4. Click **Add** to allocate the selected resources to the partition. Click **Delete** to remove the selected resources from the partition.
5. Repeat steps 2-5 for each partition.
6. Commit the partition design. See ["Commit Tab - Commit Partitioning Changes"](#) on page 5-6.

Commit Tab - Commit Partitioning Changes

Use this procedure to apply the partition configuration. No changes are made to the library until you complete these procedures.

1. When all partitions are configured, select the **Commit (Step 4)** tab.
2. Click **Apply**.
3. If there are no warnings, click **OK**. If there are warnings, click **Details >>**.

If orphaned cartridges were found, perform recovery moves on all listed volumes before committing partitioning changes. See "[Moving Cartridges \(Recovery Moves\)](#)" on page 10-3.

Reports Tab - Single Library Only - Generate Partitioning Reports

1. Select the **Reports** tab of the Partitioning interface.
2. Select a type of report from the menu:
 - **Cartridge Cell and Media Summary** — displays cell addresses and volume serial numbers (volsers) for the media in each partition
 - **Orphaned Cartridge Report** — displays cell addresses and volume serial numbers (volsers) for orphaned cartridges
 - **Partition Summary** — displays the resources allocated to each partition
 - **Partition Details** — displays details for a specific partition ID
3. Click **Print** to print a hard copy.
4. Click **Save To File** to create a comma-separated value (csv) file.

CAP Operation - Override a CAP Reservation

If for any reason a CAP reservation by a partition is not released and the enter or eject command cannot be terminated in ACSLS or HSC on the host, use this procedure to override an existing CAP reservation.

Note: You must follow all steps in this procedure, or the CAP could be left unavailable to all partitions.

1. Select **Tools > Diagnostics**.
2. Expand the **CAP** folder. Click the reserved CAP to override.
3. Click the **Unreserve** tab. Note the partition ID for the CAP.
4. Click **Apply** to override the reservation.
5. Select **OK**. The CAP user changes to "default", which makes the CAP unavailable to all partitions.
6. If the CAP is locked, unlock it. See "[Lock/Unlock a CAP](#)" on page 8-3.
7. Open the CAP. Remove any cartridges and label them with the partition ID.
8. Close the CAP. The library verifies the CAP is empty. The CAP status changes to "unreserved", which makes the CAP available to all partitions.
9. Determine if the cartridges should be re-entered into the library and enter the cartridges into the correct partition.

Redundant Electronics

The optional redundant electronics (RE) feature provides failover protection for the library controller. This allows an Oracle support representative to replace a faulty card while the library is online and provides minimal disruption to library operations during firmware upgrades.

Note: Any reference to the HBC card also refers to the HBCR card.

Requirements

- Two library controller (HBC) cards
- Two drive controller (HBT) cards
- Minimum SL8500 firmware version FRS_6.00 and SLConsole version 4.65
- Hardware activation file (see [Chapter 3, "Hardware Activation Files"](#))

Redundant Electronics Overview

If the library controller or drive controller experiences errors, operations can switch to the standby controller, with minimal disruption to library and host operations. The library controller and drive controller installed on the same side of the card cage are always switched as a pair. Failover can be initiated automatically or manually. A failover cannot occur if:

- The standby library or drive controller is in a fault or eject state.
- The standby code is not running on the standby library or drive controller cards.
- A firmware download or card initialization is in progress.

In a failover, the active library controller attempts to complete all in-process jobs and copies the cartridge database to the standby controller card. If the database cannot be copied (usually only in a sudden failure), you must perform an audit after failover completes (see ["Audits"](#) on page 7-8). Any in-transit cartridges are returned to their home slots. If a cartridge cannot be moved to its home slot, it is moved to a library system cell. The host must return the cartridge to its home cell (see the ACSLS and ELS documentation).

After all in-process jobs have completed or timed out, the card roles are switched. Active software is brought up on the standby controller. This controller becomes active and the previously active controller becomes the standby. If the standby software cannot be brought up on the previously active controller, the controller enters a fault state.

Automatic Failover

An automatic failover can be initiated by either the active or standby library controller.

The active library controller initiates an automatic failover when:

- Its partner drive controller card is not installed or it is not communicating.
- It detects a catastrophic internal software error.

The standby library controller initiates an automatic failover if the active controller is not functioning normally.

Manual Failover

Before initiating a manual switch, you should verify that the standby library and drive controllers are running normally. You can initiate a manual switch using:

- **Host tape management** (ACSL or ELS): Failover can be initiated from either the active or standby library controller. The standby library controller accepts only set host path group and force switchover HLI requests.
- **SLConsole**: Failover is initiated from the active library controller only (see ["Manual Redundant Electronics Switch"](#) on page 6-4).
- **CLI**: Failover can be initiated from either the active or standby library controller. This function is available to your Oracle support representative only.

You may want to perform a manual switch after initial installation of the standby cards, after a firmware upgrade, or periodically to check the failover function is working properly. It is not possible to manually switch the library controllers without the drive controllers — the controllers are always switched as a pair.

Connections

Each library controller card requires a unique IP address. For libraries with Dual TCP/IP, each card requires two unique IP addresses: one for the primary port (2B) and one for the secondary (2A) port. A library equipped with both RE and Dual TCP/IP requires four unique IP addresses.

The failover process is minimally disruptive to host operations.

- Users of tape management software (Symantec or Virtual Storage Manager) do not see an interruption.
- HLI host applications (ACSL and ELS) queue requests during the failover process for completion after the failover switch. For ACSLS, only mount and dismount requests are affected (see the ACSLS and ELS documentation).
- SLConsole and CLI connections are terminated. You must re-establish connections to the library using the IP address or DNS alias of the new active library controller (the former standby controller).

Firmware Upgrades

Firmware upgrades for libraries with RE are minimally disruptive to library operations. New code is loaded and unpacked simultaneously on the active and standby controller cards and on all devices. The code is then activated, and the active and standby controllers and most devices are re-initialized. Under most circumstances, robot initialization is bypassed.

The loading, unpacking, and activation of code are not disruptive to library operations until the library is rebooted. During the reboot process (which takes approximately 10 minutes), the HLI host applications (ACSLs and ELS) queue all mount and dismount requests. After the reboot is complete, the queued requests are submitted to the library controller.

See ["Upgrade Library Firmware"](#) on page 7-2 for firmware download and activation information.

Controller Card Status

Controller card status is indicated by LEDs on the card and displayed in SLConsole.

LEDs

The LEDs and meanings are the same on both card types (HBC and HBT).

Table 6–1 LED Status Indicators

LED	Definition
ACTIVE - Green	Card is functioning as the active and is running active code.
STANDBY - Amber	Card is functioning as the standby and is running standby code.
FAULT - Red	Card has experienced a serious error.
EJECT OK - Blue	Support representative can safely initiate a card eject.

SLConsole Status

Some SLConsole screens identify the individual library controller with an A or B suffix. A indicates the left card slot and B indicates the right card slot, as viewed from the back of the library. To display the status the controller cards in SLConsole, see ["Display Redundant Electronics Information"](#) on page 6-3.

Table 6–2 SLConsole Controller Card Statuses

Status	Definition
Duplex: Software ready, switch possible	Active library controller is functioning normally.
Not installed	Card is not installed in the library.
Ok	Active or standby drive controller card is functioning normally.
Pre-standby: Software not ready	Standby library controller card is loading standby code and is not ready to be used in an automatic failover or manual switch.
Standby: Software ready	Standby library controller card is functioning normally and can be used for an automatic failover or manual switch.

Display Redundant Electronics Information

1. Select **Tools > System Detail**.
2. Click the **Redundant Electronics** folder to display summary information.
3. For detailed information about each card, expand the Redundant Electronics folder in the navigation tree.
4. Select a card (see ["SLConsole Status"](#) on page 6-3 for status meanings):

- a. **hbca**: Library controller, A (left) slot
- b. **hbcB**: Library controller, B (right) slot
- c. **hbta**: Drive controller, A (left) slot
- d. **hbtB**: Drive controller, B (right) slot

Manual Redundant Electronics Switch

This procedure is not available at the local operator panel.

1. Verify the device state of the card indicates "switch is possible" (see "[Display Redundant Electronics Information](#)" on page 6-3).
2. Select **Tools > Diagnostics**.
3. Select the **Redundant Electronics** folder
4. Click **Apply** to begin the switch process. If there is a problem with the standby library and drive controller cards, you are not allowed to continue with the switch.
5. If there are no errors, click **Yes**.
6. Click **OK** to log off the SLConsole.
7. Wait until the switch is complete before logging back into the library. You must specify the IP address or DNS alias of the new active controller to log in.




Library Management

- ["Library and Device Status Overview"](#) on page 7-1
- ["Upgrade Library Firmware"](#) on page 7-2
- ["Display Library Information"](#) on page 7-3
- ["Generate Library Diagnostic Files"](#) on page 7-5
- ["Clear Library Status Alerts"](#) on page 7-6
- ["Perform a Library Self-Test"](#) on page 7-6
- ["Reboot the Library"](#) on page 7-7
- ["Place the Library Online or Offline"](#) on page 7-7
- ["Audits"](#) on page 7-8

Library and Device Status Overview

SLConsole shows health status for devices, SLConsole communication, and the library.

Table 7-1 *Status Indicators*

Icon	Meaning
	Normal
	Warning
	Error

Health Status of a Device

Found in navigation tree of System Details and Diagnostics page.

- Normal — library device is functioning normally
- Warning — device is offline or operating in a degraded state
- Error — device has experienced a failure

Communication Status

Found in lower left of all SLConsole screens. Indicates the communication status between SLConsole and the library controller.

- Normal — SLConsole is communicating normally with the library controller

- Warning — server is taking longer than 10 seconds to respond
- Error — server is taking longer than 30 seconds respond

After about 30–60 seconds of lost communication with the library controller, the heartbeat monitor turns gray, then red, and displays:

Heartbeat message not received from the library controller.

Log off the SLConsole and log on again to restore communication.

Health Status of the Library

Found in lower right of all SLConsole screens.

- Normal — all library devices are functioning normally
- Warning — one or more library devices is offline or operating in a degraded state
- Error — one or more library devices has experienced a failure

After a device error is fixed, the library health indicator changes to "Warning". The indicator will not change to "Normal" until the library is taken offline. If there are multiple problems with a device or status alert condition, the health indicator displays the most severe condition.

Upgrade Library Firmware

To upgrade firmware, use the SLConsole code load utility. You cannot perform a code download or activation at the local operator panel.

Library firmware does not contain drive code upgrades (see drive-specific documentation). Firmware upgrades for libraries with the redundant electronics feature are minimally disruptive (see [Chapter 6, "Redundant Electronics"](#)).

Download Code to the Library Controller

1. Locate the firmware upgrade package (.jar file) at: <http://edelivery.oracle.com>
2. Download the code to your workstation.
3. Log in to the SLConsole.

If you are upgrading an SL8500 complex, you can connect to any library in the complex. The upgrade downloads simultaneously to all libraries in the complex from the single SLConsole session.

4. Select **Tools > Diagnostics**, and then click the **Library** folder.
5. Click the **Load Code** tab.
6. Enter the full path of the firmware package to download, and then press **Enter**.
Optionally, click **Browse** and navigate to the file location.
7. Verify the contents and file name. Click **Load**.
8. Click **OK**. The download process could take up to 10 minutes.

Note: Next to the Failed label, you should see "0". If there are any failures indicated, contact your Oracle support representative for assistance.

9. After the code unpacks, activate the code at any time (see ["Activate Code on the Library Controller"](#) on page 7-3).

Activate Code on the Library Controller

The library controller can store up to two versions of firmware, but only one is active. The active version is identified as "running". You can restore the earlier firmware version if required.

A reboot of the library or entire library complex is required. Schedule the code activation accordingly.

1. If you have not done so, download and unpack the code (see ["Download Code to the Library Controller"](#) on page 7-2).
2. Select **Tools > Diagnostics**, and then click the **Library** folder.
3. Click the **Activate Code** tab.
4. In the Target list, select the code package to activate (in this case **SL8500 Code**).
5. In the Available Versions section, select the code version to activate.
6. Click **Activate**.
7. Click **OK** to start activation.

Caution: POTENTIAL INTERNAL FILE CORRUPTION. Do not reboot any devices in the library or execute any operations on the library while activating code.

8. When the activation process finishes, click **OK** to reboot the library.
9. Click **OK** to terminate the SLConsole session.
10. After library initialization completes, log in to SLConsole.

Display Library Information

- ["Display Library Status"](#) on page 7-3
- ["Display Library Properties"](#) on page 7-4
- ["Library Reports"](#) on page 7-4
- ["Display Library Power Supply Information"](#) on page 7-5

Display Library Status

1. Select **Tools > System Detail**, and then click the **Library** folder in the navigation tree.
2. Click the **Status** tab.
3. Select a secondary tab:
 - **General** - displays the current operational state of the library. These values update whenever there is host activity, background operations, or operator activity.
 - **Complex** - displays the current operational state of a library complex.

- **Status Module** - displays library status alerts. This feature is available only if service is active on the library. If service is not active on the library, this screen will be blank except for a message indicating that the "Service activation is not valid". If you see the "warning" status, a failure may occur. Contact a service representative.
- **HLL** - displays the current status of all HLL interface ports on the library. Information includes the local TCP/IP socket, local IP, connection status, port status, and transmission sent and received from the time of connection.
- **Internal Networks** - displays port status

Display Library Properties

1. Select **Tools > System Detail**, and then click the **Library** folder.
2. Click the **Properties** tab.
3. Select a secondary tab:
 - **General** - displays the physical, mechanical, logical, and network configuration of the library. Some of the information can be set up automatically during library initialization, while other information can be defined by the user.
 - **Complex** - displays IP address information for a library complex.
 - **Library Controller** - displays details of the library controller, including the serial number and firmware versions.
 - **Drive Controller** - displays details of the drive controller, including the serial number and current firmware versions.

Library Reports

Use this procedure to display, search, or save library reports available from the **Tools > Reports** menu. Additional reports are available from the **Tools > Partitions** menu.

All report output is a static display of information at the time the report is generated. Click **Update** in the upper right corner to refresh the information.

1. Select **Tools > Reports**.
2. In the navigation tree, expand a report category.
3. Select a report.

Search a Library Report

1. With the report displayed, click **Search**.
2. Enter a text string (case-sensitive and wildcards are invalid). Click **Search**.

Save Library Report Data to a File

1. With the report displayed, click **Save**.
2. Browse to the desired directory, enter a file name, select a format, and click **Save**.

Display Library Events Statistics

The General Events Statistics Report displays summary statistics for library operations. For each event, the report lists the event type, number of occurrences, and the date and time of the most recent occurrence of the event.

To change the sort order of the screen or rearrange and resize the columns, see ["Modifying the Screen Layout"](#) on page 2-3.

1. Select **Tools > Reports**.
2. Expand the **Statistics** folder, and then click **General Events**.

Display Library Power Supply Information

For power configuration information, see the *SL8500 Systems Assurance Guide* "Power" chapter found on OTN.

The Power Supply Data screen displays summary information for all power supplies in the library. Use this screen to monitor the status of the power supplies for maintenance or replacement. By default, the display is sorted by internal address. To change the sort order, and rearrange and resize the columns, see ["Modifying the Screen Layout"](#) on page 2-3.

1. Select **Tools > System Detail**.
2. In the **Library** navigation tree, click the **Power Supply** folder to display summary information.
3. For detailed information, expand the **Power Supply** folder. Select a power supply.

Generate Library Diagnostic Files

These procedures generate files to diagnose library problems.

Transfer the Library MIB File

Use this procedure to transfer the public SNMP management information base (MIB) file to an Oracle support representative.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder in the navigation tree.
3. Click the **TransferFile** tab.
4. Select the Transfer Type of **SNMP MIB**. Click **Transfer File**.
5. Browse to the desired directory, and then enter the file name with a .txt suffix.
6. Click **Save**.
7. E-mail the file to your Oracle support representative.

Generate and Transfer the Library Log Snapshot File

If a support representative requests a library Log Snapshot, use this procedure to generate and transfer the file. The system saves the file in an encrypted format, so you cannot view or edit it. You must save the log within 15 minutes of generation.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder in the navigation tree.
3. Click the **Transfer File** tab.
4. Select the **Log Snapshot** radio button.
5. In the Selected Devices list, select either **All Devices** or **Selected Device**. If you choose Selected Device, select the device.

6. Click **Generate Log Snapshot on Library**.
7. Click **Yes**, and then **OK**.
8. Click **Transfer Log Snapshot To Your Computer**.
9. Browse to the desired directory or enter the directory path. Click **Save**. The file is named automatically.
10. E-mail the file to your Oracle support representative.

Clear Library Status Alerts

You can only clear alerts marked as "Clearable" and only if service is active on the library.

Clearing an alert only removes it from the Status Module display; it does not resolve the underlying cause. The library health indicator returns to "Normal" if there are no other device or status alerts. If the alert is subject to periodic updates, it will reappear at the next update cycle.

1. Select **Tools > System Detail**, and click the **Library** folder.
2. Click the **Status** tab, and then the **Status Module** tab.
3. On the Clear Alert Number list, select the alert number to clear, and then click **Apply**.

Perform a Library Self-Test

The self-test diagnostic can help diagnose library operational problems. A self-test typically runs after the library is installed. You can run library self-test routines in either non-disruptive (cartridges are returned to home cells) or disruptive mode (cartridges may be moved to new cells).

When performing a self-test, the system:

- Checks the communication path between the library controller, drives, elevators, and robots.
- Performs get and put operations to check the health of the robots, elevators, and CAPs. This includes get and put operations from a reserved system cell to a random empty storage cell or CAP cell.
- Performs a full library audit.
- Performs mounts and dismounts of diagnostic cartridges for all the drives installed in the library. The self-test does not begin unless a diagnostic cartridge is found in the system cells. If the system finds a compatible diagnostic cartridge, the self-test repeats for each drive type. If the system does not find a diagnostic cartridge for a drive type, the system skips the mount/dismount operation for the drive.

Note: Before performing a disruptive test, the library must be taken offline. See ["Place the Library Online or Offline"](#) on page 7-7.

1. Make sure the proper drive diagnostic cartridges are in the library (see ["Display Cartridge Information"](#) on page 10-2).
2. Select **Tools > Diagnostics**, and click the **Library** folder.

3. Click the **SelfTest** tab.
4. In the Mode list, select the type of self-test:
 - **Non-Disruptive** - all cartridges used in the test are returned to their original locations
 - **Disruptive** - the library must be taken offline to all hosts before running this test
5. Click **Run**. When the test completes, the results of the test display.
6. For disruptive tests, bring the library online to resume normal operations.

Reboot the Library

Use this procedure to reboot the library. This process involves reloading the firmware from flash memory and restarting the library controller.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder in the navigation tree.
3. Click **Reboot**.
4. All other users must log off. Click **OK**.
5. If the library is online, click **OK** to take the library offline.
6. Click **OK** to reboot the library.
7. Click **OK** to terminate this SLConsole session. Do not log back in to the SLConsole until the library has fully initialized.

Place the Library Online or Offline

Use this procedure only if you are not using ACSLS or ELS tape management software, or if ACSLS/ELS servers cannot communicate with the library. For instructions on changing the state of the library and its components through ACSLS or ELS, see the appropriate tape management software documentation.

Place the Library Offline

You may need to place the library offline at the following times:

- Before powering down the library
- Before opening a library access door
- When the library is inoperative and requires maintenance

To place the library offline:

1. Take all library drives offline. See "[Change a Drive Online/Offline Status](#)" on page 9-4.
2. Select **Tools > System Detail**.
3. Click the **Library** folder in the navigation tree.
4. Click the **Status** tab, and then the **General** tab.
5. In the Transition Request field, click **Take offline**.
6. Click **Apply**. Before the library goes offline, all outstanding library jobs complete.

7. Wait for the offline confirmation message. If the library does not come offline, check the status of the library.

Bring the Library Online

1. Select **Tools > System Detail**.
2. Click the **Library** folder in the navigation tree.
3. Click the **Status** tab, and then the **General** tab.
4. In the Transition Request field, click **Bring online**.
5. Click **Apply**.
6. If applicable, bring the library online to ACSLS and ELS hosts. See the ACSLS and ELS documentation.

Bring the Drives Online

LTO drives are automatically brought online when you bring the library online. To bring T-series drives online manually:

1. To verify that the T-series drives are ready and online, press the **MENU** switch. The display should now read **Online**.
2. If the drive displays **Offline**, press the **SELECT** switch once to bring it online.
 - If the drive message indicates **Online**, the transition to online completed.
 - If the **Onl Pend** message appears, the online state is pending due to completion of diagnostic tests.
 - If other messages appear, refer to the drive documentation.

Audits

An audit is the process of cataloging or verifying cartridge locations within a library and updating the cartridge database. The database contains the volume ID (vol-id or volser), current location (in library internal address format), and verified status (true or false).

You can use the SLConsole to perform a "[Physical Audit](#)", "[Verified Audit](#)", or virtual audit. A virtual audit displays a report listing the contents of the cartridge database. Audit times vary according to the type of audit, size of the library, the number of HandBots, and the speed of the scan engine for the barcode scanner.

The library performs an audit when:

- One or both access doors have been opened and closed.
- An audit request is made through the SLConsole.
- A host request to audit the library is entered. (System-level problems may occur if a host's record of the cartridge does not match what is in the cartridge database of the library controller.)
- The library initializes at power on.

Audit Indicator

To indicate an audit is in progress, the SLConsole displays a spinning indicator and the message "Audit in progress". When you see this indicator do not open the library access door. This will cause the audit to restart.

The audit indicator only displays when an audit is initiated automatically (library access door has been opened and closed, library power up or reboot). The indicator does not display for audits initiated from SLConsole or the host.

Physical Audit

In a physical audit, the robot visits cartridge locations and records the vol-id of the cartridges. The library controller updates the cartridge database based on the physical audit. This audit changes the “verified” status of the cartridge locations to true.

You can manually initiate a physical audit for either the entire library or a specific range of cells.

Note: You cannot stop a physical audit after it begins.

Audit the Entire Library

The robot verifies all cells (storage, CAP, drive, reserved). Although an entire library audit is a background process and does not interrupt library operations, it does require sharing of robot resources. It is not recommended that you run this audit during peak activity periods. The audit takes approximately 1/2 second per cartridge slot.

After a few hours of the audit, you can view the Cartridge Summary report for the latest cartridge locations and vol-ids. See ["Library Reports"](#) on page 7-4.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder on the navigation tree.
3. Click the **Audit** tab.
 - a. In the Entire Library section, click **Yes**.
 - b. Click **Audit**.
4. Click **OK** to begin the audit.

Audit a Range of Cells

During this audit, the library verifies only a specific range of storage cells (including the CAP and drives). The audit information is displayed on the SLConsole while the audit is performed. After the audit completes, view the Cartridge Summary report for the latest cartridge locations and vol-ids. See ["Library Reports"](#) on page 7-4.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder on the navigation tree.
3. Click the **Audit** tab.
 - a. In the Entire Library section, click **No**.
 In the Physical Audit section, select **Yes**.
 In the Verified Audit section, select **No**.
 - b. In the Start Address and End Address sections, select the device types to audit and the internal address locations.
 - c. Click **Audit**.
4. Click **OK** to begin the audit. The Audit Console section displays the progress of the audit.

Verified Audit

A verified audit validates the status of a specific cartridge location or range of locations (including CAPs and drives) in the cartridge database. If a cartridge address has a verified status of `false`, a physical audit of that location is performed and the cartridge database is updated.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder on the navigation tree.
3. Click the **Audit** tab.
 - a. In the Entire Library section, select **No**.
In the Physical Audit section, select **No**.
In the Verified Audit section, select **Yes**.
 - b. In the Start Address and End Address sections, select the device types to audit and the internal address locations.
4. Click **Audit**. The Audit Console section displays the progress of the audit.

CAP Management

Cartridge access ports (CAPs) are used to enter or eject cartridges to or from the library. This chapter describes general CAP activities:

- ["CAP Modes"](#) on page 8-1
- ["Recommendations for CAP Use"](#) on page 8-2
- ["Display CAP Information"](#) on page 8-2
- ["Change CAP Online/Offline Status"](#) on page 8-2
- ["Lock/Unlock a CAP"](#) on page 8-3
- ["Perform CAP Self-test"](#) on page 8-3
- For partitioning information, see ["CAP Operation - Override a CAP Reservation"](#) on page 5-6

CAP Modes

Auto Enter Mode

Only non-partitioned HLI libraries support the CAP auto enter mode.

Auto enter mode enables you to open a CAP and begin an enter operation without issuing an explicit enter request or having an explicit CAP reservation from a host application. However, to eject cartridges through the CAP, you still have to issue an explicit eject command.

Host applications manage the auto enter mode. To place a CAP in auto enter mode, enter the appropriate tape management command to unlock the CAP (see the tape management software documentation).

When in auto mode, a CAP is unlocked and its LED is on. The system locks the CAP only during cartridge enter, eject, or audit operations. To initiate an enter operation using an automatic CAP, press **CAP Open** on the key pad.

Manual Mode

Manual mode is the most secure method of CAP operations. When in manual mode, the system locks a CAP by default, and its LED is off. To initiate an enter or eject operation using a manual CAP, you must enter an explicit enter or eject request before pressing **CAP Open** on the keypad.

Recommendations for CAP Use

- Whenever possible, enter cartridges through the CAP. Insert cartridges with the correct orientation. Slots in the CAP can be skipped when loading cartridges.
- If only one CAP is required to do the job, do not open both CAPs. Opening both CAPs will increase the audit time.
- If a HandBot adjacent to the CAP is inoperative, that portion of the CAP is inaccessible.

Maximizing Library Performance

- When planning workloads, place cartridges that require significant enters and ejects on rails adjacent to CAP magazines.
- Load magazines adjacent to the rail in which the cartridges will reside.
- To help identify what cartridges go to which rail, place labels outside the CAP to indicate the type of cartridge for a magazine.
- Enter cartridges using a CAP magazine adjacent to the desired rail where compatible tape drives are located.

Display CAP Information

Use this procedure to display CAP information, including the current operation state of the CAP. This information is also available through **Reports > CAP Details**. See ["Library Reports"](#) on page 7-4.

1. Select **Tools > System Detail**.
2. Select the **CAP** folder in the navigation tree. The system lists all the library's CAPs and their locations.
3. For more detailed information, expand the **CAP** folder. Click the CAP to display.
4. Select a tab:
 - **Status Tab** - displays the current operational state of a CAP. The online/offline state of the CAP is independent of the online/offline state of any LSM in an SL8500.
 - **Properties Tab** - displays static information for a CAP, including the serial number and number of cells.

Change CAP Online/Offline Status

Use this procedure only if you are not using ACSLS or ELS tape management software, or if ACSLS/ELS servers cannot communicate with the library. For instructions on changing the state of the library and its components through ACSLS or ELS, see the tape management software documentation.

Note: Library devices that are offline and in an error state cannot go online. The error condition must be cleared first.

1. Select **Tools > System Detail**.
2. Expand the **CAP** folder. Click the CAP to modify.

3. Click the **Status** tab.
4. In the Transition Request list select either:
 - **Take Offline** - All outstanding jobs for the CAP will complete first.
 - **Bring Online**
5. Click **Apply**.

Lock/Unlock a CAP

Normally, the host locks or unlocks a CAP access door. Use this procedure when you need to manually lock or unlock the CAP using SLConsole. An unlocked CAP is reserved by the library and unavailable to all hosts until it is locked. This procedure applies only to HLI CAPs.

Note: If the CAP is reserved by a host, the host must release the CAP reservation before you can unlock the CAP.

1. Select **Tools > Diagnostics**.
2. Expand the **CAP** folder. Select the CAP to modify.
3. Click the **Access** tab.
4. In the Locked list select:
 - **False** to unlock.
 - **True** to lock.
5. Click **Apply**.
6. When unlocking a CAP, a confirmation message appears. Click **OK** to unlock the CAP.

Perform CAP Self-test

1. Select **Tools > Diagnostics**.
2. Expand the **CAP** folder. Select the CAP to test.
3. Click the **SelfTest** tab.
4. In the Mode list, select **Non-Disruptive**.
5. Click **Run**. A message appears when the test finishes.

Drive Management

- ["Maximizing Library Performance"](#) on page 9-1
- ["Drive Cleaning"](#) on page 9-1
- ["Display Drive Information"](#) on page 9-2
- ["Display the Drive and Drive Media Reports"](#) on page 9-3
- ["Configure the Drive Tray Serial Numbers"](#) on page 9-3
- ["Change a Drive Online/Offline Status"](#) on page 9-4
- ["Perform a Drive Self Test"](#) on page 9-4
- For drive identification information, see ["Tape Drive Addresses"](#) on page B-6.

Maximizing Library Performance

- Install tape drives that use the same media types on the same rails. Check that there are enough drives for the number of mounts during peak usage. Make sure the number of mounts during peak usage won't exceed the capacity of the HandBots.
- The maximum mount/dismount rate is around 250 cycles an hour. For high mount rate applications, do not place sixteen drives on an rail. This can lead to increased wait times for the robot to be available. High mount rate applications may require clustering drives on more than one rail.
- In a redundant robotics library, install drives in the outer two columns (± 2) first. This allows both HandBots to access drives at the same time.

Drive Cleaning

Library tape drives require periodic cleaning to prevent read/write errors. A drive cleaning occurs when the system mounts a compatible cleaning cartridge in response to a cleaning request from the drive.

As of SL8500 firmware FRS_7.00 and SLConsole 5.50, host applications (such as ACSLS or ELS) manage all cleaning cartridge and drive clean functions.

However, as of SL8500 firmware FRS_8.31 and SLConsole 6.25, drives in the media validation pool can request cleaning, and will automatically be cleaned by the library. Therefore, a library using the media validation feature requires cleaning cartridges in the reserved system cells. These cleaning cartridges are not used by the host tape-management software, only by drives in the media validation pool. Customers

should manage cleaning cartridges using the CLI. See [Appendix A, "Command Line Interface Reference"](#) section "cleaning" on page A-3 for more information.

Host-Managed Drive Cleaning

You can use host tape management software (ACSLs or ELS) to manage drive cleaning in HLI libraries or partitions.

1. Confirm that the library auto clean function is disabled for the library and all partitions. (The auto clean function is disabled by default).

Note: As of SL8500 firmware version FRS_7.00 and SLConsole version 5.50, enabling/disabling auto clean is not available through the SLConsole. It is only available to the library administrator through the CLI.

2. Enable automatic cleaning within the tape management software.
 - a. For ELS, see the *ELS System Programmer's Guide* for instructions on enabling the cleaning function.
 - b. For ACSLS, automatic cleaning is enabled by default. See the *ACSLs Administrator's Guide*.
3. To enter cleaning cartridges into the library, use the applicable ACSLS or ELS commands.

Note: Only use the SLConsole Import/Export page to enter cleaning cartridges if you have a media validation drive pool. The library controller will store the cartridges in reserved system cells. ACSLS and ELS do not have access to these cells.

4. Have the tape management software manage drive cleaning as required.
5. To monitor the status of cleaning cartridges and drives, use the applicable ACSLS or ELS commands.
6. To eject cleaning cartridges from the library, use the applicable ACSLS or ELS commands. You cannot use the SLConsole Import/Export page to eject host-managed cleaning cartridges.

Display Drive Information

Use this procedure to display drive information for all drives in the library. This information is also available through **Reports > Drive Details**. See "[Library Reports](#)" on page 7-4.

If you must perform a manual mount to a drive, this procedure displays a mapping of all addresses (firmware, HLI-PRC, drive bay) for each library drive.

1. Select **Tools > System Detail**.
2. Click the **Drive Folder** in the navigation tree for the drive status and locations of library drives.
3. For more detailed information, expand the **Drive** folder in the navigation tree. Select a drive.

4. Select a tab:
 - **Status Tab** - displays the current operational state of the selected drive
 - **Properties Tab** - displays configuration information, including the drive type, serial number, and port configuration
 - **Display Tab** - displays network data, the Virtual Operator Panel (VOP) for T10000 and T9840D drives, and drive LED status
 - **Drive Tray Tab** - displays the current status of a drive tray

Display the Drive and Drive Media Reports

The Drive and Drive Media Events Reports summarize drive and media events and errors that have occurred on library drives. Use these reports to help identify and diagnose faulty drives and cartridges.

By default, the reports are sorted in drive serial number order. Optionally, you can change the sort order, and rearrange and re-size the columns. See "[Modifying the Screen Layout](#)" on page 2-3 for more information

1. Select **Tools > Reports**.
2. Expand the **Statistics** folder.
3. In the navigation tree, click the report type to view:
 - **Drive Events** - summarizes drive events and errors. For each drive that has experienced an event, the report lists the type of drive, type of error, the number of occurrences, and the date and time of the last such event. The report can display up to 70 entries.
 - **Drive Media Events** - summarizes media events. For each drive that has experienced media events, the report lists the vol-id of the cartridge, the type of event, the number of occurrences, and the date and time of the last such event. The report can display up to 500 entries.

Configure the Drive Tray Serial Numbers

1. Select **Tools > Configuration**.
2. Click the **Drive Tray S/N** tab.
3. Click **Refresh** to display the current data.
4. To edit an individual drive tray serial number:
 - a. Double-click the Drive Tray S/N field.
 - b. Enter the drive tray serial number. Proceed to step 6.
5. To edit multiple drive tray serial numbers at once, you can edit a comma-separated value (csv) file:
 - a. Click **Export**, and then save the file to a desired location.
 - b. Open the file and edit only the drive tray serial numbers. Do not alter any other values. Save the changes.
 - c. In SLConsole, click **Import**. Locate the updated .csv file, and then click **Open**.
6. Click **Apply**, then **Yes**.

Change a Drive Online/Offline Status

A drive can be in one of the following states:

- *Online*: The drive is available for read/write operations.
- *Offline*: The drive is not available for read/write operations.

Use this procedure only if you are not using ACSLS or ELS tape management software, or if their servers cannot communicate with the library. For instructions on changing the state of the library and its components through ACSLS or ELS, see the appropriate tape management software documentation.

Note: Library devices that are offline and in an error state cannot go online. Clear the error condition first.

1. Select **Tools > System Detail**.
2. Expand the **Drive** folder, and click the drive to modify.
3. Click the **Status** tab.
4. In the Transition Request field select either:
 - **Take Offline** - the system completes all outstanding jobs for the drive first.
 - **Bring Online**
5. Click **Apply**. The drive status updates accordingly.

Perform a Drive Self Test

1. Select **Tools > Diagnostics**.
2. Expand the **Drive** folder, and click the drive to test.
3. Click the **SelfTest** tab.
4. In the Mode list, select **Non-Disruptive**.
5. Click **Run**. A message appears when the test finishes.

Cartridge Management

- ["Cartridge Types"](#) on page 10-1
- ["Maximizing Library Performance"](#) on page 10-2
- ["Display Cartridge Information"](#) on page 10-2
- ["Locating Cartridges"](#) on page 10-2
- ["Moving Cartridges \(Recovery Moves\)"](#) on page 10-3
- ["Entering Cartridges"](#) on page 10-4
- ["Ejecting Cartridges"](#) on page 10-5
- ["Import/Export Diagnostic Cartridges"](#) on page 10-6
- ["Cartridge Handling"](#) on page 10-7

Cartridge Types

- Data cartridges
- Diagnostic cartridges — used by service representatives to run read/write tests on drives (see ["Import/Export Diagnostic Cartridges"](#) on page 10-6)
- Cleaning cartridges — used to clean the tape path and read/write heads of the tape drives (see ["Drive Cleaning"](#) on page 9-1)

Caution: Do not re-enter a cleaning cartridge ejected by the library. The library will consider it to be new, and set the usage counter to zero.

Library cartridges must meet specifications defined in *American National Standard Magnetic Tape and Cartridge for Information Interchange*. For more information on cartridges, refer to the drive vendor's publication and website.

Cartridge Labels

For information about media label standards for each cartridge type, see the *Barcode Technical Brief*. All library cartridges must have a readable external label. The HandBot reports an error when it encounters an unreadable label.

Non-labeled cartridges are not supported. The library exports any non-labeled cartridges it finds through the CAP. A non-labeled or unknown type cartridge will not mount to a drive.

Maximizing Library Performance

- Cluster cartridges by workload on separate rails. Make sure each rail has the correct amount of free cells, data cartridges, scratch cartridges, and tape drives to support peak usage.
- Move inactive cartridges out of the library. Move less frequently used cartridges away from the tape drives.
- When entering cartridges through the CAP, place cartridges in the magazine adjacent to the rail in which the cartridges will reside. This minimizes elevator and robot activity.
- Use Library Content Manager (LCM) to automatically manage free cells for z/OS customers.
- Use the float option available with host management software (ACSLs and HSC).

Display Cartridge Information

The reports feature can display information about all library cartridges, including cartridge vol-id, location, and media type. You can display the information in a tabular format or a list. For drive-related media events, see ["Display the Drive and Drive Media Reports"](#) on page 9-3.

1. Select **Tools > Reports**.
2. Expand the **Status Summary** folder in the navigation tree.
3. Click the report to view:
 - **Cartridge Table** - displays cartridge information in a tabular form. You can modify the layout and display of this screen. See ["Modifying the Screen Layout"](#) on page 2-3.
 - **Cartridge Summary** - displays cartridge information in a list.
4. To search the report data or save it to a file, see ["Library Reports"](#) on page 7-4.

Locating Cartridges

You can display the library internal address of any cartridge by using the SLConsole. You can locate a cartridge based on vol-id, internal library address, or HLI address.

This utility is especially useful when you must perform a manual mount of a cartridge. The library management software (ELS or ACSLS) provides the vol-id, HLI-PRC address of the cartridge, and drive bay address of an available drive. Before you enter the library, write down the vol-id, cartridge location, and the drive slot location. If the library is in a complex, be sure to enter correct library number/LSM number (see ["Library Addressing"](#) on page B-1)

Locate a Cartridge by vol-id

Use this procedure to display the current location of a cartridge with a specified volume ID. You can display cartridge location in the library internal address or HLI-PRC address format.

1. Select **Tools > Diagnostics**, and then click the **Library** folder.
2. Click the **Search** tab.
3. In the Search Type list, select **VOLID**.

4. Enter the VOLID (wildcards are valid).
5. The Requester field controls the address format of the search results. Select:
 - **default** to display in library internal address format.
 - **hli0** or **hli1** to display in HLI-PRC address format.
6. Select the Cartridge Type.
7. Click the **Search** tab. The Search Results section updates.

Locate a Cartridge by Address

Use this procedure to display detailed information for cartridges with a specified location. You can specify the location using library internal address or HLI-PRC address.

1. Select **Tools > Diagnostics**, and then click the **Library** folder.
2. Click the **Search** tab.
3. In the Search Type list, select **Location**.
4. In the Location list, select the type of search.
5. In the Location field, enter the address (wildcards are invalid)
6. In the Requester list, select the type of address format - **HLI** or **default** (internal address). Make sure the type matches what was entered in the Location field.
7. Click the **Search** tab. The Search Result section updates.
8. To see details about a cartridge or to view a location mapping, click the "... " button in the Details column.

Moving Cartridges (Recovery Moves)

Using the recovery move diagnostic function, you can move a cartridge from one location to another. For example, you can:

- Return a cartridge to its original location from a CAP cell, drive, or another storage cell location.
- Transfer orphaned cartridges to accessible locations
- Group cartridges by data type or move them closer to assigned drives.
- Eject a cleaning or diagnostic cartridge that has expired.
- Enter a new cleaning or diagnostic cartridge and move it to a reserved storage cell.

A cartridge in a storage cell can be moved only to a CAP, a system cell, or another storage cell, and not to a drive. A cartridge currently in a drive, CAP, or system cell can be moved to any other unoccupied location in the library.

Before moving any cartridge, it is helpful to display or print a report showing where cartridges are currently located and which storage cells are unoccupied (see ["Display Cartridge Information"](#) on page 10-2).

Move a Cartridge by Vol-id or Specified Location

Use these procedures to move a cartridge in the library to a new specified location. These procedures update the cartridge's location in the library controller database, but not in the host database. You must perform an audit from the host software to update

the host database. Failure to do so will cause future mount requests from the host software to fail.

Caution: *Potential data loss.* Use caution when moving cartridges in partitioned libraries. Accidentally moving a cartridge from one partition to another allows the new partition to overwrite data.

1. Select **Tools > Diagnostics**. Click the **Library** folder.
2. Click the **RcvrMove** tab.
3. In the Source Location Mode section, select either:
 - **VOLID** to use vol-id. In the VOLID field, enter the vol-id of the cartridge to move.
 - **Location** to use a specific location. Select the cartridge's current location type. Options are: **CAP, Slot, Drive, Reserved Slots**.
4. In the Destination Location Type list, select the type of location to which to move the cartridge. Options are: **CAP, Storage Slots, Drive, and Reserved Slots**.
Selection restrictions include:
 - The destination can be a drive only if the source is a CAP or reserved slot.
 - To move a cartridge to a drive, the cartridge media type must be compatible with the drive type.
 - You cannot move a cartridge to a location that is already occupied.
 - Only diagnostic or cleaning cartridges should be moved to reserved slots.
5. In the Destination Location table, specify the cartridge destination with the library internal address lists: Library, Rail, Column, Side, Row.
Options include:
 - **Min:** First element of that location type (library, rail, column, side, row) in the library
 - **Max:** Last element of that location type (library, rail, column, side, row) in the library
6. Click **Start** to begin the move.
7. Click **OK**.
8. To verify the new location, you can display a Cartridge Summary report. See "[Display Cartridge Information](#)" on page 10-2.
9. To update the new cartridge location in the host database, initiate a library audit from the host software (see the tape management software documentation).

Entering Cartridges

Before you enter a cartridge, verify that it is labeled properly. Do not enter unlabeled cartridges or place cartridges upside-down.

The CAP can hold 39 cartridges. Place cartridges in any magazine slot and in any order with the hub gear facing down and cartridge label facing you. The magazine is removable for cartridge placement.

After a cartridge is entered through the CAP, the library moves the cartridge from the CAP to a library storage slot, records the cartridge's location, and sends the location to the host.

Caution: *Possible equipment damage:* DO NOT force the CAP to open or close.

1. If the CAP is in auto enter mode (see "[CAP Modes](#)" on page 8-1), proceed to the next step. If it is in manual mode, initiate the enter operation at the host (see tape management software documentation for the procedures and commands).
2. Press the **CAP** button (CAP A or CAP B) on the operator key pad.
The CAP door opens, and the CAP button light turns ON.
3. Place the cartridges in the CAP with the hub gear face down and barcode toward you.
4. Press the **CAP** button (CAP A or CAP B) on the operator key pad.
The CAP closes and locks automatically, and the CAP button light turns OFF.
When the CAP is empty, the library returns the CAP to its default state

Ejecting Cartridges

To export a cartridge, specify the vol-id of the cartridge to remove from the library. The system retrieves the vol-id location from the library's memory. The robot locates the cartridge and places it into the CAP slot. The CAP can hold 39 cartridges.

After the CAP opens, the system erases the location of the cartridge from the library controller database and the host database. The robot does not read cartridge labels during export operations.

Caution: *Possible equipment damage:* DO NOT force the CAP to open or close.

1. Initiate the eject operation at the host. Specify the vol-ids of the cartridges to remove from the library. See the appropriate tape management software documentation for the procedures and commands.
2. Press the appropriate **CAP** button (CAP A or CAP B) on the operator key pad.
The CAP door opens, and the CAP button light turns ON.
3. Remove the cartridges from the CAP.

CAUTION: *Potential data loss.* If you do not remove the cleaning cartridge from the CAP and the CAP closes, the library treats the cartridge as new and the expired cleaning cartridge is used again.

4. Push the **CAP** button to close the CAP.
The CAP closes and locks, and the CAP button light turns OFF.
5. If more cartridges must be exported, the robot continues filling the CAP. Wait until the CAP door is unlocked and repeat step 2 through step 4.

Once the system ejects all cartridges, the robot audits the CAP to verify it is empty. The CAP returns to its default state.

Import/Export Diagnostic Cartridges

Library self-tests and some other diagnostic activities require the use of diagnostic cartridges. Make sure the library contains enough diagnostic cartridges for these activities. Diagnostic cartridges are stored in the reserved system cells, and cannot be imported or exported with host management software.

To import/export a diagnostic cartridge through a CAP, use the SLConsole Import/Export function. The library controller reserves the CAP for the entire operation. The system can perform only one diagnostic or cleaning cartridge import or export operation at a time.

Diagnostic cartridge volume IDs (vol-ids or volsers) must be eight characters in length, with DG as the first two characters. The library import/export function works only for diagnostic cartridges with labels in this format. You can use any of the following SLConsole reports and searches to display information about diagnostic cartridges. Search for cartridges that begin with DG.

- ["Display Cartridge Information"](#) on page 10-2
- ["Locating Cartridges"](#) on page 10-2

Import Diagnostic Cartridges

Make sure that the library has enough empty reserved system cells for the diagnostic cartridges. There must be at least one empty system cell on each side of the library for robot recovery or library initialization. The diagnostic cartridges are distributed as evenly as possible in reserved system cells, or you can assign priority to one rail.

1. Verify that the CAP is empty, available for use (not reserved by a host), and closed and locked.
2. Select **Tools > Diagnostics**.
3. Expand the **CAP** folder and click a CAP to use. Click the **Import/Export** tab.
4. In the Operation section, select **Import Cleaning/Diagnostic cartridges**.
5. In the "Select favored rail for import" list, select the preferred storage rail or **No affinity**.

The system enters diagnostic cartridges into reserved system cells on the favored rail on a space-available basis. After the system cells on the rail are full, the system distributes cartridges among system cells on other rails.

6. Click **Start**.
7. Click **OK** to begin the import operation.
8. Follow steps 2 to 4 of ["Entering Cartridges"](#) on page 10-4 to complete the import operation.

Export Diagnostic Cartridges

1. Verify that the CAP is empty, available for use (not reserved by a host), and closed and locked.
2. Select **Tools > Diagnostics**.

3. Expand the **CAP** folder, click a CAP to use. Click the **Import/Export** tab.
4. In the Operation list, select the type of export operation:
 - **Export specific diagnostic cartridges**, then select the cartridges to export in the "Select Cartridge(s) to export" list
 - **Export all diagnostic cartridges**, then select a rail in the "Select rail to export cartridges from" list.
5. Click **Start**.
6. Click **OK** to begin the export operation.
7. Follow steps 2 to 5 of ["Ejecting Cartridges"](#) on page 10-5 to complete the export operation.

Cartridge Handling

Caution: When cartridges are improperly handled, loss of data or damage to a library component can occur.

- Keep cartridges clean and inspect for damage before each use.
- Never open a cartridge.
- Do not handle tape that is outside the cartridge; the tape edge might be damaged.
- Do not expose the tape or cartridge to direct sunlight, moisture, or magnetic fields.

Inspecting a Cartridge

Always inspect a cartridge before you insert it into a tape drive or a library. A defective or dirty cartridge can damage a tape drive. Never use a damaged cartridge. Look for:

- Dirt or debris
- Cracked or broken housing
- Damaged write-protect switch
- Liquid in the cartridge
- Labels not firmly attached, or that extend over the cartridge edge

Cleaning the Cartridge Exterior

Wipe all dust, dirt, and moisture from the cartridge with a lint-free cloth. Use Oracle StorageTek Tape Cleaner Wipes to clean the cartridges. These wipes are saturated with isopropyl alcohol. Do not let any solution touch the tape or get inside the cartridge.

Caution: *Potential damage to cartridges.* Do not use acetone, trichloroethane, toluene, xylene, benzene, ketone, methylethyl ketone, methylene chloride, ethyldichloride, esters, ethyl acetate, or similar chemicals to remove labels or clean cartridges.

Storing Cartridges

Store cartridges in a clean environment. Do not take a cartridge out of its protective wrapping until you are ready to use it. Use the tear string, not a sharp instrument, to remove the wrapping. Before using a cartridge, ensure that it has been in its operating environment for at least 24 hours.

Media Validation

Media validation allows customers to verify all T10000 tape cartridge types using SLConsole. The SLConsole indicates the progress of the validation at the initial start, one minute after the start, and then every 10 minutes. The validation provides a "success" or "failure" result for each tape cartridge tested.

The media validation feature requires minimum SL8500 firmware FRS_8.31, SLConsole FRS_6.25, and a high memory HBT card.

Drive Pool

Media validation requires a designated pool of T10000C or T10000D type tape drives at TTI level 5.40+. Up to 10 drives can be placed in the media validation pool using SLConsole (see ["Slot Selection Tab - Add or Remove Drives from Media Validation Drive Pool"](#) on page 11-2). The drives in the pool are not available to hosts. The pool is not considered a partition and does not contain cartridges.

Drives in the media validation pool are automatically cleaned by the library. This occurs regardless of the auto clean status for the entire library or for partitions in the library (see ["Drive Cleaning"](#) on page 9-1).

Note: The CSE should ensure there are cleaning cartridges in the reserved system slots for auto-cleaning of the drives in the media validation pool.

Validation Types

[Table 11-1](#) shows the five types of validation available through the SLConsole.

Table 11–1 Media Validation Types

Type of Validation	Description	Starts at	Approximate Duration per Cartridge
Basic Verify	Simple mount/dismount of the cartridge to determine if MIR is unreadable or out of sync	N/A: Simple mount and dismount	2 minutes
Standard Verify	Reads: - 1000 records from the beginning of the tape - The wrap that contains EOD, then into the EOD - Outermost wraps on top and bottom bands to verify edges	Beginning of tape (BOT)	Maximum of 30 minutes
Complete Verify (default)	Reads data at tape speed	- Beginning of tape (BOT) - Resumes where it left off	T10000C: 6 hours T10000D: 9 hours max
Complete Verify Plus StorageTek Data Integrity Validation¹	Checks DIV CRC to determine if it exists	- Beginning of tape (BOT) - Resumes where it left off	T10000C: 6 hours for compression ratios less than 2.5:1. T10000D: 9 hours for compression ratios less than 3:1
Rebuild MIR	Reads data at tape speed	At invalid position in the MIR	T10000C: 5 hours T10000D: 9 hours

¹ Decompression and encryption key management system are required.

Stopping Validation

Media validation can be stopped by either of the following:

- A host requesting the cartridge being validated
- The technician who initiated the validation through the SLConsole

See ["Stop a Validation in Progress"](#) on page 11-4.

Media Validation Tasks

The following procedures describe how to create a media validation drive pool and validate media for a single library or a library complex.

- [Add Drives to the Pool](#)
- [Remove Drives from the Pool](#)
- [Validate a Cartridge](#)
- [Stop a Validation in Progress](#)

Slot Selection Tab - Add or Remove Drives from Media Validation Drive Pool






Use this procedure to create or modify the media validation drive pool. Hosts cannot access drives or drive slots in the media validation pool.

Add Drives to the Pool

1. Log in to the library or any of the libraries within the complex. Ensure all libraries in the complex are online.

2. Select **Tools > Media Validation**. Click the **Slot Selection** tab
3. Click **Refresh** to update the screen.
4. Highlight the drive slots to place in the media validation pool (a maximum of 10)

Table 11-2 Status Indicators for Drive Slots

Status Indicator	Meaning
 Blank	Empty drive slot
 Rectangle	Slot contains either an invalid drive type or a correct drive type in an invalid state
 Rectangle with bar	Correct drive type (T10000C or T10000D) in a valid state
 Number	Partition number of drive slot/bay
 MV and colored	Drive slot is in media validation pool

5. Click **Add**.

An error message appears if you add more than 10 drives to the pool. Click **OK**. De-highlight slots until only 10 are highlighted. Click **Add**.

6. Click **Apply**.

Only the partitions containing drive slots moved into the pool will go offline. For hosts connected to affected partitions:

- ELS hosts begin re-configuration.
- ACSLS hosts require you to initiate re-configuration.

Remove Drives from the Pool

Use this procedure to remove drives from the media validation pool.

Note: If you try to remove a drive from the pool that is in the process of validating a cartridge, an error will be reported.

1. Select **Tools > Media Validation**. Click the **Slot Selection** tab
2. Click **Refresh** to update the screen.
3. Highlight the drive slots to remove from the pool. Click **Remove**.
4. Click **Apply**.
5. To reassign a drive slot removed from the pool:
 - For a non-partitioned HLI library, the drive slot will be available to hosts immediately. No additional action is required.
 - For a partitioned library, a drive slot removed from the validation pool is not allocated to a partition. To assign the drive slot to a partition, see "[Library Partitioning](#)" on page 5-3.

Media Validation Tab - Perform Cartridge Validation

You can only validate one cartridge at a time per each SLConsole session. Use STA to automate media validation.

Note: If media validation for a cartridge is interrupted, follow the procedures below to resume the validation. For Complete Verify validation types, select **Resume** to resume the validation where it left off.

Validate a Cartridge

1. Log in to the library. For a library complex, log in to the library that contains the drive that will be used for validation.
2. Select **Tools > Media Validation**. Click the **Media Validation** tab.
3. In the Drive column, select the drive to use. A drive may not be selectable if:
 - The drive is in an invalid state.
 - The drive type is invalid.
 - You are not logged into the library containing the drive.
4. In the center column, choose the cartridge to validate from a list, or type the cartridge VOLSER.
5. In the right-hand column, select the validation type. See [Table 11-1](#) for details.
6. Click **Start**. Validation begins if the cartridge loads successfully.

Progress messages can include:

- Validation progress - %
- Drive reported that Media Validation is finished.
- Media validation completion status: success (% complete when validation stopped).
- Stopping validation.
- Media validation is complete, drive is available.

After validation completes, the cartridge is returned to its source location. If the source location is lost, the library moves the cartridge to a system slot for host recovery.

Stop a Validation in Progress

Note: You must log in as the user who initiated the validation.

To stop a validation in progress through the SLConsole:

1. Select **Tools > Media Validation**. Select the **Media Validation** tab.
2. Click **Stop**.

Once validation stops, the cartridge is returned to its source location. If the source location is lost, the library moves the cartridge to a system slot for host recovery.

Robot and Safety Door Management

- ["Safety Door Overview"](#) on page 12-1
- ["Display Safety Door Information"](#) on page 12-1
- ["HandBots Overview"](#) on page 12-1
- ["Display Robot Information"](#) on page 12-2
- ["Change Robot Online/Offline Status"](#) on page 12-2
- ["Perform a Robot Self-Test"](#) on page 12-3
- ["Robot Diagnostic Moves"](#) on page 12-3

Safety Door Overview

The safety door is a sliding barrier that closes off the left or right maintenance area from the operational portion of the library. The maintenance area is the space between the two front doors and the rear of the elevator assembly. A safety door allows a service representative to perform maintenance on a robot while the library remains online. For additional information, see ["Service Safety Door Operation"](#) on page 15-6.

The safety door is activated by your Oracle support representative using a maintenance key. You can use the SLConsole to monitor the status of the safety door.

Display Safety Door Information

1. Select **Tools > System Detail**.
2. Click the **Safety Door** folder on the navigation tree to display summary information.
3. For detailed information, expand the **Safety Door** folder, and then click the Safety Door.
4. Select a tab:
 - **Status Tab** - displays the current operational state of the safety door
 - **Properties Tab** - displays safety door configuration information, including the serial number and current firmware levels

HandBots Overview

HandBots are robots that move cartridges between storage slots, tape drives, and CAPs. Each robot travels along one of the four library rails and services up to 16 tape drives.

With the optional redundant robotics feature, two robots operate on a single rail, significantly increasing the overall performance of the library. If one robot fails, the other robot moves the defective robot into the forward service area.

Fast Load Feature

The fast load feature optimizes system performance. After a robot successfully inserts a cartridge into a drive, it is immediately available for the next request and does not wait until the drive reports that the cartridge has been loaded. The library controller waits to return the mount request response until it detects that the tape drive has successfully loaded the cartridge.

Robot Initialization

Robots initialize when the library is powered on. If an initialization failure occurs, the robot is flagged as defective. In a library with redundant robotics, after the other robots successfully initialize, the defective robot is pushed into the maintenance area for replacement.

Note: If any hand or robotic errors cannot be resolved by error recovery routines, the entire robot must be replaced. Contact your service representative.

Display Robot Information

Note: This information is also available through **Reports > Robot Summary**. See "[Library Reports](#)" on page 7-4.

1. Select **Tools > System Detail**.
2. Click the **Robot** folder on the navigation tree to display summary information.
3. For detailed information, expand the **Robot** folder in the navigation tree, and then select a robot.
4. Select a tab:
 - **Status Tab** - displays the current operational state of the selected robot
 - **Properties Tab** - displays robot configuration information, including the serial number and current firmware levels

Change Robot Online/Offline Status

Use this procedure only if you are not using ACSLS or ELS tape management software, or if their servers cannot communicate with the library. For instructions on changing the state of the library and its components through ACSLS or ELS, see the tape management software documentation.

Use this procedure to take a robot offline or bring a robot online through the SLConsole.

Note: Library devices that are offline and in an error state cannot go online. The error condition must be cleared first.

1. Select **Tools > System Detail**.
2. Expand the **Robot** folder, and then click the robot to modify.
3. Click the **Status** tab.
4. In the Transition Request field, select either:
 - **Take Offline** - the system completes all outstanding jobs for the robot.
 - **Bring Online** - the robot moves to the end of the rail, and the library cannot use it. If the library is using the redundant robotics feature, the second robot will take all requests.
5. Click **Apply**.

Perform a Robot Self-Test

Note: To perform a robot self-test, diagnostic cartridges must be available in the library.

1. Select **Tools > Diagnostics**.
2. Expand the **Robot** folder, and then click the robot to test.
3. Click the **SelfTest** tab.
4. In the **Mode** list, select **Non-Disruptive**.
5. Click **Run** in the upper right corner.

Status messages display as the self-test runs. After the test finishes, the system displays a message indicating the diagnostic test is complete.

Robot Diagnostic Moves

Diagnostic moves can help monitor or diagnose robotic problems by issuing a series of "get" and "put" operations. The system chooses a robot for the diagnostic move based on the minimum and maximum ranges set for the target and pool addresses. Multiple robots may be selected if the address range requires it.

Successful diagnostic moves do not rearrange the cartridges in the library — the system returns cartridges to their original locations. However, some diagnostic move failures can cause cartridges to be left in new locations.

A diagnostic move is defined by:

- **Target Address Range** — defines the area used to perform the "get" operation in a diagnostic move. Valid target address types are storage cells, CAP, drive and storage cells, system cells, or all.

Note: All resources within the target address range are reserved. However, only the location currently being accessed by the robot for a get/put operation is unavailable to the host.

- **Pool Address Range** — defines the area used to supply cartridges or empty cells if a target address does not contain a cartridge or no empty cells are available. The pool and target address can overlap.

- **Access Order** — determines how the robot performs get operations within the target address range. There are two options:
 - *Sequential* — robot performs a get operation starting with the first location in the target address ranges. The robot continues visiting the locations sequentially through the range until it completes the requested number of moves.
 - *Random* — robot randomly picks a location in the target address range to get a cartridge. The robot can also visit the same location in the target address range multiple times to get a cartridge, however if you specify enough move request the robot is guaranteed to visit all cells. The random access routine ends after the requested number of moves is complete.

Define a Diagnostic Move

You can set up and run multiple diagnostic move routines simultaneously if the target and pool ranges for each diagnostic move do not overlap.

Note: This procedure requires sharing of robot resources. You should not run it during peak activity periods.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder in the navigation tree.
3. Click the **DiagMove** tab, and then the **Manage** tab.
4. In the Defined Sequence section, click **Add**.
5. Complete the Sequence screen to define the target address:
 - a. In the Selection Mode section, select the type of cells to diagnose.
 - b. In the Minimum Address and Maximum Address sections, select the library internal address of the starting and ending locations of the cells to diagnose.
6. Click **Next**.
7. Complete the SOURCE screen to define the pool address:
 - a. In the Selection Mode sections, select the appropriate cartridge pool address type.
 - b. In the Minimum Address and Maximum Address sections, select the library internal addresses of the starting and ending locations of the cartridge pool to use.
8. Click **Next**.
9. Complete the Sequence screen:
 - a. Name of the diagnostic move.
 - b. Move Count: Specify a number between 1 and 5000.
 - c. Access order: Sequential or Random.
 - d. Move Type: Robot and Cartridge or Robot Only.
 - e. Only if you are certain the cartridges and drives in the diagnostic move are compatible, select "Disable pre-move cartridge compatibility check".

10. Click **Finish** to complete the setup. The new diagnostic sequence is listed in the Defined Sequences section.

Manage Diagnostic Move Definitions

Use this procedure to manage diagnostic move sequence definitions. Each diagnostic move has its own monitor screen.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder on the navigation tree.
3. Click the **DiagMove** tab, and then the **Manage** tab.
4. In the Defined Sequences section, select an option:

Table 12-1 *Diagnostic Moves Options*

Option	Definition	Notes
Add	Define a diagnostic move	None
Open	Start a diagnostic move	Multiple diagnostic moves may be open at a time, so long as the target and pool address ranges setup for the moves do not overlap.
Modify	Modify options for a diagnostic move	This diagnostic move routine must not be open or if open must be in a "Stopped" state.
Remove	Remove a diagnostic move	This diagnostic move routine must not be open.
Copy	Copy an existing diagnostic move	Copy a diagnostic move definition, make changes if necessary, and assign a different name.

5. See "[Monitor and Control Open Diagnostic Moves](#)" on page 12-6 to manage the diagnostic moves currently open.

Save a Diagnostic Move

Use this procedure to save a defined diagnostic move to a file on your workstation. The file is saved as a JavaBean component represented as an XML 1.0 document (.xml).

You can use the file to:

- Restore a move that has been deleted from the library.
- Copy it to a different library.

To save a diagnostic move file:

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder on the navigation tree.
3. Click the **DiagMove** tab, and then the **Manage** tab.
4. Select a diagnostic move. Click **Save**.
5. Browse to the desired directory, enter a file name, and click **Save**.

Start a Diagnostic Move

Use this procedure to begin a diagnostic move. A monitor window displays for each move you open. You can repeat this procedure to open multiple moves, as long as the target and pool address ranges for the moves do not overlap.

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder on the navigation tree.
3. Click the **DiagMove** tab, and then the **Manage** tab.
4. In the Defined Sequences section, select a diagnostic move. Click **Open**.
5. From each monitor window, select **File > Start Sequence** to start the move.

Monitor and Control Open Diagnostic Moves

Use this procedure to control and monitor the status of one or more open diagnostic moves.

1. See "[Start a Diagnostic Move](#)" on page 12-5 for instructions on starting one or more diagnostic moves.
2. Select **Tools > Diagnostics**. Click the Library folder.
3. Click the **DiagMove** tab, and then the **Monitor** tab. Each monitor window indicates the status of the move.

Table 12-2 *Status Indicators for Moves*

Status Indicators	Valid Values
Spooling Status — whether the move output is being spooled to a file	True, False
State — execution state of the move	Running, pausing, paused, stopping, stopped
Health — health state of the move	OK, warning, error
Completed moves — Number of moves completed in the requested move count	N/A

4. Use the **File** menu in each Monitor window to start/stop/pause the sequence, clear the output window, or start/stop spooling.

Elevators and Pass-Thru Ports

- ["Maximizing Library Performance"](#) on page 13-1
- ["PTP Installation"](#) on page 13-1
- ["Display Elevator Information"](#) on page 13-2
- ["Display Pass-Thru Port Information"](#) on page 13-2

Maximizing Library Performance

Reduce elevator and pass-thru operations to improve library performance:

- Mount cartridges in tape drives that are on the same rail.
- Limit the distance cartridges must travel.
- Ensure a sufficient quantity of scratch cartridges are available.

PTP Installation

Non-disruptive Installation

For non-disruptive growth, add libraries to the left (viewed from front or CAP-side of library complex). This method does not require system reconfiguration. Installing PTPs from right to left has several advantages:

- Existing libraries can remain operational while the PTP frame is attached to them during the installation of the adjacent library.
- No rebooting of ELS or ACSLS is required.
- If cartridges are placed into the new SL8500, an ACSLS or ELS audit must be run to add these cartridges to the database. The pre-existing LSMs can remain online during the audit.

Disruptive Installation

Left-to-right installation is highly disruptive. You must take the libraries offline, update the configuration, and perform an audit to update volume locations and renumber LSMs (see ["Library Complex HLI Numbering"](#) on page B-1).

To perform a disruptive PTP installation with ACSLS or ELS:

1. Take the libraries offline.
2. Dynamically update the ELS or ACSLS configurations.

3. Run an audit all libraries in the complex. The audit process must proceed sequentially from left-to-right. (Failure to reconfigure or perform an audit will result in mount failures and cartridge collisions.)
4. Bring the libraries in the complex online.

Refer to the library management software documentation for more information.

Display Elevator Information

Note: This information is also available through **Reports > Status Summary > Library Information**. See "[Library Reports](#)" on page 7-4.

Use this procedure to display information for library elevators.

1. Select **Tools > System Detail**.
2. Click the **Elevator** folder in the navigation tree to display summary information.
3. For detailed information, expand the **Elevator** folder. Select an elevator.
4. Select a tab:
 - **Status Tab** - displays the current operational state of the elevator
 - **Properties Tab** - displays elevator configuration information, including the serial number and current firmware levels

Display Pass-Thru Port Information

Use this procedure to display PTP information in a library complex.

1. Select **Tools > System Detail**.
2. Select the **PTP** folder in the navigation tree to display summary information.
3. For detailed information, expand the **PTP** folder. Select a pass-thru port.
4. Select a tab:
 - **Status Tab** - displays the current operational state of the selected PTP
 - **Properties Tab** - displays PTP configuration information, including the serial number and current firmware levels

SLConsole Diagnostics and Utilities

The SLConsole enables you to perform many diagnostic tasks, including library self-tests, monitoring events, and device diagnostics.

- ["Library and Device Self-tests"](#) on page 14-1
- ["Diagnostic Support Information"](#) on page 14-1
- ["Troubleshooting"](#) on page 14-2
- ["Library Events"](#) on page 14-3
- ["Create an Event Monitor"](#) on page 14-5
- ["Display Device Status or Result Code"](#) on page 14-6

For information on using SLConsole diagnostic tools not described in this chapter, see:

- ["Import/Export Diagnostic Cartridges"](#) on page 10-6
- ["Robot Diagnostic Moves"](#) on page 12-3

Library and Device Self-tests

Self-tests can help diagnose issues, see:

- ["Perform a Library Self-Test"](#) on page 7-6
- ["Perform CAP Self-test"](#) on page 8-3
- ["Perform a Drive Self Test"](#) on page 9-4
- ["Perform a Robot Self-Test"](#) on page 12-3

Diagnostic Support Information

The following diagnostic tools aid in troubleshooting. Your Oracle support representative may request that you capture and transfer these files.

- **Management Information Base (MIB) file** - an SNMP database used to manage your library devices. This file can be saved as a text file. See ["Transfer the Library MIB File"](#) on page 7-5.
- **Log Snapshot file** - an encrypted snapshot of the library event log. You cannot view or edit this file. This file is available for only 15 minutes from the time it is generated. See ["Generate and Transfer the Library Log Snapshot File"](#) on page 7-5.
- **Device Reserve Table** - a table displaying device information and status. See ["Library Reports"](#) on page 7-4.

- **Event monitors** - spool of events that captures error data. See "[Create an Event Monitor](#)" on page 14-5.

Troubleshooting

Before you run diagnostic tests, review the following troubleshooting tips.

Service Required (amber) LED is constantly on

Use SLConsole to check the health of the library and the attached devices (drives, CAPs, and robots). See [Chapter 7, "Library Management"](#).

To perform a health check:

1. Log in to the SLConsole.
2. Access the System Detail module, **View > System Detail**.
3. Check the navigation tree for the following indicators: Device Healthy or Device Error

Additional checks:

1. Check the Status (for example, online/offline) and Statistics (for example, uptime, downtime, errors and warnings) tabs for more information on the health of the library and devices.
2. Ensure the cartridges are fully seated and properly oriented in their storage cells.
3. Inspect the X table for any foreign objects or debris and remove them if found.

Library does not power-on and SLConsole does not display any messages

1. Check that the library power switch is in the ON position.
2. Check all power cord connections.
3. Replace the power cord.
4. Ensure that there is power to the outlet.

CAP Open LED is on and blinking

Open the CAP and ensure the cartridges properly seated. Close the CAP.

SLConsole does not display modified data or information remains static

Check the SLConsole Heartbeat icon.

Robot Fault or Library Fault Amber LED is constantly on

1. Check the SLConsole for any displayed error messages. Write down the error messages reported.
2. Open the front door. Observe and note the state of the cartridges, hand, and tape drives.
3. Ensure cartridges are fully seated and properly oriented in their storage cells.
4. Ensure packing materials have been removed.
5. Inspect the library floor for any objects or debris. If there are any, remove them.
6. Check the status of the tape drives.
7. Close the front door.
8. Ensure the tape drives are fully seated and locked forward by pushing and pulling on the rear of the drive tray. Any motion of the tray indicates that it requires re-seating and locking down.

Client computer cannot communicate with the library or tape drives

Ensure cables are securely attached to their connectors on the rear of the library, the tape drives, and the client computer.

Library cannot communicate with the drives and drive status on the SLConsole displays "Not communicating"

Ensure cables are securely attached to their connectors on the rear of the library, the drives, and the client computer.

Repeated or excessive drive cleaning or cleaning messages

1. Replace the cleaning cartridge with a new cleaning cartridge.
2. Run the Library Self-Test and note if errors are reported for the drive.
3. Run any client computer-based drive diagnostic tests.

Library Events

The library controller continually monitors library operations and logs all events. Using the SLConsole, you can spool event data to a file.

Event Monitors

The system stores event monitors under the following three headings:

- Communication events: Includes host-to-library, library-to-library, and library-to-drive communications.
- Error event: Each error event is assigned a four-digit (hexadecimal) action code.
- Warning events: Indicate a loss of performance or conditions that may be indicative of future fatal errors.

The following information can help you diagnose the cause of the event:

- Date/time stamp: Identifies when the event occurred.
- Action codes: Identifies the command that was issued, such as "load drive."
- Result codes: Identify the result of the requested action. See ["Display Device Status or Result Code"](#) on page 14-6 to look up a result code.
- Known service plan diagnosis: Identifies the mechanism or component responsible for the task or fault.

Event Codes Reference

The following lists the event types, descriptions, and their respective codes.

Activity Code

Activity associated with the event. For example, HLI host mount, diagnostic fetch, robot communication diagnostic

Valid Code	Description
0000	no action /no activity
0100 - 0199	common/shared activity (across devices and the controller)
0200–0299	common/shared activity (across devices - robot, drive, PTP, and so on)
0400–0499	common/shared configuration activity

Valid Code	Description
1000–1999	host interface activity
2000–2999	management interface activity
3000–3999	internal server/library activity
4000–4999	partner library-initiated activity
5000–5999	robot activity
6000–6999	drive activity
7000–7999	CAP activity
8000–8999	elevator activity
9000–9999	PTP activity

Result Code

Reason for the activity. For example: Activity: HLI host mount, Result: robot X cartridge fetch failure.

Valid Code	Description
0000	no problem /normal
0100–0199	common/shared results (across devices and the controller)
1000–1999	host interface results
2000–2999	management interface results
3000–3999	internal server/library controller results
4000–4999	partner library interface results
5000–5999	robot results
6000–6999	drive results
7000–7999	CAP results
8000–8999	elevator activity
9000–9999	PTP activity

Severity

Identifies the significance of the event from the perspective of the activity associated with the event. The severity levels also identify log activity that must persist across system power cycles from that which might be considered volatile.

Valid Codes:

Error (1): Indicates a fault occurred which prevented a request (host or diagnostic) from completing successfully. Error data is non-volatile and accumulates across system power cycles.

Warning (2): Indicates a fault occurred, but the fault has not stopped the library's ability to complete requests (host or diagnostic). Warning data is non-volatile and accumulates across system power cycles.

Information (3): Indicates data that is not significant, but may be important to establish a history of activity around a severity 1 or 2 event. Information data is volatile.

Configuration (4): Indicates change in the library's configuration. This includes the addition and removal of drives, robots, controllers, and interface cards. This also includes changes to the software configuration. Configuration data are non-volatile resources and accumulate across system power cycles.

Diagnostic (5): Records normal diagnostic activity tracing. This is independent of the debug or trace activity when a diagnostic activity affects the availability of drives or other devices to host operations. Diagnostic data is volatile.

Request Identifier

Identifies all host interface requests. Helps track the sequence of log activity resulting from each host request.

Create an Event Monitor

Event monitors are useful tools for root cause analysis of errors. Open an event monitor and spool all events to a file to capture the error data, then send the file to your Oracle support representative for analysis. See ["Event Codes Reference"](#) on page 14-3 for a listing of event types and codes.

Display an Event Monitor

1. Select **Tools > Monitors**.
2. Expand the **Permanent Monitors** folder in the navigation tree.
3. Click an event monitor type. Click **Open**.
4. Use the **Monitor** menu to pause, resume, permanently stop, or clear the event monitor.
5. To close a monitor, click the X in the upper right corner of the window.

Spool Event Monitor Data to a File

Use this procedure to spool and save event monitor data to a file. You can send the file to your Oracle support representative to assist in diagnosing problems.

1. Select **Tools > Monitors**.
2. Expand the **Permanent Monitors** folder in the navigation tree.
3. Select an event monitor. Click **Open**.
4. In the event monitor window, select **Spool File > Start Spooling**.
5. Browse to the desired directory, enter the file name, and click **Save**.
6. To stop spooling, select **Monitor > Stop Spooling**.

Display Multiple Monitors

You can open and manage multiple event monitors using the Window menu:

Table 14–1 Controls for Displaying Multiple Monitors

To	Select
Custom arrange the open monitors on screen	Window > Arrange
Arrange the event monitor windows horizontally	Window > Tile Horizontal
Arrange the event monitor windows vertically	Window > Tile Vertical
Stack the event monitors	Window > Cascade

Display Device Status or Result Code

1. Select **Tools > Diagnostics**.
2. Click the **Library** folder in the navigation tree.
3. Click the **Search** tab.
4. In the Search Type list, select either:
 - **Device Status** - device status codes and their descriptions
 - **Result Code** - result codes and their descriptions
5. Complete the remaining fields:
 - a. To search for a specific device status code, enter the complete code (wildcards or partial codes are invalid)
 - b. To list all device status codes, select **List All**.
6. Click **Search**.

Manual Operation

- ["Modes of Operation"](#) on page 15-1
- ["Safety Precautions when Entering the Library"](#) on page 15-1
- ["Entering or Exiting the Library"](#) on page 15-3
- ["Powering the Library On or Off"](#) on page 15-4
- ["Manual Mount and Dismount Operations"](#) on page 15-5
- ["Service Safety Door Operation"](#) on page 15-6

Modes of Operation

Manual Mode

Manual operation may be required if the library has experienced an unrecoverable error or a library component requires service or installation. To perform manual operations, the library is placed in manual mode.

A library in manual mode cannot accept host requests (host requests may continue to generate and cartridge mounts and dismounts require human intervention). The library is in manual mode when a library main access door is open, a robot does not automatically mount and dismount cartridges, or the navigation tree in the SLConsole indicates that there is a problem with the library.

Maintenance Mode

Maintenance mode is active when a service representative enters the access door to perform maintenance or to replace a component. The library continues to operate and process host request (see ["Service Safety Door Operation"](#) on page 15-6).

Safety Precautions when Entering the Library

WARNING: POTENTIAL FOR INJURY. Lock the access door open and retain the key to prevent accidental closure while in the library.

When entering a library, strictly observe the following safety precautions:

- Ensure the library is offline (see ["Place the Library Offline"](#) on page 7-7). Do not enter the library or move any of the HandBot mechanisms if you have any reason to suspect the robots are online.

- Do not attempt to override any of the electrical or mechanical safety devices in the library.
- Do not enter the library without informing someone in the immediate area (see ["Emergency Robotics Stop Switch"](#) on page 15-2)
- Leave both the front access doors open whenever you work inside the library and lock them open. There are switches on each door frame that disconnect DC power and signal lines to the library's robotic motors when either access door is opened.
- Know the physical restrictions of the library. Be careful not bump your body against the arrays or to snag clothing on the arrays (only 0.4 m [18 in.] of aisle clearance).
- If you must move a robot avoid damaging the robot's mechanical or electronic components (see ["Moving a Robot"](#) on page 15-2).
- If you are manually loading or unloading a cartridge, your hands must remain clear of the drive's mechanical and electronic load components.

Emergency Robotics Stop Switch

The emergency robotics stop (EMS) switch removes all power to the robots.

In the unlikely event that someone becomes locked inside the library and the system begins to turn on, lights flash for 30 seconds before the robot starts to move. This provides enough time for someone outside the library to push the emergency robotic stop switch on the CAP door ([Figure 15-1](#)). This action stops any further robotic movement.

Figure 15-1 Emergency Robotic Stop Switch



1. Emergency Robotic Stop Switch (ERS)

Moving a Robot


When moving a robot, follow these precautions:

- Do not enter the library or move any of the HandBot mechanisms if you have any reason to suspect the robots are online.

WARNING: You could trip or injure yourself on a HandBots. Before you enter the library, move the HandBots out of your way one at a time starting at the lowest rail.

- Do not touch any shiny polished surfaces or lubricated parts. Body oils can destroy the lubrication on these surfaces.
- Only hold the HandBot carriage handle to push or pull.
- The HandBot should move freely. Do not force the HandBot if movement is restricted. Before you close the library access doors, look inside the library and ask in a loud voice if anyone is inside the library.
- Leave the library only when you are certain that the HandBots can move freely in all directions. Ensure no extra materials (manuals, eyeglasses, tools) are left inside. These objects would cause the robot to stop and could damage it.

Figure 15–2 Moving the HandBot

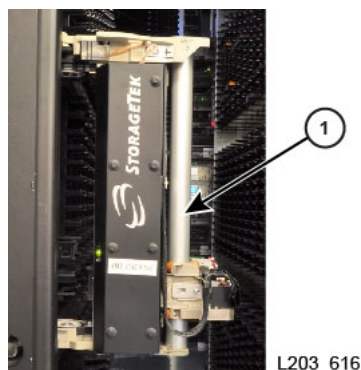

1. Robot handle

Entering or Exiting the Library

WARNING: To avoid injury, you must follow all safety precautions before entering/exiting the library. See "[Safety Precautions when Entering the Library](#)" on page 15-1.

Enter the Library

Use this procedure to open the main doors of the library.

1. Place the library offline. See "[Place the Library Offline](#)" on page 7-7.
2. Insert the key and unlock the access door.
3. Pull the paddle handle to activate the opening mechanism and open the access door. Opening the access door activates a switch, which automatically causes a software interrupt and stops the robot.

Before you enter the library, move the HandBots out of your way one at a time starting at the lowest rail. Follow all precautions in "[Moving a Robot](#)" on page 15-2.

4. Turn the key in the lock, to lock the door open, and then remove the key from the lock and keep it with you. This will prevent the door from being closed while you are in the library.

Exit the Library

Use this procedure to close and lock the main doors of the library.

1. Return any cartridges removed for a manual mount/dismount to their slots.
2. Before you leave the library, check for tools or foreign objects, and ensure no cartridges are outside the cartridge slots.
3. Step outside the library.

Before you close the library access door, look inside the library and ask in a loud voice if anyone is inside the library.

4. Close the front access door.

Caution: Do not slam the door. You could damage the door or cause cartridges to fall onto the floor.

5. Insert the key and lock the access door. Keep the key in a secure location.

Powering the Library On or Off

Use the following procedures to power the library on or off.

Power Off the Library

Caution: If you power-off the library without performing the following procedure, you risk possible equipment or cartridge damage or loss of data.

1. Ensure that all jobs have completed processing.
2. Quiesce the library to ensure the library and tape drives are not in use.
3. Take the library and the drives offline.
Refer to your library management software publication for commands and syntax for this step and step 4.
4. Ensure that the drives are empty by verifying the drive state using the SLConsole. See "[Display Drive Information](#)" on page 9-2 for more information.
5. Open the rear doors of the library.
6. Locate the power distribution unit (PDU) in the lower right corner at the rear of the library and move the system power-off/on switch to the OFF position (0). If the library has a 2N power configuration, you must switch off both the PDUs.

Figure 15-3 AC PDU

1. Retainer
2. LEDs
3. System Power Off/On Switch

Power On the Library

Use this procedure to power off the library.

1. Close and lock the front access door if the doors are open.
If you DO NOT want to power-on the robots, CAPs, and the elevators, leave the doors open.
2. Move the system power-off/on switch to ON (1) position.
If the library has a 2N power configuration, you must switch on both the PDUs.

Manual Mount and Dismount Operations

The library management software provides the location and the vol-id of the cartridge and also the drive bay address available for the manual mount. Before you enter the library, write down the vol-id, cartridge location, and the drive bay location.

- For locating a drive, see "[Display Drive Information](#)" on page 9-2.
- For locating a cartridge, see "[Locating Cartridges](#)" on page 10-2.

Manually Mount a Cartridge in a Drive

1. Orient the cartridge, so the hub gear is facing down and the vol-id label is facing you, with the numeric characters above the bar code.
2. Do not force the cartridge into the tape drive. If you feel some resistance as you insert the cartridge, ensure you are installing the cartridge into the appropriate tape drive.

Note: Only insert the correct media type for the tape drive.

For more information on manually mounting a cartridge into a drive, refer to the tape drive specific documentation.

Dismount a Cartridge from a Drive

All T-series and LTO Ultrium tape drives have a unload button on the operator panel.

1. Ensure that the tape drive is not in use by the system.
2. Press the **UNLOAD** switch. One of the following conditions occurs:
 - a. After the tape rewinds, the cartridge is ejected from the drive. Remove the cartridge from the drive. The cartridge is not ejected after the tape rewinds. Refer to your drive documentation for more information. For more information on manually dismounting a cartridge from a drive, refer to the relevant tape drive publication.

Service Safety Door Operation

When the service safety door is in place, the library continues to function. A mount request for a cartridge in the slot closer to the side (left or right) where the service safety door is engaged may be inhibited until the maintenance activity is completed. The reserved slots on the other side of the service area may still be accessed if the service safety door is not engaged on that side as well.

After the maintenance activity is completed, the access door is closed and locked and the service safety door moves to the center, clearing the area for HandBot operations. The HandBots then resume their full service.

Left Maintenance Area

During normal operation, take the left elevator offline to the library management software using the SLConsole before the service representative activates the service safety door. After the maintenance activity is complete, bring the left elevator online through SLConsole.

Right Maintenance Area

During normal operation:

- Take the CAPs offline to the library management software.
- Take the right elevator offline (using SLConsole) before the service representative activates the service safety door to the right side of the library.

After the maintenance activity is complete, bring the CAPs and the right elevator online to the system through SLConsole.

Command Line Interface Reference

This appendix describes the Command Line Interface (CLI) commands available for an Admin user for SL8500 version 8.31 firmware. Since the CLI is firmware-based, not all commands are available for libraries running earlier versions.

Admin accessible CLI commands include:

- ["audit"](#) on page A-1
- ["capCommand"](#) on page A-3
- ["cleaning"](#) on page A-3
- ["config"](#) on page A-6
- ["date"](#) on page A-7
- ["drive"](#) on page A-7
- ["hwActivation"](#) on page A-8
- ["mediaValidation"](#) on page A-8,
- ["network"](#) on page A-9
- ["partition"](#) on page A-11
- ["reControl"](#) on page A-11
- ["snmp"](#) on page A-12
- ["ssh"](#) on page A-12
- ["time"](#) on page A-12
- ["traceRoute"](#) on page A-12
- ["version"](#) on page A-13
- ["whereAmi"](#) on page A-13

audit

This command performs a physical audit on all or part of the library.

audit

Displays help for the audit command, the same as "help audit".

audit *

Initiates a physical audit of the entire library. This command returns immediately and displays no results.

Example:

```
SL8500> audit *
requestId
requestId 9
Done
Failure Count 0
Success Count 1
COMPLETED
```

audit <device address> <address>

Performs a physical audit of a single address and displays the results.

- *<device address>* - specifies the robot to use in library, rail, column, side, row format.
- *<address>* - specifies the cell location to audit in library, rail, column, side, row format.

Example:

```
SL8500> audit 1,4,0,1,0 1,4,-45,1,1
requestId
requestId 9
Attributes Media Label #EMPTY..
Object      Location    1,4,-45,1,1
Done
Failure Count 0
Success Count 1
COMPLETED
```

audit <device address> <start address> <end address>

Performs a physical audits of a range of addresses and displays the results.

- *<device address>* - specifies the robot to use in library, rail, column, side, row format.
- *<start address> <end address>* - specifies the starting and ending cell location to audit in library, rail, column, side, row format. Only the row is variable between the start and end addresses.

Example:

```
SL8500> audit 1,4,0,1,0 1,4,-45,1,1 1,4,-45,1,2
requestId
requestId 10
Attributes Media Label #EMPTY..
Object      Location    1,4,-45,1,1

Attributes Media Label EN34410R
Object      Location    1,4,-45,1,2
...
Done
Failure Count 0
Success Count 5
COMPLETED
```

audit multiRowScan {enable | disable | print} <device address>

Enables or disables multiple row scan audit capability to speed up audit time.

- **print** - prints the multi-row scan audit state.
- *<device address>* - specifies the robot to use in library, rail, column, side, row format.

Example:

```
SL8500> audit multiRowScan print 1,1,0,1,0
requestId
requestId 8401
Attributes Multi Row Scan enabled
Object      Robot      1,1,0,1,0
Done
Failure Count 0
Success Count 1
COMPLETED
```

capCommand

This command is for managing CAPs.

capCommand

Displays help for the capCommand command, the same as "help capCommand".

capCommand forceUnreserve <device address>

Forces the release of a CAP. If cartridges are in the CAP, the reservation changes to "default". If there are no cartridges in the CAP, the reservation changes to "none".

- *<device address>* - specifies the CAP to release in library, rail, column, side, row format.

capCommand {lock | unlock} <device address>

Locks or unlocks a CAP specified by the device address.

- *<device address>* - specifies the CAP to lock/unlock in library, rail, column, side, row format.

cleaning

This family of commands displays and controls cleaning and diagnostic cartridge-related functions within the library. Only customers with the media validation feature should use these commands.

cleaning

Displays help for the cleaning command, the same as "help cleaning".

cleaning list cleaning

Lists all cleaning cartridges in the system cells.

Example:

```
SL8500> cleaning list cleaning
requestId
requestId 9001
Attributes Expired false
Label      CLN0080U
Location   1,1,-52,1,13
Max Usage Count 100
Media Type 9840_Cleaning
Status     ok
Usage Count 0
Object Cartridge cleaning
```

cleaning import <cap device address> [to { 1 | 2 | 3 | 4 | * }]

Imports cleaning and diagnostic cartridges to system cells. Only one import/export operation is allowed at a time. There must be a minimum 9 empty system cells for SL8500 libraries to allow imports.

- *<cap device address>* - specifies the CAP to use for the import operation, in library, rail, column, side, row format.
- **to { 1 | 2 | 3 | 4 | * }** - specifies the rail to import cartridge to if possible (optional)

Example:

```
SL8500> cleaning import 1,2,55,1,0 to 1
requestId
requestId 10101
Message CAP open(ing). Place cartridges to import in CAP, then close CAP.Use
CONTINUE cmd to proceed...
Done
Failure Count 0
Success Count 0
COMPLETED
```

cleaning export <cap device address> cleaning select { 1 | 2 | 3 | 4 | expired }

Exports selected cleaning cartridges. Only one import/export operation is allowed at a time.

- *<cap device address>* - specifies the CAP to use for the export operation, in library, rail, column, side, row format.
- **select { 1 | 2 | 3 | 4 | expired }** - specifies the rail number to export cleaning cartridges from.

Example:

```
SL8500> cleaning export 1,2,55,2,0 cleaning select expired
requestId
requestId 9601
Address      1.4.-52.1.12
Success      Cartridge Exported
Volume Label CLN002CU
Message CAP open(ing). Remove cartridges, then close CAP.Use CONTINUE cmd to
proceed...
Done
Failure Count 0
Success Count 1
COMPLETED
```

cleaning export <cap device address> <cartridge address>

Exports a specific cleaning or diagnostic cartridge to the specified cap. Only one import/export operation is allowed at a time.

- *<cap device address>* - specifies the CAP to use for the export operation, in library, rail, column, side, row format.
- *<cartridge address>* - specifies the location of the cartridge to export in library, rail, column, side, row format. The specified cartridge must be in a system cell and must be either a cleaning or diagnostic cartridge.

Example:

```
SL8500> cleaning export 1,2,55,2,0 1,4,-52,1,12
requestId
requestId 9601
Address      1.4.-52.1.12
```

```

Success      Cartridge Exported
Volume Label CLN002CU
Message CAP open(ing). Remove cartridges, then close CAP.Use CONTINUE cmd to
proceed...
Done
Failure Count 0
Success Count 1
COMPLETED

```

cleaning threshold list

Displays a list of cleaning cartridge types and their warning thresholds. Each cleaning cartridge type has 4 attributes:

- Index - cleaning cartridge type used by the "cleaning threshold set" command
- Media type - the type of cleaning cartridge used
- Maximum usage count - recommended max usage by tape manufacturer
- Warning threshold value - user-defined threshold that determines when a warning status is set for a cleaning cartridge once its usage count reaches that threshold.

Example:

```

SL3000> cleaning threshold list
requestId
requestId 15001
Attributes
Object      Index          1
             Media Type      SgtUltrium1_Cleaning
             Recommend Max Usage 100
             Warning Threshold 0
Attributes
Object      Index          3
             Media Type      T10000_Cleaning
             Recommend Max Usage 50
             Warning Threshold 0

```

cleaning threshold set <warning threshold value> <list index number>

Sets a warning threshold value for a particular cleaning cartridge type.

- *<warning threshold value>* - can be any positive integer up to 1000. A value of 0 indicates no warning threshold.
- *<list index number>* - cleaning cartridge type as specified by the index number from the table listing of the "cleaning threshold list" command.

Example:

```

SL3000> cleaning threshold set 55 11
requestId
requestId 15101
Attributes
Object      Success true
Done
COMPLETED

```

cleaning driveWarning set { on | off }

Sets the drive cleaning warning flag to either on or off.

- **on** - the drive health status will be set to warn if it needs cleaning
- **off** - the drive health status is not affected if the drive needs cleaning

config

This command will either display the current physical library configuration or set library configuration parameters.

config

Displays help for the config command, the same as "help config".

config complexId set {1 - 254}

Sets the complexId used for SDP for just the library in which the command is executed. If more than one library exists in a complex, the complexId must be set individually for each library in the complex.

config complexId set {1 - 254} <library address>

Sets the complexId used for SDP for a remote library. If more than one library exists in a complex, the complexId must be set individually for each library in the complex.

- *<library address>* - specifies the library in library, rail, column, side, row format. For example: 2, 0, 0, 0, 0.

config complexId clear

Clears the complexId number for a library. This command will restart the network stack and cause the SDP ILC IP address to stop responding.

config complexId clear <library address>

Clears the complexId number for a remote library. This command will restart the network stack and cause the SDP ILC IP address to stop responding.

- *<library address>* - specifies the library in library, rail, column, side, row format. For example: 2, 0, 0, 0, 0.

config complexId print

Displays the current complexId for the library in which the command is executed.

config ilc print

Display the ilc status.

config ilc {enable | disable}

Enables or disables the Inter-Library Communications (ILC) LAN. If a disable is requested, the library must first be taken offline using the "accessState offline <device address>" command.

config libraryId print

Displays the current library identifier for this library.

config libraryId set {1 - 10 }

Sets the libraryId with a value from 1-32. The library must be offline for this command.

config print

Displays the current physical library configuration.

config serviceInfo print

Displays the library service information.

config serviceInfo set

Sets service information: contact 'contactName' phone 'phoneNumber' streetAddr 'streetAddress' city 'city' state 'state' country 'country' zip 'zipCode' description 'description data'.

Currently the maximum string length is 31 characters. Each string must be delimited by ' ' (single quotes) to provide the ability to use spaces and other characters.

Example:

```
SL8500> config serviceInfo set city 'Denver' contact 'Andy' country 'USA'
description 'Manager' phone '303 222-4444' state 'CO' streetAddr '1 tape drive'
zip '80027'

requestId
requestId 1512402
Device serviceInfo
Success true
Done
Failure Count 0
Success Count 1
COMPLETED
```

date

This command sets the library date in Greenwich Mean Time (GMT).

date

Displays help for the date command, the same as "help date".

date print

Displays the current system date.

date <MM> / <DD> / <YYYY>

Sets the system date. In a library complex, the library with libraryId = 1 is the master. Change the date on the master library.

- <MM> - two digit month
- <DD> - two digit day
- <YYYY> - four digit year

drive

This command displays information about the drives or executes the drive utilities such as adiEnable, fastLoad, power, and rewindUnload.

drive

Displays help for the drive command, the same as "help drive".

drive adiEnable {on | off | print}

Turns on or off or prints status of drive discovery with ADI. Once enabled, any subsequently added drives will attempt ADI drive discovery. To enable ADI for all ADI capable drives in the library, the library must be rebooted.

drive fastLoad {on | off | print}

Turns on or off or prints the status of the fastLoad feature. FastLoad changes the behavior of drive mounts (move commands). With fastLoad on, the robot will not wait for a complete load of a PUT to a drive, but will go immediately to the next operation. Also changes the behavior of the rewindUnload command to return immediately, not waiting for the drive to unload. The state of the fastLoad applies to all drives.

Note: This command only affects commands issued in the same CLI session where this command was issued.

drive print { <drive address> | * }

Displays summary drive information: location, state, status, type, firmware version, interface type, in use, serial number, state (online/offline), status (ok, warning, or error), and drive vendor.

- *<drive address>* - specifies the drive in library, rail, column, side, row format.
- * - displays drive information for all drives in the library

drive search {on | off} <drive address>

Causes the green LED on the drive tray to blink. Blinking continues until the search off command issued. Used to locate a drive within the library.

- *<drive address>* - specifies the drive in library, rail, column, side, row format.

hwActivation

This command activating certain library features after purchasing a hardware activation permit.

Note: The library must be rebooted when disabling openVolser, dualRobot, partitioning, or redundant electronics.

hwActivation

Displays help for the hwActivation command, same as "help hwActivation".

hwActivation addLicenseFile

Adds a license file. The license file must be named *SL8500_license_config.dsf*. The full path name being */usr/local/SL8500_license_config.dsf*.

hwActivation deleteFile <index>

Deletes the specified installed feature file.

- *<index>* - specifies file number to delete as specified in the library controller hwActivation module database. See "hwActivation listFiles".

hwActivation listFiles

Lists the installed feature files in the library controller hwActivation module database.

hwActivation print

Lists all of the enabled features in the library controller hwActivation module database.

mediaValidation

This command manages the media validation feature.

mediaValidation

Displays help for the mediaValidation command, same as "help mediaValidation"

mediaValidation print { all | poolOnly } { * | @ }

Displays drive locations of the media validation pool.

- **all** - lists all drive slots
- **poolOnly** - lists only drive slots in the media validation pool
- ***** - displays only information for the target library
- **@** - displays information for the entire complex

mediaValidation reservation clear <drive address>

Clears media validation reservation for specified drive.

- **<drive address>** - specifies the drive in library, rail, column, side, row format.

mediaValidation stopValidation <drive address>

Stops a validation currently in progress. Cartridge is returned to source storage cell.

- **<drive address>** - specifies the drive in library, rail, column, side, row format.

network

This command is used to configure and display network configuration for the controller card. For additional information, see the *SL8500 Host Connectivity Guide* on OTN.

network clone [Port 2B IP address] [Port 2A IP address]

Used for redundant electronics configuration. Copies oval all port, routing, and IP policy configurations to side B HBC. IP addresses are replaced with the ones specified in the command for side B. If no port IP address is specified, then they are not set on side B.

network config print

Displays the target library side (A or B) that is set for network commands.

network config side {a | b}

Sets the target library side for network commands.

network config clear

Clears the network configuration. This command stops network connectivity. Reconfiguration requires access to the serial port on the HBC card.

network export

Exports library network configuration file (.lnc) and generates a network configuration script (.scr). It can only be used in cases where no prior network configurations have been set.

network gateway <IP address>

Sets the external network default gateway.

network gateway clear

Clears the external network default gateway.

network import

Imports a library network configuration file (.lnc).

network ip <IP address>

Sets the IP address of port 2B.

network ip address add <IP address> dev {2A | 2B}

Sets the IP address of a particular port.

network ip address del <IP address> dev {2A | 2B}

Removes the IP address of a port.

network ip address show [dev {2A | 2B}]

Displays the current address information for a particular port or both ports if dev is not specified.

network ip link set dev {2A | 2B} {up | down}

Sets the operation status of a port, which controls whether a port can send and receive Ethernet traffic.

- **up** - sets port online
- **down** - sets port offline

network ip policy {enable | disable} dev {2A | 2B}

Enables or disables policy routing for device 2A or 2B.

network ip policy status

Displays policy routing status for devices 2A and 2B.

network ip policy route {add | del} <IP address> dev {2A | 2B}

Adds or deletes a static route to policy for device 2A or 2B.

network ip policy route {add | del} <IP address> via <Gateway IP address> dev {2A | 2B}

Adds or deletes a static route to policy for device 2A or 2B via gateway.

network ip policy route show [dev {2A | 2B}]

Displays policy route information for device 2A or 2B.

network ip route add default via <IP address>

Sets the default gateway routing IP address.

network ip route delete default

Deletes the default gateway routing IP address.

network ip route {add | del} <IP address [/netmask] > dev {1A | 1B | 2A | 2B}

Adds or deletes a static IP (Internet Protocol) routing address for a specified host. This command also enables a user to set the netmask for a particular port.

Example:

```
SL8500>network ip route add 129.80.81.59/24 dev 1B  
COMPLETED
```

network ip route {add | del} <IP address [/netmask] > via <Gateway IP address>

Adds or deletes a static route to a destination network IP gateway address.

network ip route show [dev {2A | 2B}]

Displays the current routing table information or routing table information for a particular port.

network name <host name string>

Sets the host name.

network netmask <netmask>

Sets the external network netmask in xxx.xxx.xxx.xxx form.

network print

Displays the current network configuration for the external Ethernet ports (2A and 2B).

partition

This command displays the current status or disables the partition feature.

partition

Displays help for the partition command, same as "help partition".

partition autoClean set { * | <Partition Id> }

Set auto clean in a specified partition (0, for a non-partitioned library).

partition attribute status { * | <Partition Id> }

Displays the status attributes of a single specified partition or all partitions.

partition disable

Disables partitioning in the library.

partition getCapacity

Displays the capacity values for library or any defined partitions.

partition status

Displays the current partitioning status.

partition setCapacity { <Partition Id> , <Capacity> }

Sets the capacity for the designated partition. Existing partitions not listed in the command will have their capacity set to zero.

Example:

```
SL8500> partition setCapacity 1,200 2,50 3,600
requestId 7601
Done
Failure Count 0
Success Count 1
COMPLETED
```

partition setNonPartitionedHLI

Sets the partition to hli0. If there are any drives in the media validation pool, they must be removed beforehand. If in complex, it sets all the libraries to hli0.

partition set state {online | offline} <Partition Id>

Sets the current state (offline/online) of a specified partition.

reControl

This command controls/switches the redundant electronics and retrieves the library controller redundant electronics statuses.

reControl

Displays help for the reControl command, same as "help reControl".

reControl status [<library address> | *]

Retrieves the redundant electronics status.

- *<library address>* - specifies the library in library, rail, column, side, row format. For example: 2, 0, 0, 0, 0.
- * - retrieves status from all libraries in a complex

snmp

This command configures the Simple Network Management Protocol (SNMP). For detailed information, see the *SNMP Reference Guide* on OTN.

ssh

This command controls configuration for the ssh daemon/server which resides on the HBC. This is the protocol utility which SLC and other various applications use to connect to the library controller.

ssh print

Prints the current ssh daemon protocol settings.

ssh set version1and2

Sets the ssh daemon protocol restriction to v1 and v2. (this is the default). The ssh server is restarted.

ssh set version2

Sets the ssh daemon protocol restriction to v2 only.

time

This command sets the library time in military time notation.

time

Displays help for the time command, same as "help time".

time print

Displays the current system time.

time <HH> : <MM>

Sets the system time. Resolution is within one minute. In a library complex, the library with libraryId = 1 is the master. Change the time on the master library.

- *<HH>* - two digit hour
- *<MM>* - two digit minute

time <HH> : <MM> : <SS>

Sets the system time. Resolution is within one second. In a library complex, the library with libraryId = 1 is the master. Change the time on the master library.

- *<HH>* - two digit hour
- *<MM>* - two digit minute
- *<SS>* - two digit second

traceRoute

This command traces the network route to a specified IP address.

traceRoute <IP Address>

Executes a traceRoute to the IP address specified.

version

This command displays the customer version and the versions of the software for the device(s) requested.

version print [<device address> | *]

Displays the software version of code for a device or all devices.

- *<device address>* - specifies the device in library, rail, column, side, row format.

whereAmi

This command displays the system and logic card information relative to the library and card related to redundant electronics command is being executed.

whereAmi

Displays the information relating to where the command is being issued.

Example:

```
SL8500> whereAmI
Host Name: gulibtst02b
Port 2B IP Address: 172.20.151.24
Library Type: SL8500
HBC side: B
Active side: B
COMPLETED
```

Library Addressing

This appendix explains the addressing schemes used in the SL8500 library. There are two types of software addressing schemes and one external numbering scheme:

- **Internal Firmware** (Library, Rail, Column, Side, Row) used by the firmware and internal communications to represent all devices and locations within the library.
- **HLI-PRC** (LSM, Panel, Row, and Column) used by HLI clients, such as ACSLS and ELS, to represent library locations and components.
- **External hardware** numbering for drive bay locations. This differs from both the internal firmware addressing and HLI-PRC addressing. See "[Tape Drive Addresses](#)" on page B-6 for more information.

Note: In this chapter, left and right refer to viewing the library from the CAP-side (front) unless otherwise specified.

Structural Elements

The addressing of components in the library is based on key structural elements: library walls, slot arrays, LSMs/rails, and columns/panels.

Library Walls, Arrays, and Slots

- Inner walls: consist of 14-slot arrays
- Outer walls: consist of 13-slot arrays with space for the robotic rails

In addition to the 13 and 14-slot arrays, there are arrays:

- In the pass-thru port panels: 8-slot arrays
- Underneath the stop brackets for the service safety door: 8-slot arrays
- On the elevators and pass-thru ports: 4-slot arrays
- At the ends of each HandBot rail: 3-slot arrays (end stops)

Library Storage Module (LSM)

The SL8500 library has four rails. Each of these rails is considered an LSM.

Library Complex HLI Numbering

For the HLI addressing scheme, in a library complex the LSM number increases sequentially right to left with each additional library.

- Library 1 (Home library on right): LSM 0 to 3
- Library 2 (middle library): LSM 4 to 7
- Library 3 (left library): LSM 8 to 11


The pattern continues for up to ten libraries. When adding an additional library to a complex, you should add the library to the left side to prevent renumbering of LSMs within the complex.

It is possible to add libraries to the right of the complex, but it is disruptive. You must re-configure the system, re-number the LSMs, and re-IPL the library.

Figure B–1 shows two examples of three libraries connected with PTPs.

- Example 1 on the left shows the preferred method. Adding another library (C) to the left of the library complex increases the LSM numbering sequentially.
- Example 2 on the right shows the disruptive method. Adding another library (C) to the right of the library complex requires a reconfiguration of LSM numbering.

Figure B–1 Pass-thru Port Planning Example

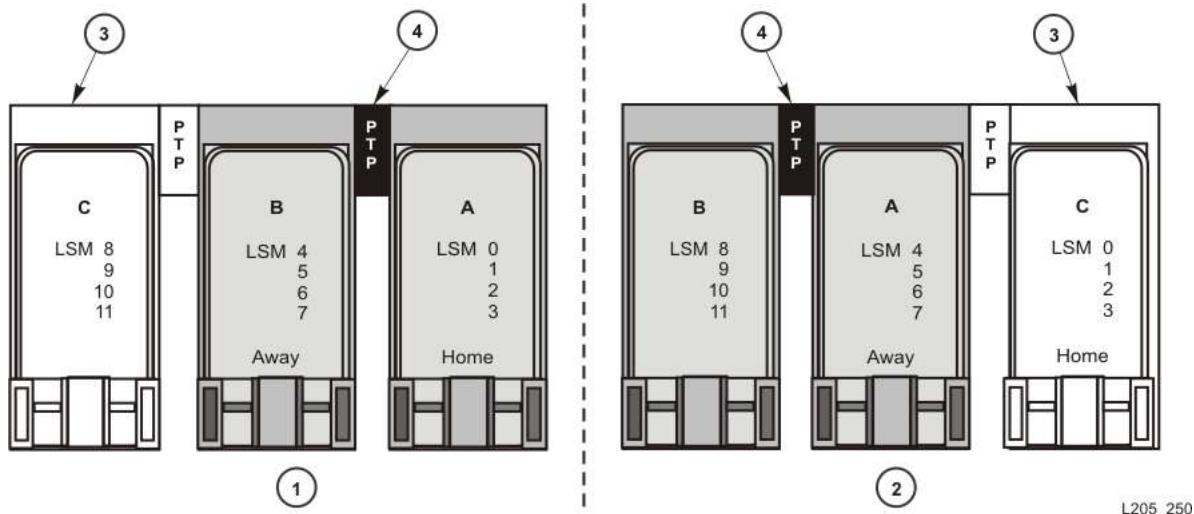

L205_250

1. Preferred, non-disruptive method of installation
2. Disruptive method of installation
3. New library and PTP
4. PTP connecting existing libraries

Panels and Columns


Panels (used in HLI-PRC addressing) and columns (used in firmware addressing) refer to the horizontal location of a component in the library. Special panels/columns include:

- Corners because there is no inner wall
- Pass-thru ports because the top six slots are inaccessible because of the PTPs and because the top cartridge slot (under the port) is reserved as a redundant robotics drop-off slot (two for each rail, one on each side)

Internal Firmware Addressing Scheme

Internal firmware addressing designates physical location using five parameters: Library, Rail, Column, Side, Row (L,R,C,S,W).

- **Library:** The number of the library within a library complex
- **Rail:** Numbered top down from 1 to 4.
- **Column:** The horizontal location of a tape cartridge referenced from the center of the drive bay at the rear of the library forward, where:
 - +1 is just right of the center of the drive bays.
 - -1 is just to the left of center of the drive bays.
 - Column numbering is consecutive—the first columns that contain tape cartridges are +3 and -3 and continue forward to the front access doors.
- **Side:** Indicates the inner and outer walls, left and right robots in a redundant configuration, or left and right CAPs.
 - Walls: Outer wall =1, Inner wall =2
 - Handbots: Left Handbot =1, Right HandBot =2
 - CAPs: Right Cap =1, Left Cap =2
- **Row:** The vertical location of a tape cartridge in an array, consecutively numbered from the top (1) down (13 outer wall and 14 inner wall).

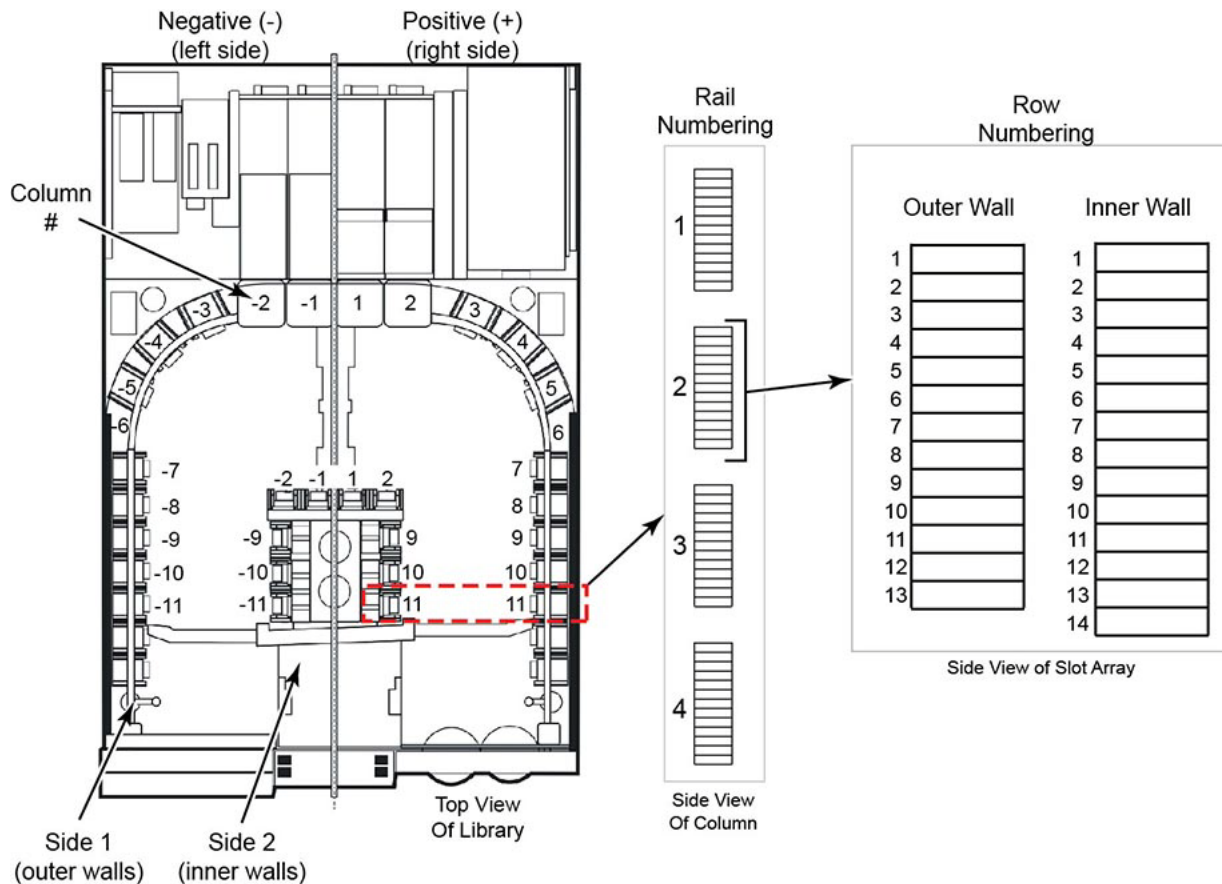
Figure B-2 Internal Firmware Addressing Scheme

L205_213

HLI-PRC

Cartridge locations for HLI-PRC addressing use four parameters: LSM, Panel, Row, and Column.

- LSM:** Each rail is considered a separate library storage module (LSM). Rails are numbered 0 to 3 (from the top down).
 The libraries in a complex are identified by LSM. For example, library one contains LSMs 0-3, library two: LSMs 4-7, library three: LSMs 8-11, and so on (see "[Library Storage Module \(LSM\)](#)" on page B-1).
- Panel:** Indicates the horizontal position in the library. Panels span across the width of the library to include both sides (left and right) and both walls (inner and outer) for each LSM. Panel 0 = CAP. Panel 1 = Drives. Panel 2 to n = Storage slots
- Row:** Is the vertical location of a tape cartridge in the arrays and are consecutively numbered from the top down. Outer walls = 0 to 12. Inner walls = 13 to 26.
- Column:** Indicates the left or right side of the library (as viewed from the front). Left = 0. Right = 1.

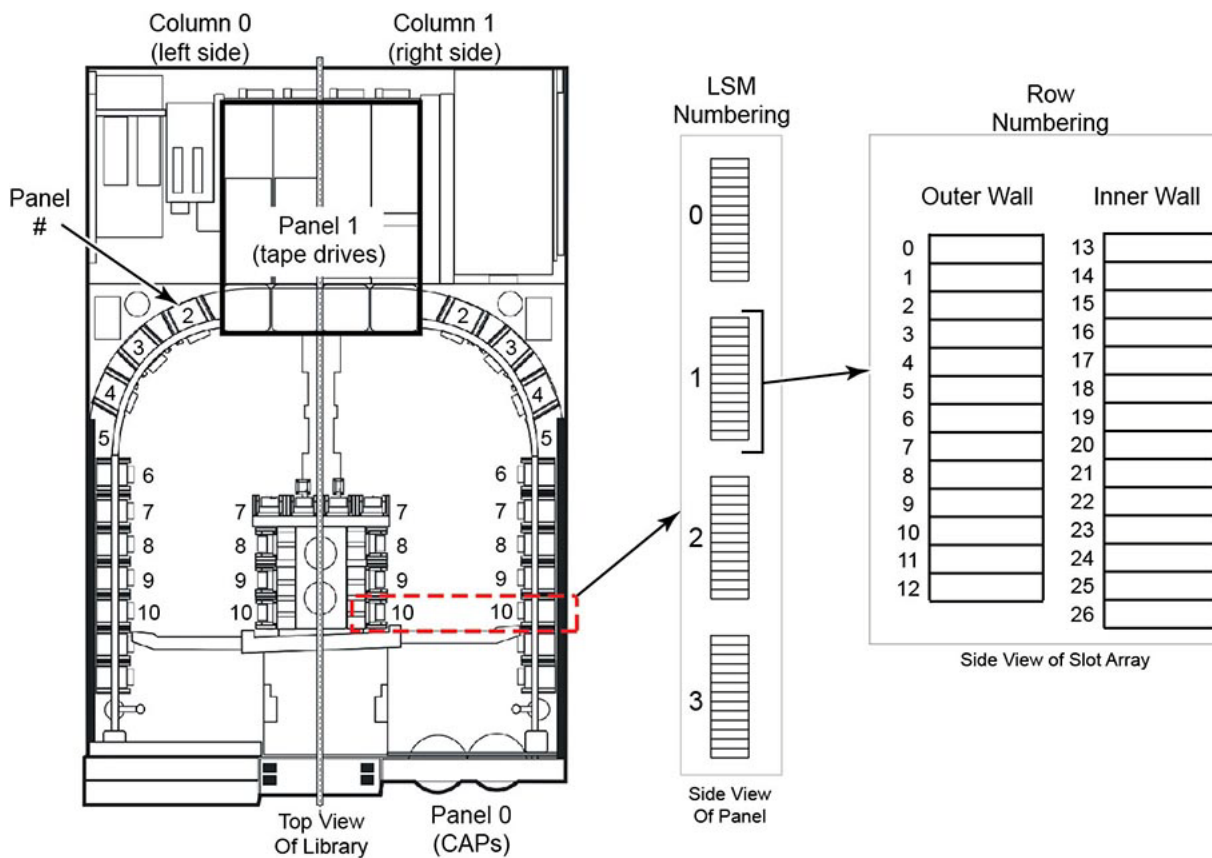Figure B-3 HLI-PRC Addressing Scheme

L205 265

The following lists the panel numbering ranges for various library configurations:

Table B-1 Panel Numbering

Configuration	Panel Numbering						
Base Library	RIM	CIM					
	2 - 7	8 - 10					
One Expansion Module	RIM	SEM	CIM				
	2 - 7	8 - 15	16 - 18				
Two Expansion Modules	RIM	SEM	SEM	CIM			
	2 - 7	8 - 15	16 - 23	24 - 26			
Five Expansion Modules	RIM	SEM	SEM	SEM	SEM	SEM	CIM
	2 - 7	8 - 15	16 - 23	24 - 31	32 - 39	40 - 47	48 - 50

Comparison of the Addressing Schemes

Table B-2 Comparison of Addressing Schemes

Factor	Internal Addressing	HLL-PRC Addressing
Begins with:	1 and uses negative numbers	0 with no negative numbers
Uses:	Library, rail, column, side, and row	LSM, panel, row, and column
Column refers to:	The horizontal location in the library	The left or right side of the library
Row numbering:	Outer walls =1 to13, inner walls =1 to 14	Outer walls = 0 to12, inner walls =13 to 26

Tape Drive Addresses

There are three types of addressing used to define drive location:

- [Hardware Address](#)
- [Internal Firmware Address](#)
- [HLL-PRC Address](#)

Hardware Address

The HBC controller card assigns a physical hardware number from 1 to 64, depending on the location of the drive in the drive array.

The perspective in [Figure B-4](#) is from the drive-side (rear) of the library.

Figure B-4 Physical Hardware Numbering of Tape Drive (viewed from rear of library)

Rail 1	61	62	63	64
	57	58	59	60
	53	54	55	56
	49	50	51	52
Rail 2	45	46	47	48
	41	42	43	44
	37	38	39	40
	33	34	35	36
Rail 3	29	30	31	32
	25	26	27	28
	21	22	23	24
	17	18	19	20
Rail 4	13	14	15	16
	9	10	11	12
	5	6	7	8
	1	2	3	4


L205_273

Internal Firmware Address

For firmware addressing (Library, Rail, Column, Side, Row) a drive is distinguished based on rail, column, and row. The side value is always equal to 1.

The perspective in [Figure B-5](#) is from the CAP-side (front) of the library. For this example, the library number is 1.

Figure B-5 Tape Drive Internal Firmware Addressing (viewed from front of library)

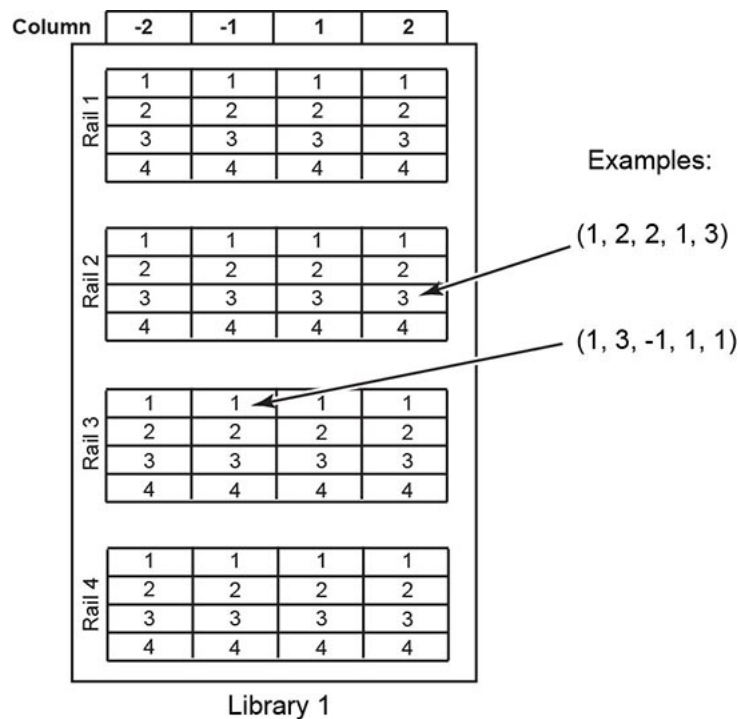

L205_275

HLI-PRC Address

The HLI-PRC (LSM, panel, row, column) distinguishes a drive in a library based on LSM and row. The panel value is always equal to 1 and the column value is always equal to 0.

The perspective in [Figure B-6](#) is from the CAP-side (front) of the library.

Figure B-6 *Tape Drive HLI-PRC Addressing (viewed from front of library)*

Examples:

LSM 0	0	4	8	12
	1	5	9	13
	2	6	10	14
	3	7	11	15

LSM 1	0	4	8	12
	1	5	9	13
	2	6	10	14
	3	7	11	15

(1, 1, 14, 0)

LSM 2	0	4	8	12
	1	5	9	13
	2	6	10	14
	3	7	11	15

(2, 1, 4, 0)

LSM 3	0	4	8	12
	1	5	9	13
	2	6	10	14
	3	7	11	15

L205 274

Drive Numbering Comparison

Figure B-7 shows the three address schemes side by side. The perspective in the figure is from the CAP-side (front) of the library.

Figure B-7 Comparison (viewed from front of library)

[illegible]

L205_276

Internal Firmware Addresses of a Component

Components (such as CAPs, elevators, PTP, and HandBots) have unique addressing rules. Host software is not allowed to address these components directly. For simplicity, only internal firmware addressing of components is covered in this document.

Important internal firmware addressing concepts for components include:

- A **row** value equal to 0 indicates the address is referring to the device, not a slot in the device.
- The **side** value may not directly correlate to inner and outer walls.
- The **column** value of elevators and CAPs depends on the number of storage expansion modules in the library.

Cartridge Access Ports

- **Rail and Row:**
 - When numbering the device, the rail value is 2 and the row value is 0.
 - When numbering a specific slot, the rail refers to the rail adjacent to the CAP magazine (can be values 2-4) and the row is the slot in the CAP magazine (can be values 1-13).
- **Column:** The column value depends on the size of the library. The column value is the number of customer accessible columns plus 3. In a library with no SEMs, there are 11 customer accessible columns, therefore the CAP column value is 14.
- **Side:**
 - Right CAP = side value of 1
 - Left CAP = side value of 2

Example

Firmware address 1, 3, 22, 2, 10: The library value is 1 and the library contains one SEM (so there are 19 customer accessible columns). The CAP is on the left, referring to slot 10 in the CAP magazine adjacent to the third rail from the top.

Pass-thru Mechanisms

- **Rail:** The value (1 to 4) refers to the rail adjacent to the PTP.
- **Column:** Right PTP = column value of +6, left PTP = column value of -6.
- **Side:** The side value is always 1, because the PTPs are on the outer wall.
- **Row:**
 - When numbering the device, the row is 0.
 - When numbering a specific slot, the row is the slot in the PTP (1 or 2).

Example

Firmware address 1, 2, -6, 1, 0: The library value is 1. The PTP is on the left side of the library on the second rail from the top, and the address is referring to the device.

Elevators

- **Rail:** The value is always 0, since the elevators do not correspond to a specific rail.

- **Column:** The value depends on the size of the library. The column value is the number of customer accessible columns plus 2. In a library with no SEMs, there are 19 customer accessible columns, therefore the elevator column value is 13.
- **Side:** The value is always 2, because the elevators are on the inner wall.
- **Row:**
 - When numbering the device, the row is 0.
 - When numbering a specific slot, the row is the slot in the elevator (1-4).

Example

Firmware address **1, 0, 21, 2, 4**: The library value is 1 and the library contains one SEM. The address is referring to the fourth slot in the elevator.

HandBots

- **Rail:** The value (1 to 4) refers to the rail the HandBot is on.
- **Column:** The value is always 0.
- **Side:**
 - If there is only one HandBot per rail, the value is always 1.
 - For redundant HandBot configurations, the left Handbot = 1, and the right HandBot = 2.
- **Row:**
 - When numbering the device, the row is 0.
 - When numbering the specific slot, the row is the slot value (1).

Example

Firmware **1, 1, 0, 2, 0**: The library value is 1. The address is referring to the right HandBot on the top rail.

Controlling Contaminants

This appendix explains controlling contaminants.

Environmental Contaminants

Control over contaminant levels in a computer room is extremely important because tape libraries, tape drives, and tape media are subject to damage from airborne particulates. Most particles smaller than ten microns are not visible to the naked eye under most conditions, but these particles can be the most damaging. As a result, the operating environment must adhere to the following requirements:

- ISO 14644-1 Class 8 Environment.
- The total mass of airborne particulates must be less than or equal to 200 micrograms per cubic meter.
- Severity level G1 per ANSI/ISA 71.04-1985.

Oracle currently requires the ISO 14644-1 standard approved in 1999, but will require any updated standards for ISO 14644-1 as they are approved by the ISO governing body. The ISO 14644-1 standard primarily focuses on the quantity and size of particulates as well as the proper measurement methodology, but does not address the overall mass of the particulates. As a result, the requirement for total mass limitations is also necessary as a computer room or data center could meet the ISO 14644-1 specification, but still damage equipment because of the specific type of particulates in the room. In addition, the ANSI/ISA 71.04-1985 specification addresses gaseous contaminations as some airborne chemicals are more hazardous. All three requirements are consistent with the requirements set by other major tape storage vendors.

Required Air Quality Levels

Particles, gasses and other contaminants may impact the sustained operations of computer hardware. Effects can range from intermittent interference to actual component failures. The computer room must be designed to achieve a high level of cleanliness. Airborne dusts, gasses and vapors must be maintained within defined limits to help minimize their potential impact on the hardware.

Airborne particulate levels must be maintained within the limits of *ISO 14644-1 Class 8 Environment*. This standard defines air quality classes for clean zones based on airborne particulate concentrations. This standard has an order of magnitude less particles than standard air in an office environment. Particles ten microns or smaller are harmful to most data processing hardware because they tend to exist in large numbers, and can easily circumvent many sensitive components' internal air filtration

systems. When computer hardware is exposed to these submicron particles in great numbers they endanger system reliability by posing a threat to moving parts, sensitive contacts and component corrosion.

Excessive concentrations of certain gasses can also accelerate corrosion and cause failure in electronic components. Gaseous contaminants are a particular concern in a computer room both because of the sensitivity of the hardware, and because a proper computer room environment is almost entirely recirculating. Any contaminant threat in the room is compounded by the cyclical nature of the airflow patterns. Levels of exposure that might not be concerning in a well ventilated site repeatedly attack the hardware in a room with recirculating air. The isolation that prevents exposure of the computer room environment to outside influences can also multiply any detrimental influences left unaddressed in the room.

Gasses that are particularly dangerous to electronic components include chlorine compounds, ammonia and its derivatives, oxides of sulfur and petrol hydrocarbons. In the absence of appropriate hardware exposure limits, health exposure limits must be used.

While the following sections will describe some best practices for maintaining an ISO 14644-1 Class 8 Environment in detail, there are some basic precautions that must be adhered to:

- Do not allow food or drink into the area.
- Cardboard, wood, or packing materials must not be stored in the data center clean area.
- Identify a separate area for unpacking new equipment from crates and boxes.
- Do not allow construction or drilling in the data center without first isolating sensitive equipment and any air targeted specifically for the equipment. Construction generates a high level of particulates that exceed ISO 14644-1 Class 8 criteria in a localized area. Dry wall and gypsum are especially damaging to storage equipment.

Contaminant Properties and Sources

Contaminants in the room can take many forms, and can come from numerous sources. Any mechanical process in the room can produce dangerous contaminants or agitate settled contaminants. A particle must meet two basic criteria to be considered a contaminant:

- It must have the physical properties that could potentially cause damage to the hardware.
- It must be able to migrate to areas where it can cause the physical damage.

The only differences between a potential contaminant and an actual contaminant are time and location. Particulate matter is most likely to migrate to areas where it can do damage if it is airborne. For this reason, airborne particulate concentration is a useful measurement in determining the quality of the computer room environment.

Depending on local conditions, particles as big as 1,000 microns can become airborne, but their active life is very short, and they are arrested by most filtration devices.

Submicron particulates are much more dangerous to sensitive computer hardware, because they remain airborne for a much longer period of time, and they are more apt to bypass filters.

Operator Activity

Human movement within the computer space is probably the single greatest source of contamination in an otherwise clean computer room. Normal movement can dislodge tissue fragments, such as dander or hair, or fabric fibers from clothing. The opening and closing of drawers or hardware panels or any metal-on-metal activity can produce metal filings. Simply walking across the floor can agitate settled contamination making it airborne and potentially dangerous.

Hardware Movement

Hardware installation or reconfiguration involves a great deal of subfloor activity, and settled contaminants can very easily be disturbed, forcing them to become airborne in the supply air stream to the room's hardware. This is particularly dangerous if the subfloor deck is unsealed. Unsealed concrete sheds fine dust particles into the airstream, and is susceptible to efflorescence -- mineral salts brought to the surface of the deck through evaporation or hydrostatic pressure.

Outside Air

Inadequately filtered air from outside the controlled environment can introduce innumerable contaminants. Post-filtration contamination in duct work can be dislodged by air flow, and introduced into the hardware environment. This is particularly important in a downward-flow air conditioning system in which the sub-floor void is used as a supply air duct. If the structural deck is contaminated, or if the concrete slab is not sealed, fine particulate matter (such as concrete dust or efflorescence) can be carried directly to the room's hardware.

Stored Items

Storage and handling of unused hardware or supplies can also be a source of contamination. Corrugated cardboard boxes or wooden skids shed fibers when moved or handled. Stored items are not only contamination sources; their handling in the computer room controlled areas can agitate settled contamination already in the room.

Outside Influences

A negatively pressurized environment can allow contaminants from adjoining office areas or the exterior of the building to infiltrate the computer room environment through gaps in the doors or penetrations in the walls. Ammonia and phosphates are often associated with agricultural processes, and numerous chemical agents can be produced in manufacturing areas. If such industries are present in the vicinity of the data center facility, chemical filtration may be necessary. Potential impact from automobile emissions, dusts from local quarries or masonry fabrication facilities or sea mists should also be assessed if relevant.

Cleaning Activity

Inappropriate cleaning practices can also degrade the environment. Many chemicals used in normal or "office" cleaning applications can damage sensitive computer equipment. Potentially hazardous chemicals outlined in the ["Cleaning Procedures and Equipment"](#) on page C-8 section should be avoided. Out-gassing from these products or direct contact with hardware components can cause failure. Certain biocide treatments used in building air handlers are also inappropriate for use in computer rooms either because they contain chemicals, that can degrade components, or because

they are not designed to be used in the airstream of a re-circulating air system. The use of push mops or inadequately filtered vacuums can also stimulate contamination.

It is essential that steps be taken to prevent air contaminants, such as metal particles, atmospheric dust, solvent vapors, corrosive gasses, soot, airborne fibers or salts from entering or being generated within the computer room environment. In the absence of hardware exposure limits, applicable human exposure limits from OSHA, NIOSH or the ACGIH should be used.

Contaminant Effects

Destructive interactions between airborne particulate and electronic instrumentation can occur in numerous ways. The means of interference depends on the time and location of the critical incident, the physical properties of the contaminant and the environment in which the component is placed.

Physical Interference

Hard particles with a tensile strength at least 10% greater than that of the component material can remove material from the surface of the component by grinding action or embedding. Soft particles will not damage the surface of the component, but can collect in patches that can interfere with proper functioning. If these particles are tacky they can collect other particulate matter. Even very small particles can have an impact if they collect on a tacky surface, or agglomerate as the result of electrostatic charge build-up.

Corrosive Failure

Corrosive failure or contact intermittence due to the intrinsic composition of the particles or due to absorption of water vapor and gaseous contaminants by the particles can also cause failures. The chemical composition of the contaminant can be very important. Salts, for instance, can grow in size by absorbing water vapor from the air (nucleating). If a mineral salts deposit exists in a sensitive location, and the environment is sufficiently moist, it can grow to a size where it can physically interfere with a mechanism, or can cause damage by forming salt solutions.

Shorts

Conductive pathways can arise through the accumulation of particles on circuit boards or other components. Many types of particulate are not inherently conductive, but can absorb significant quantities of water in high-moisture environments. Problems caused by electrically conductive particles can range from intermittent malfunctioning to actual damage to components and operational failures.

Thermal Failure

Premature clogging of filtered devices will cause a restriction in air flow that could induce internal overheating and head crashes. Heavy layers of accumulated dust on hardware components can also form an insulative layer that can lead to heat-related failures.

Room Conditions

All surfaces within the controlled zone of the data center should be maintained at a high level of cleanliness. All surfaces should be periodically cleaned by trained

professionals on a regular basis, as outlined in the "[Cleaning Procedures and Equipment](#)" on page C-8 section. Particular attention should be paid to the areas beneath the hardware, and the access floor grid. Contaminants near the air intakes of the hardware can more easily be transferred to areas where they can do damage. Particulate accumulations on the access floor grid can be forced airborne when floor tiles are lifted to gain access to the sub-floor.

The subfloor void in a downward-flow air conditioning system acts as the supply air plenum. This area is pressurized by the air conditioners, and the conditioned air is then introduced into the hardware spaces through perforated floor panels. Thus, all air traveling from the air conditioners to the hardware must first pass through the subfloor void. Inappropriate conditions in the supply air plenum can have a dramatic effect on conditions in the hardware areas.

The subfloor void in a data center is often viewed solely as a convenient place to run cables and pipes. It is important to remember that this is also a duct, and that conditions below the false floor must be maintained at a high level of cleanliness. Contaminant sources can include degrading building materials, operator activity or infiltration from outside the controlled zone. Often particulate deposits are formed where cables or other subfloor items form air dams that allow particulate to settle and accumulate. When these items are moved, the particulate is re-introduced into the supply airstream, where it can be carried directly to hardware.

Damaged or inappropriately protected building materials are often sources of subfloor contamination. Unprotected concrete, masonry block, plaster or gypsum wall-board will deteriorate over time, shedding fine particulate into the air. Corrosion on post-filtration air conditioner surfaces or subfloor items can also be a concern. The subfloor void must be thoroughly and appropriately decontaminated on a regular basis to address these contaminants. Only vacuums equipped with High Efficiency Particulate Air (HEPA) filtration should be used in any decontamination procedure. Inadequately filtered vacuums will not arrest fine particles, passing them through the unit at high speeds, and forcing them airborne.

Unsealed concrete, masonry or other similar materials are subject to continued degradation. The sealants and hardeners normally used during construction are often designed to protect the deck against heavy traffic, or to prepare the deck for the application of flooring materials, and are not meant for the interior surfaces of a supply air plenum. While regular decontaminations will help address loose particulate, the surfaces will still be subject to deterioration over time, or as subfloor activity causes wear. Ideally all of the subfloor surfaces will be appropriately sealed at the time of construction. If this is not the case, special precautions will be necessary to address the surfaces in an on-line room.

It is extremely important that only appropriate materials and methodology are used in the encapsulation process. Inappropriate sealants or procedures can actually degrade the conditions they are meant to improve, impacting hardware operations and reliability. The following precautions should be taken when encapsulating the supply air plenum in an on-line room:

- Manually apply the encapsulant. Spray applications are totally inappropriate in an on-line data center. The spraying process forces the sealant airborne in the supply airstream, and is more likely to encapsulate cables to the deck.
- Use a pigmented encapsulant. The pigmentation makes the encapsulant visible in application, ensuring thorough coverage, and helps in identifying areas that are damaged or exposed over time.

- It must have a high flexibility and low porosity to effectively cover the irregular textures of the subject area, and to minimize moisture migration and water damage.
- The encapsulant must not out-gas any harmful contaminants. Many encapsulants commonly used in industry are highly ammoniated or contain other chemicals that can be harmful to hardware. It is very unlikely that this out-gassing could cause immediate, catastrophic failure, but these chemicals will often contribute to corrosion of contacts, heads or other components.

Effectively encapsulating a subfloor deck in an on-line computer room is a very sensitive and difficult task, but it can be conducted safely if appropriate procedures and materials are used. Avoid using the ceiling void as an open supply or return for the building air system. This area is typically very dirty and difficult to clean. Often the structural surfaces are coated with fibrous fire-proofing, and the ceiling tiles and insulation are also subject to shedding. Even before filtration, this is an unnecessary exposure that can adversely affect environmental conditions in the room. It is also important that the ceiling void does not become pressurized, as this will force dirty air into the computer room. Columns or cable chases with penetrations in both the subfloor and ceiling void can lead to ceiling void pressurization.

Exposure Points

All potential exposure points in the data center should be addressed to minimize potential influences from outside the controlled zone. Positive pressurization of the computer rooms will help limit contaminant infiltration, but it is also important to minimize any breaches in the room perimeter. To ensure the environment is maintained correctly, the following should be considered:

- All doors should fit snugly in their frames.
- Gaskets and sweeps can be used to address any gaps.
- Automatic doors should be avoided in areas where they can be accidentally triggered. An alternate means of control would be to remotely locate a door trigger so that personnel pushing carts can open the doors easily. In highly sensitive areas, or where the data center is exposed to undesirable conditions, it may be advisable to design and install personnel traps. Double sets of doors with a buffer between can help limit direct exposure to outside conditions.
- Seal all penetrations between the data center and adjacent areas.
- Avoid sharing a computer room ceiling or subfloor plenum with loosely controlled adjacent areas.

Filtration

Filtration is an effective means of addressing airborne particulate in a controlled environment. It is important that all air handlers serving the data center are adequately filtered to ensure appropriate conditions are maintained within the room. In-room process cooling is the recommended method of controlling the room environment. The in-room process coolers re-circulate room air. Air from the hardware areas is passed through the units where it is filtered and cooled, and then introduced into the subfloor plenum. The plenum is pressurized, and the conditioned air is forced into the room, through perforated tiles, which then travels back to the air conditioner for reconditioning. The airflow patterns and design associated with a typical computer room air handler have a much higher rate of air change than typical comfort cooling air conditioners so air is filtered much more often than in an office environment.

Proper filtration can capture a great deal of particulates. The filters installed in the in-room, re-circulating air conditioners should have a minimum efficiency of 40% (Atmospheric Dust-Spot Efficiency, ASHRAE Standard 52.1). Low-grade pre-filters should be installed to help prolong the life of the more expensive primary filters.

Any air being introduced into the computer room controlled zone, for ventilation or positive pressurization, should first pass through high efficiency filtration. Ideally, air from sources outside the building should be filtered using High Efficiency Particulate Air (HEPA) filtration rated at 99.97% efficiency (DOP Efficiency MILSTD-282) or greater. The expensive high efficiency filters should be protected by multiple layers of pre-filters that are changed on a more frequent basis. Low-grade pre-filters, 20% ASHRAE atmospheric dust-spot efficiency, should be the primary line of defense. The next filter bank should consist of pleated or bag type filters with efficiencies between 60% and 80% ASHRAE atmospheric dust-spot efficiency.

Table C-1 Filtration Percentages

ASHRAE 52-76 Dust spot efficiency percentage	3.0 micron	1.0 micron	0.3 micron
25-30%	80%	20%	<5%
60-65%	93%	50%	20%
80-85%	99%	90%	50%
90%	>99%	92%	60%
DOP 95%	N/A	>99%	95%

Low efficiency filters are almost totally ineffective at removing sub-micron particulates from the air. It is also important that the filters used are properly sized for the air handlers. Gaps around the filter panels can allow air to bypass the filter as it passes through the air conditioner. Any gaps or openings should be filled using appropriate materials, such as stainless steel panels or custom filter assemblies.

Positive Pressurization and Ventilation

A designed introduction of air from outside the computer room system will be necessary in order to accommodate positive pressurization and ventilation requirements. The data center should be designed to achieve positive pressurization in relation to more loosely controlled surrounding areas. Positive pressurization of the more sensitive areas is an effective means of controlling contaminant infiltration through any minor breaches in the room perimeter. Positive pressure systems are designed to apply outward air forces to doorways and other access points within the data processing center in order to minimize contaminant infiltration of the computer room. Only a minimal amount of air should be introduced into the controlled environment. In data centers with multiple rooms, the most sensitive areas should be the most highly pressurized. It is, however, extremely important that the air being used to positively pressurize the room does not adversely affect the environmental conditions in the room. It is essential that any air introduction from outside the computer room is adequately filtered and conditioned to ensure that it is within acceptable parameters. These parameters can be looser than the goal conditions for the room since the air introduction should be minimal. A precise determination of acceptable limits should be based on the amount of air being introduced and the potential impact on the environment of the data center.

Because a closed-loop, re-circulating air conditioning system is used in most data centers, it will be necessary to introduce a minimal amount of air to meet the

ventilation requirements of the room occupants. Data center areas normally have a very low human population density; thus the air required for ventilation will be minimal. In most cases, the air needed to achieve positive pressurization will likely exceed that needed to accommodate the room occupants. Normally, outside air quantities of less than 5% make-up air should be sufficient (ASHRAE Handbook: Applications, Chapter 17). A volume of 15 CFM outside air per occupant or workstation should sufficiently accommodate the ventilation needs of the room.

Cleaning Procedures and Equipment

Even a perfectly designed data center requires continued maintenance. Data centers containing design flaws or compromises may require extensive efforts to maintain conditions within desired limits. Hardware performance is an important factor contributing to the need for a high level of cleanliness in the data center.

Operator awareness is another consideration. Maintaining a fairly high level of cleanliness will raise the level of occupant awareness with respect to special requirements and restrictions while in the data center. Occupants or visitors to the data center will hold the controlled environment in high regard and are more likely to act appropriately. Any environment that is maintained to a fairly high level of cleanliness and is kept in a neat and well organized fashion will also command respect from the room's inhabitants and visitors. When potential clients visit the room they will interpret the overall appearance of the room as a reflection of an overall commitment to excellence and quality. An effective cleaning schedule must consist of specially designed short-term and long-term actions. These can be summarized as follows:

Table C-2 Cleaning Schedule for Data Center

Frequency	Task
Daily Actions	Rubbish removal
Weekly Actions	Access floor maintenance (vacuum and damp mop)
Quarterly Actions	Hardware decontamination
	Room surface decontamination
Bi-Annual Actions	Subfloor void decontamination
	Air conditioner decontamination (as necessary)

Daily Tasks

This statement of work focuses on the removal of each day's discarded trash and rubbish from the room. In addition, daily floor vacuuming may be required in Print Rooms or rooms with a considerable amount of operator activity.

Weekly Tasks

This statement of work focuses on the maintenance of the access floor system. During the week, the access floor becomes soiled with dust accumulations and blemishes. The entire access floor should be vacuumed and damp mopped. All vacuums used in the data center, for any purpose, should be equipped with High Efficiency Particulate Air (HEPA) filtration. Inadequately filtered equipment cannot arrest smaller particles, but rather simply agitates them, degrading the environment they were meant to improve. It is also important that mop-heads and dust wipes are of appropriate non-shedding designs.

Cleaning solutions used within the data center must not pose a threat to the hardware. Solutions that could potentially damage hardware include products that are:

- Ammoniated
- Chlorine-based
- Phosphate-based
- Bleach enriched
- Petro-chemical based
- Floor strippers or re-conditioners.

It is also important that the recommended concentrations are used, as even an appropriate agent in an inappropriate concentration can be potentially damaging. The solution should be maintained in good condition throughout the project, and excessive applications should be avoided.

Quarterly Tasks

The quarterly statement of work involves a much more detailed and comprehensive decontamination schedule and should only be conducted by experienced computer room contamination-control professionals. These actions should be performed three to four times per year, based on the levels of activity and contamination present. All room surfaces should be thoroughly decontaminated including cupboards, ledges, racks, shelves and support equipment. High ledges and light fixtures and generally accessible areas should be treated or vacuumed as appropriate. Vertical surfaces including windows, glass partitions, doors, etc. should be thoroughly treated. Special dust cloths that are impregnated with a particle absorbent material are to be used in the surface decontamination process. Do not use generic dust rags or fabric cloths to perform these activities. Do not use any chemicals, waxes or solvents during these activities.

Settled contamination should be removed from all exterior hardware surfaces including horizontal and vertical surfaces. The unit's air inlet and outlet grilles should be treated as well. Do not wipe the unit's control surfaces as these areas can be decontaminated by the use of lightly compressed air. Special care should also be taken when cleaning keyboards and life-safety controls. Specially treated dust wipes should be used to treat all hardware surfaces. Monitors should be treated with optical cleansers and static-free cloths. No Electro-Static Discharge (ESD) dissipative chemicals should be used on the computer hardware, since these agents are caustic and harmful to most sensitive hardware. The computer hardware is sufficiently designed to permit electrostatic dissipation thus no further treatments are required. After all of the hardware and room surfaces have been thoroughly decontaminated, the access floor should be HEPA vacuumed and damp mopped as detailed in the Weekly Actions.

Biennial Tasks

The subfloor void should be decontaminated every 18 months to 24 months based on the conditions of the plenum surfaces and the degree of contaminant accumulation. Over the course of the year, the subfloor void undergoes a considerable amount of activity that creates new contamination accumulations. Although the weekly above floor cleaning activities will greatly reduce the subfloor dust accumulations, a certain amount of surface dirt will migrate into the subfloor void. It is important to maintain the subfloor to a high degree of cleanliness since this area acts as the hardware's supply air plenum. It is best to perform the subfloor decontamination treatment in a

short time frame to reduce cross contamination. The personnel performing this operation should be fully trained to assess cable connectivity and priority. Each exposed area of the subfloor void should be individually inspected and assessed for possible cable handling and movement. All twist-in and plug-in connections should be checked and fully engaged before cable movement. All subfloor activities must be conducted with proper consideration for air distribution and floor loading. In an effort to maintain access floor integrity and proper psychrometric conditions, the number of floor tiles removed from the floor system should be carefully managed. In most cases, each work crew should have no more than 24 square feet (six tiles) of open access flooring at any one time. The access floor's supporting grid system should also be thoroughly decontaminated, first by vacuuming the loose debris and then by damp-sponging the accumulated residue. Rubber gaskets, if present, as the metal framework that makes up the grid system should be removed from the grid work and cleaned with a damp sponge as well. Any unusual conditions, such as damaged floor suspension, floor tiles, cables and surfaces, within the floor void should be noted and reported.

Activity and Processes

Isolation of the data center is an integral factor in maintaining appropriate conditions. All unnecessary activity should be avoided in the data center, and access should be limited to necessary personnel only. Periodic activity, such as tours, should be limited, and traffic should be restricted to away from the hardware so as to avoid accidental contact. All personnel working in the room, including temporary employees and janitorial personnel, should be trained in the most basic sensitivities of the hardware so as to avoid unnecessary exposure. The controlled areas of the data center should be thoroughly isolated from contaminant producing activities. Ideally, print rooms, check sorting rooms, command centers or other areas with high levels of mechanical or human activity should have no direct exposure to the data center. Paths to and from these areas should not necessitate traffic through the main data center areas.

Glossary

2N

A PDU that supplies power to the redundant AC power grid and the third and fourth accessory racks. *See also* [N+1](#) and [2N+1](#).

2N+1

Two PDUs for AC redundancy. Each PDU has extra DC power supplies for N+1 redundancy for each PDU.

ACS

See [Automated Cartridge System \(ACS\)](#).

ADI

Automation drive interface.

AEM

See [access expansion module](#).

access expansion module

Essentially a very large CAP, with all the characteristics of a CAP, such as online/offline state, ability to be shared by partitions, and so on. The cartridge slots in the AEM cannot be used for long-term cartridge storage.

access door

A door on either side of the front facade through which service personnel can enter the library. Optional CAPs are attached to the right access door.

active cell

A storage cell that can be used for cartridge storage.

active storage region

A rectangular area of storage cells that can be used for cartridge storage.

activated capacity

The number of storage cells the library is activated to use. This cannot exceed the installed capacity.

Automated Cartridge System (ACS)

A group of libraries connected with pass-thru ports.

audit

An inventory of cartridge locations in all areas of the library, including the slots in the storage and reserved areas. Audits occur when:

- The library initializes at power-on.
- After either one or both access doors are opened and closed without activating the service safety door.
- A physical audit request is made through SLConsole.

Also see [host audit](#), [physical audit](#), [security audit](#), [verified audit](#) and [virtual audit](#).

away library

The SL8500 library that is always located on the left side of a [home library](#), as viewed from the front. The away library does not supply power to, control, or recover the pass-thru port.

base module

Provides the entry level offering for an SL3000 library. Consists of a single frame and centralizes the infrastructure for all other modules in the library. This module includes the power supplies, robotic units, electronics control module, cartridge access port, storage slots, tape drives, and operator controls.

bar code line scan camera

A component of the robot that is used for cartridge identification and position calibration.

bulk load

Manually loading cartridges into the library, for example, during library installation.

CAP

See [cartridge access port \(CAP\)](#).

CDS

Control data set.

CEM

See [cartridge expansion module](#).

CLI

Command line interface.

capacity

The storage capacity of the library. See also [activated capacity](#) and [installed capacity](#).

cartridge

A container holding magnetic tape that can be processed without separating the tape from the container. The library uses data, diagnostic, and cleaning cartridges.

cartridge access port (CAP)

A bi-directional port built into the door panel of the library which provides for the manual entry or automatic ejection of data or cleaning cartridges. *Same as* import/export mail slot in SCSI and open system libraries.

cartridge bias

Left or right justification of a cartridge within a storage cell, CAP, or tape drive.

cartridge expansion module

An optional module for the library that provides additional cartridge slot capacity and growth.

cartridge proximity detector

A component that determines if a cell is empty or contains an unlabeled cartridge during a label reading error recovery procedure. *Same as* empty cell detector.

cell

The location in the library in which a tape cartridge is stored. *Same as* slot.

cell array

An array that holds multiple cartridges when not in use.

cleaning cartridge

A tape cartridge that contains special material to clean the tape path in a transport or drive.

cold swap

To remove and replace a system component (typically one such as a logic board that has no redundant backup) after system operations have been stopped and system power has been disabled. *Contrast with* [hot swap](#).

control data set

Data set used by the host software to control the functions of the automated library. Also called a library database.

customer interface module

The front module of the library at which you have access to the touch screen operator panel and service personnel have access to the library and service bay.

DEM

See [drive expansion module \(DEM\)](#).

dWWN

See [dynamic WWN](#).

data cartridge

A term used to distinguish a cartridge onto which a tape drive may write data from a cartridge used for cleaning or diagnostic purposes.

diagnostic cartridge

A data cartridge used for diagnostic routines.

data path

The path where data is transferred between the host and tape drives.

drive and electronics module

The module in an library that houses the electronics control module, power distribution units (PDUs), power supplies, accessory racks and equipment, and tape drives for the library.

drive array assembly

An array that is installed in the drive and electronics module for mounting tape drive tray assemblies. The drive and electronics module holds up to four array assemblies, and each array holds up to 16 tape drive tray assemblies.

drive bay

A partitioned section of the tape drive array assembly that holds one tape drive tray assembly.

drive bay address

A two-digit integer (01–64) that represents the physical locations into which drive tray assemblies are inserted.

drive expansion module (DEM)

A module that allows further expansion of tape drives.

drop-off cells

Cells used to hold a cartridge if a robot failure that occurs while a cartridge is in the robot hand.

Dual TCP/IP

Provides two separate host connections between the host software (ACSL or HSC) and the library controller.

dynamic WWN

When enabled, dWWN assigns names to library drive slots rather than devices. When a drive is replaced, the new drive receives the same name as the one it replaced, thereby eliminating the need for system re-configuration. dWWN assigns names to individual tape drive slots rather than devices

ECM

See [electronics control module](#).

ELS

See [Enterprise Library Software](#).

ESCON

See [Enterprise Systems Connection \(ESCON\)](#).

EPO

See [emergency power-off \(EPO\)](#).

eject

See [export](#).

electronics control module

A module that includes the HBK card, HBC/HBCR card and HBT card. The assembly that:

- Processes commands from a host system
- Coordinates the activities of robots, elevators, pass-thru ports, and tape drives. Monitors status inputs from sensors and switches

elevator

The device that transports cartridges vertically. The SL8500 library features two elevators that provide vertical pass-thru operations between library storage modules within the same library.

emergency power-off (EPO)

(1) A safety scheme that allows a “power down” of a subsystem or a system as a whole instead of powering it down component-by-component.

(2) A safety switch on a system or in a data center that allows a user to immediately power down a system or a data center power supply by cutting off the external source power.

enter

See [import](#).

Enterprise Library Software

The software products that automate tape operations for mainframe users.

Enterprise Systems Connection (ESCON)

An optical fiber serial interface which supports half duplex data transfers.

environmental monitors

A collective term for the sensors that track temperatures, fan speeds, and the status of various other mechanism within a library.

Ethernet

A local-area, packet-switched network technology. Ethernet is a 10- or 100-megabytes-per-second LAN.

export

The action in which the library places a cartridge into the cartridge access port so that the operator can remove the cartridge from the library. *Same as eject.*

FCP

See [Fiber Channel Protocol \(FCP\)](#).

FICON

See [fibre connection \(FICON\)](#).

FRU

Field replaceable unit.

failover

The act of moving to a secondary or redundant path when the primary path fails. Also, in ACSLS HA, failing over to the standby ACSLS server.

Fibre Channel

A bidirectional, full-duplex, point-to-point, serial data channel structured for high performance capacity. The Fibre Channel is an interconnection of multiple communication ports, called N_Ports. These N_Ports are interconnected by a switching network, called a fabric, to a point-to-point link, or an arbitrated loop.

Fibre Channel is a generalized transport mechanism with no protocol of its own. A Fibre Channel does not have a native input/output command set, but can transport existing Upper Level Protocols (ULP) such as SCSI and IPI.

Fibre Channel operates at speeds of 100 MB per second (full speed), 50 MB per second (half speed), 25 MB (quarter speed), or 12.5 MB (eighth speed). Fibre Channel operates over distances of up to 100 m over copper media or up to 10 km over optical links.

Fiber Channel Protocol (FCP)

A transport protocol (similar to TCP used in IP networks) which predominantly transports SCSI commands over Fibre Channel networks.

ibre connection (FICON)

An IBM FC 4 protocol that extends the capabilities of ESCON. Used to map either ESCON or parallel channel-to-control-unit cabling infrastructure and protocol onto standard FC services and infrastructure.S/390-based channel architecture that provides up to 256 channels in a single connection, each having a capacity of 100 MB per second.

front controller module

The module that houses the controller for the elevators, CAPs, turntables, and safety barrier.

front facade

The external portion of the customer interface module, between the access doors, that holds the:

- Membrane keypad
- Product logos
- Optional touch screen operator control panel

get

An activity in which a robot obtains a cartridge from a cell or drive.

gripper

- (1) The portion of the hand assembly that grasps the cartridge.
- (2) The part of the hand assembly that grasps and holds a cartridge during transport.

HLI/PRC

Host Library Interface/Panel Row Column

hand assembly

A part of the library robot whose function is to grasp cartridges and move them between storage cells and drives. A camera on the hand assembly reads cartridge volume labels.

home library

The library that provides power, signal, and control lines to the [pass-thru port \(PTP\)](#) mechanisms. This is the library on the right as viewed from the front. The home library supplies power and communication to the PTP.

host audit

The process of updating the cartridge vol-ids and locations (collected by a [security audit](#)) in a host CDS. This audit is initiated by a host command.

hot swap

Removal and replacement of a system component while system power remains on and system operations continue. *Contrast with* cold swap. *Contrast with* hot-pluggable. *Same as* online servicing.

hot-pluggable

The capability that allows an Oracle service representative to replace a system component while power to the system is maintained. This feature allows hardware maintenance actions and hardware upgrades to proceed without disrupting subsystem availability. *Contrast with* [hot swap](#).

import

The process of placing a cartridge into the cartridge access port so that the library can insert it into a storage cell.

inactive cell

A storage cell that is explicitly deactivated and cannot be used for cartridge storage.

installed capacity

The number of storage cells physically present in the library.

interlock switch

A switch that disconnects power to library mechanisms, excluding tape drives, when the front door is opened.

keypad interface

See membrane keypad.

LCM

See [Library Content Manager \(LCM\)](#).

LTO

See [linear tape open format \(LTO\)](#).

LUN

See [logical unit number](#).

library complex

Two or more SL8500 libraries attached to each other with [pass-thru port \(PTP\)](#). *Same as* ACS for ACSLS and HSC.

library controller (LC)

The HBC/HBCR card within the library that controls operations and communicates with the operator panel.

Library Content Manager (LCM)

Software that provides content management for mainframe automated tape environments. Works with host software component, virtual storage manager and your tape management system.

library operator panel

See [touch screen operator control panel](#).

library storage module (LSM)

Library component connected to other LSMs in a library complex with a pass-thru port. Same as an SL8500 rail.

linear tape open format (LTO)

A set of tape data format standards created to enable data interchange among different LTO Ultrium tape drive vendors. These standards allow data cartridges to be shared.

logical library

A virtual representation of a physical library. *Same as* virtual library partition.

logical unit number

A unique identifier for a physical storage allocation. A LUN could reference an entire RAID set, a single hard disk or partition, or multiple disks or partitions. Unlike a physical LUN, the virtual LUN does not map to a specific device or allocation of storage space but a virtualized space that can be created in excess of the actual physical space available.

magazine

A removable array that holds cartridges and is placed into the cartridge access port (CAP).

master pass-thru port

The side of a pass-thru port (PTP) that contains the electronics that control the actions of the PTP. See also [standby pass-thru port](#).

membrane keypad

A keypad mounted on the front facade used to monitor the status of the library and to operate the CAPs.

Multi TCP/IP

Using TCP/IP connections to multiple libraries to provide redundant communication paths between the host software (ACSLs or HSC) and an SL8500 [library complex](#).

MIR

Media Information Region (MIR). A kind of map or directory of the location of user data on the physical media. This capability allows the drive to optimize access to user data, saving vital time to data access. The MIR data on an encrypted tape is not encrypted.

N+1

A power configuration that provides AC power and redundant DC power by adding a second DC power supply to each DC bus. See also [2N](#).

online replacement

Replacement or service of a module while the library remains operational. The service person may be required to power off the module before removing or replacing it. *Same as* [hot swap](#).

operator panel

See [touch screen operator control panel](#).

orphaned cartridge

A cartridge in a partitioned library that is located in an unallocated cell or drive (that is, a cell or drive not allocated to any defined partition). Cartridges may become orphaned when partition boundaries are changed, partitions are deleted, or cartridges are manually moved to unallocated or inaccessible cells.

PDU

See [power distribution unit \(PDU\)](#).

PEM

See [power distribution unit \(PDU\)](#).

PLI

See [primary library interface \(PLI\)](#).

PTP

See [pass-thru port \(PTP\)](#).

parking expansion module

An additional module available for the SL3000 library that allows a redundant robot to be parked in it.

pass-thru port (PTP)

An electro-mechanical device that allow one library storage module to pass a cartridge to another adjacent library storage module in the same complex. A [library complex](#) is a series of libraries connected with pass-thru ports. SL8500 libraries are joined together by four PTPs because there are four rails. See also [home library](#) and [away library](#).

physical audit

Physical audits occur when the robots:

- Scan the cartridge locations in the library
- Verify the volumes
- Update the library control card inventory
- Set the status of the cartridge location to true

physical library

A physically present library as opposed to a [logical library](#).

power distribution unit (PDU)

A device for the distribution of AC line power from one inlet to multiple outlets. Multiple PDUs provide higher availability because the power continues if one PDU (or its alternating current source if the PDUs use separate AC sources) loses power.

primary library interface (PLI)

The communication path between the operator panel and the library controller.

put

An activity in which a robot places a cartridge into a cell or drive.

RE

See [Redundant Electronics \(RE\)](#).

rail

(1) That portion of the upper robot track assembly that provides power and communication to the robot. (2) All of the cartridge slots and drives accessible through a rail.

rail assembly

The mechanism on which the robot travels between cartridge arrays and tape drives.

reach mechanism

A component of the robot that moves the gripper to get or put a cartridge at a designated location.

real tape drive (RTD)

The physical transport attached to the LSM. The transport has a data path to a VTSS and may also have a data path to MVS or to another VTSS.

Redundant Electronics (RE)

A feature that provides failover protection in enterprise libraries. RE uses a two sets of library controller cards. At any given time, one set is active and the other set is standby. The active library controller can failover to the standby in response to a command from ACSLS or the SLConsole. Automatic failover can be initiated by the library if a library card failure.

robot

A mechanism that moves horizontally along a track to transport tape cartridges to and from other locations in the library.

robotics interface module

The module containing the curved rails and [pass-thru port \(PTP\)](#) assemblies.

SSL

See [Secure Sockets Layer \(SSL\)](#).

security audit

The process of reading and storing in library memory the vol-ids and locations of all cartridges in the library. *See also* [host audit](#).

Secure Sockets Layer (SSL)

A cryptographic protocol that provides communication security. The communication path between the PLI and the remote operator console occurs through SSL.

selected cell

A storage cell that cannot currently be used for cartridge storage, but will be made active automatically by the library controller when activated capacity is increased.

service area

An area between the access doors of the customer interface module and the safety barrier. In the service area, a redundant or inoperable robot can be stored for service and other mechanisms can be repaired or replaced.

service safety door

A motor-driven barrier that lowers and raises. This door separates the service areas of the front interface assembly from the rest of the library. The SSD allows service personnel to safely repair or replace library mechanisms while the front access door is opened and closed., without interference with most library operations.

slot

Same as cell.

standby pass-thru port

The side of a pass-thru port (PTP) that operates in response to actions initiated by the master side of the PTP. *See also* [master pass-thru port](#).

TTI

See [tape transport interface \(TTI\)](#).

tape cartridge

A container holding magnetic tape that can be processed without separating the tape from the container. The library uses data, diagnostic, and cleaning cartridges. These cartridges are not interchangeable.

tape drive

An electromechanical device that moves magnetic tape and includes mechanisms for writing and reading data to and from the tape.

tape drive tray assembly

The mechanical structure that houses a tape drive, fan assembly, power and logic cards, cables, and connectors for data and logic cables. *Same as* drive tray assembly.

tape storage area

The area in the library where cartridges are stored.

tape transport interface (TTI)

An interface to control and monitor tape movement.

touch screen operator control panel

A flat-panel display with a touch screen interface and a panel mount computer. This feature is attached to the front of the library.

track

The horizontal path upon which a robot travels.

track drive mechanism

The component that moves the robot along the track between the cell arrays, CAPs, and tape drives.

vol-id

Volume ID assigned to a cartridge. Same as [VOLSER](#).

VOLSER

Volume serial number. Same as [vol-id](#).

VSM

See [virtual storage manager \(VSM\)](#).

VTCS

See [virtual tape control system \(VTCS\)](#).

VTD

See [virtual tape drive \(VTD\)](#).

VTSS

See [virtual tape storage subsystem \(VTSS\)](#).

vacancy plate

A plate that covers an unused bay, such as a drive bay or power supply bay.

verified audit

Verified audits are invoked from the SLConsole and actually validate the status of a specific cartridge slot or range of slots.

virtual audit

Virtual audits are invoked from the SLConsole and only display the cartridge inventory in the console screen (either local or remote).

virtual storage manager (VSM)

A storage solution that virtualizes volumes and transports in the buffer of a virtual tape storage subsystem to improve media and transport use.

virtual tape control system (VTCS)

The primary host code that controls activity and information about VTSSs, VTVs, RTDs, and MVCs.

virtual tape drive (VTD)

An emulation of a physical transport in the VTSS that looks like a physical tape transport to MVS. The data written to a VTD is really being written to DASD. The VTSS has 64 VTDs that do virtual mounts of VTVs.

virtual tape storage subsystem (VTSS)

The DASD buffer containing virtual volumes (VTVs) and virtual drives (VTDs). The VTSS is a STK RAID 6 hardware device with microcode that enables transport emulation. The RAID device can read and write “tape” data from/to disk, and can read and write the data from/to an RTD.

virtual tape volume (VTV)

A portion of the DASD buffer that appears to the operating system as a real tape volume. Data is written to and read from the VTV, and the VTV can be migrated to and recalled from real tape.

WWN

See [World Wide Name](#).

wrist

A mechanism in the robot assembly that allows the robot to access the outer and inner storage walls.

World Wide Name

A 64-bit address that uniquely identifies each individual device and vendor, much like the MAC address of an Ethernet interface. Each port on a Fibre Channel network must have a its own WWN. The WWN is not just a physical hardware address. It also serves as the logical address of a node on the SAN. The SAN configuration changes if any of the attached hardware changes. If a device fails and is replaced, the WWN of the node changes, forcing reconfiguration of the SAN. There are three World wide Names reserved for each drive bay: Node, Port A, and Port B.

A

activated features

- capacity, 4-1
- display current, 3-3
- files, 3-1
- partitioning, 5-1
- redundant electronics, 6-1

active capacity, 4-1

- configuration, 4-1
- HLI hosts, 4-2
- icon meaning, 4-2
- library complex, 4-3
- reports, 4-3
- single library, 4-3

addressing

- CAPs, B-9
- elevators, B-9
- HandBots, B-10
- HLI-PRC, B-4
- internal firmware, B-3
- library complex, B-1
- PTPs, B-9
- scheme comparison, B-6
- tape drives, B-6

arrays

- locating the cartridges, B-4

audience, xiii

audits

- audit indicator, 7-8
- description, 7-8
- full library, 7-9
- main access door and, 7-9
- physical, 7-9
- range of cells, 7-9
- verified, 7-10

auto enter mode, 8-1

automated mode

- determining library state, 15-1
- returning the library to, 7-8

automated mode (library)

- determine, 15-1

C

capacity

activation, 4-1

- configuration, 4-1
- HLI hosts, 4-2
- icon meaning, 4-2
- library complex, 4-3
- non-partitioned library, 4-2
- single library, 4-3

CAPs

- addressing, B-9
- bringing online, 8-2
- closing, 8-3
- display properties, 8-2
- display status, 8-2
- display summary information, 8-2
- inserting cartridges, 10-4
- library partitions, 5-2
- manual mode, 8-1
- modes, 8-1
- overview, 8-1
- reservations, 5-2
- self-test, 8-3, 9-4
- taking offline, 8-2

cartridges

- addressing, B-4
- display information, 10-2
- ejects, 10-5
- enters, 10-4
- exterior cleaning, 10-7
- handling, 10-7
- inserting in a cell or drive, 10-7
- inserting in the CAP, 10-4
- inspecting, 10-7
- list, 10-2
- locate by address, 10-3
- locate by VOLID, 10-2
- locating by address, 10-2
- locating by VOLID, 10-2
- mounting, 15-5
- move by VOLID, 10-3
- move from specified location, 10-3
- orphaned, 4-2
- recovery moves, 10-3
- storing, 10-8
- unlabeled, 10-1

cautions

- lubrication, 15-3

- moving robot
 - leaving objects inside, 15-3
 - mechanical stop, 15-3
 - position, 15-3
 - reentering cleaning cartridge, 10-1
 - solvents for cleaning a cartridge, 10-7
- cells
 - locations in a library, B-4
- cleaning cartridges, 10-1

D

- database, 2-3
- delete
 - hardware activation, 3-3
- device status
 - listing codes, 14-6
- diagnostic cartridges
 - description, 10-6
 - exporting, 10-6
 - importing, 10-6
 - library self-tests and, 7-6
 - management tasks, 10-6
- diagnostic moves (robot)
 - controlling, 12-6
 - defining, 12-4
 - description, 12-3
 - managing definitions, 12-5
 - monitoring, 12-6
 - pool address range, 12-3
 - random access order, 12-4
 - robot selection, 12-3
 - saving, 12-5
 - sequential access order, 12-4
 - starting, 12-5
 - target address range, 12-3
- diagnostic support files, 14-1
- disruptive installation, 13-1
- documentation, 1-1
- download
 - hardware activation, 3-2
- drive
 - addressing, B-6
- drive cleaning
 - description, 9-1
- drive controller, 7-4
- Drive Events Report, 9-3
- Drive Media Events Report, 9-3
- drive trays
 - status, 9-2
- drive VOP
 - displaying for T10000, 9-2
- drives
 - bringing online, 9-4
 - display drive properties, 9-2
 - display drive summary information, 9-2
 - display status, 9-2
 - LED status, 9-2
 - mounting a cartridge, 15-5
 - network data, 9-2

- power on and off, 15-5
- states, 9-4
- taking offline, 9-4

E

- eject operations, 10-5
- elevator
 - status of, 13-2
 - summary information, 13-2
- elevators
 - addressing, B-9
- emergency robotics stop
 - usage, 15-2
- enter operations, 10-4
- entering the library, 15-3
- event monitors
 - description, 14-3
 - display, 14-5
 - display multiple, 14-5
 - spool data to a file, 14-5
 - tasks, 14-6
- exiting the library, 15-4

F

- firmware
 - addressing
 - CAPs, B-9
 - elevators, B-9
 - HandBots, B-10
 - PTPs, B-9

G

- General Events Statistics Report, 7-4
- GUI
 - screen layout, 2-2

H

- HandBot
 - initialization, 12-2
- HandBots
 - addressing, B-10
- hardware activation
 - delete, 3-3
 - download, 3-2
 - Feature Audit Log, 3-3
 - file type, 3-1
 - install, 3-2
 - legacy files, 3-1
 - overview, 3-1
- hardware activation file
 - display current, 3-3
- HLI interface
 - displaying port status, 7-3
- HLI-PRC
 - description, B-4
- host interfaces
 - HLI. See HLI interface., 7-3

I

- initialization
 - library sequence, 12-2
- inner walls, B-1
- install
 - hardware activation file, 3-2
- internal addresses
 - description, B-3

K

- key
 - maintenance, 15-1
 - opening the front access doors, 15-3

L

- library
 - capacities, cartridge tapes, B-1
 - determining not in automated mode, 15-1
 - entering the library, 15-3
 - entry precautions, 15-3
 - exiting, 15-4
 - mounting a cartridge, 15-5
 - partitions
 - CAP operations, 5-6
 - placing in manual mode, 7-7
 - placing online, 7-8
 - power off, 15-4, 15-5
 - returning to automated mode, 7-8
- library complex
 - addressing, B-1
 - displaying status, 7-3
 - locating cartridges, 10-2
 - properties, 7-4
- library configuration
 - display, 7-4
- library controller, 2-3
 - display redundant electronics, 6-3
 - log in to alternate, 6-2
 - properties, 7-4
- library events, 14-3
- library firmware upgrades, 7-2
 - activate, 7-3
 - download, 7-2
- library partitions
 - and hosts, 5-2
 - CAP reservations, 5-2
 - deleting, 5-4
 - orphaned cartridges in, 5-3
- library reboot, 7-7
- library reports
 - displaying, 7-4
 - overview, 2-3
 - saving data to a file, SL Console report tasks, 7-4
 - searching, 7-4
- library self-tests, 7-6
 - performing, 7-6
- library status, 2-2
 - display, 7-3

- local operator panel
 - entering data, 2-8
 - factory alignment, 2-9
 - logging in, 2-8
 - overview, 2-8
 - re-calibrating, 2-9
 - virtual keypad, 2-8
- log snapshot file
 - generating process, 7-5
 - transfer process, 7-6
- login IDs, 2-4
- logs
 - Feature Audit Log, 3-3

M

- main access door
 - audits and, 7-9
 - automated mode and, 15-1
- maintenance key, 15-1
- manual CAP, 8-1
- manual mode
 - determining library not in automated mode, 15-1
 - entering the library, 15-3
 - exiting the library, 15-4
 - mounting a cartridge, 15-5
 - moving the robot, 15-2
 - physical restrictions, 15-1
 - placing the library in manual mode, 7-7
 - returning the library to automated mode, 7-8
- manual operations
 - safety precautions, 15-1
 - general, 15-1
 - tasks, 15-1
- MIB file
 - described, 14-1
 - transfer process, 7-5

N

- nondisruptive installation, advantages, 13-1
- numbering
 - cartridge cell locations, B-4
 - tape drives, B-6

O

- Oracle Technical Network, xiii
- orphaned cartridges, 4-2
 - partitioned libraries and, 5-3
- OTN, xiii
- outer walls, B-1

P

- partitioning, 5-1
- partitions
 - overview, 5-1
- pass-thru ports
 - addressing, B-9
- Pass-thru Ports (PTPs)

- configuration, 13-1
- disruptive installation, 13-1
- locating cartridges, 10-2
- nondisruptive installation, 13-1
- passwords
 - activation, 2-4
 - modifying, 2-4
- placing the library in manual mode, 7-7
- port bonding, 7-3
- ports
 - status, 7-3
- power
 - off, 15-5
 - switches, 15-4
- power supplies
 - monitoring tasks, 7-5
 - status of, 7-5
 - summary information, 7-5
- PTP
 - properties, 13-2
 - status of, 13-2

R

- reboot
 - library, 7-7
- recovery moves, 10-3
- redundant electronics
 - manual switch, 6-4
 - tasks, 6-3
- report
 - capacity activated, 4-3
 - orphaned cartridges, 4-3
- reports
 - cartridge summary, 10-2
 - cartridge table, 10-2
 - drive events, 9-3
 - feature audit log, 3-3
 - overview, 2-3
 - types, 2-4
- resources, 1-1
- restrictions, library interior, 15-1
- result codes
 - listing, 14-6
- returning the library to automated mode, 7-8
- robot
 - addressing, B-10
 - display status of, 12-2
 - display summary information, 12-2
 - monitoring tasks, 12-2
 - moving manually, 15-2
 - properties, 12-2
 - self-test, 12-3
 - varying offline, 12-2
 - varying online, 12-2

S

- safety door
 - monitoring tasks, 12-1

- operation of, 15-6
- properties, 12-1
- summary information, 12-1
- safety precautions, 15-1
 - general, 15-1
- self-tests
 - CAP, 8-3
 - drive, 9-4
 - library, 7-6
 - robot, 12-3
- SL Console
 - activation password, 2-4
 - communications failures, 7-1
 - first-time access, 2-4
 - logging off, 2-5
 - login ID, 2-4
 - modifying passwords, 2-4
 - security, 2-4
 - user ID, 2-4
- SL Console reports
 - Drive Events, 9-3
 - Drive Media Events, 9-3
 - General Events, 7-4
- SLConsole
 - downloading, 2-1
 - help navigation, 2-3
 - help system, 2-3
 - local operator panel, 2-8
 - media pack, 2-1
 - modes, 2-1
 - modifying table layout, 2-3
 - overview, 2-1
 - reports, 2-3
 - screen display, 2-2
 - standalone, 2-7
 - synchronize data, 2-3
 - web-launched, 2-5
- SNMP
 - transfer the library MIB file, 7-5
- standalone SL Console
 - logging in, 2-8
- standalone SLConsole
 - description, 2-7
 - requirements, 2-7
 - security, 2-7
 - updating, 2-7
- status alerts
 - clearing, 7-6
 - displaying, 7-3

T

- tape drives
 - addressing, B-6
- transferring the log snapshot file, 7-6
- troubleshooting, 14-2

U

- User ID

types, 2-4

V

vary the library offline, 7-7

vary the library online, 7-8

VOP

displaying for T10000 drives, 9-2

W

warnings

entering the library procedures, 15-3

exiting the LSM, 15-3

Web-launched SL Console

logging in using an icon, 2-7

web-launched SLConsole

client requirements, 2-5

installing, 2-5

log in, 2-6

overview, 2-5

security, 2-5

updating, 2-5

